


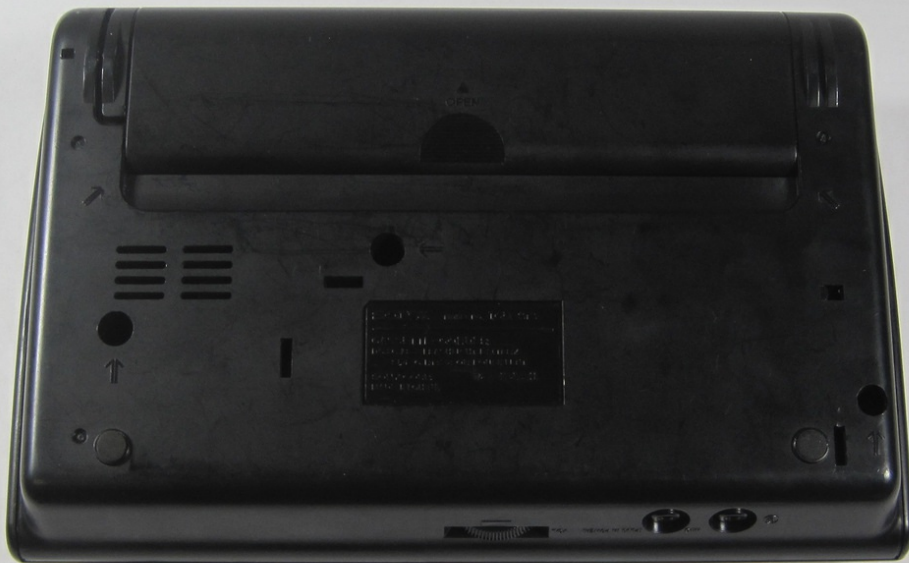

Sony TCM-919 Cassette-Corder Batteries Replacement

This guide aims to provide instruction for battery removal and replacement for the Sony TCM-919 Cassette-Corder.

Written By: Marygayle Martin



INTRODUCTION

This guide teaches Sony TCM-919 owners how to properly replace the batteries required for this device. This guide benefits those who need help properly replacing batteries or those whose devices might not power up.



PARTS:

- [C Batteries](#) (4)
-

Step 1 — Batteries



- Turn the device around so that the back cover is facing upward.

Step 2



- Use your thumbs to press firmly down and then push the battery door cover open.

Step 3 — Replace Batteries



- Open the battery door and remove any dead batteries.
- Insert new batteries as indicated by the instructional image within the battery compartment.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 03:27:13 AM.