



Xbox 360 S Wi-Fi Board Replacement

Written By: David Hodson



INTRODUCTION

A prerequisite to removing the left panel.

TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Wi-Fi Board



- Remove the single T10 Torx screw holding in the wireless card.
- Pull the Wi-Fi Board out of the console.

To reassemble your device, follow these instructions in reverse order.