



HTC One Mini LCD Display Replacement

Guide to replace LCD Screen of HTC One Mini.

Written By: Chris Jose



INTRODUCTION

Use this guide to successfully remove your HTC One Mini's front speaker grill and then remove your LCD Screen so that it may be replaced.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [iOpener](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — iOpener Heating




- Use the iOpener to melt the glue off of the top and bottom speaker grills.

Step 2 — Remove Speaker Grills



- Use the blue plastic opening tool to pry and remove the bottom speaker grill.

Step 3 — Remove Screw

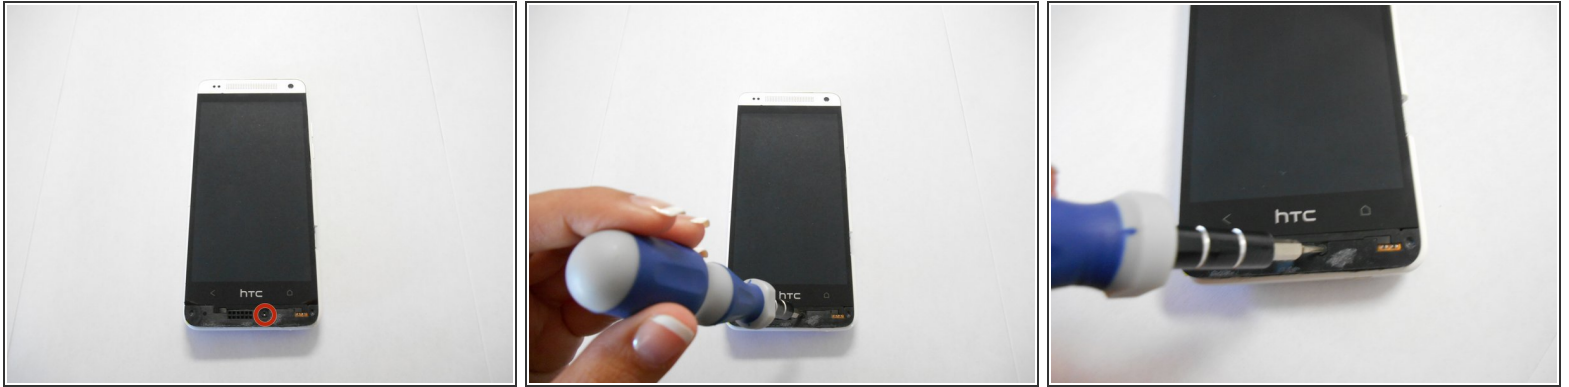

- Remove the screw under speaker grill using a T6 Torx screwdriver.

Step 4




- Wedge the plastic opening tool between the screen and the edge of the case.
- Use force to pry and separate the rear panel.

Step 5 — Separate Rear Case




- Separate the rear panel from the phone.

Step 6

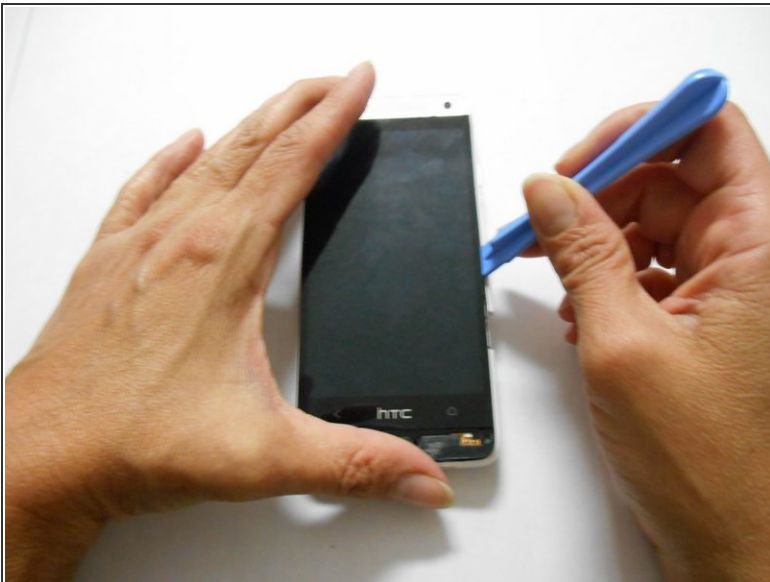

- Using the plastic opening tool, pry on the screen to separate it from the adhesive holding it.

Step 7 — Separate LCD Screen

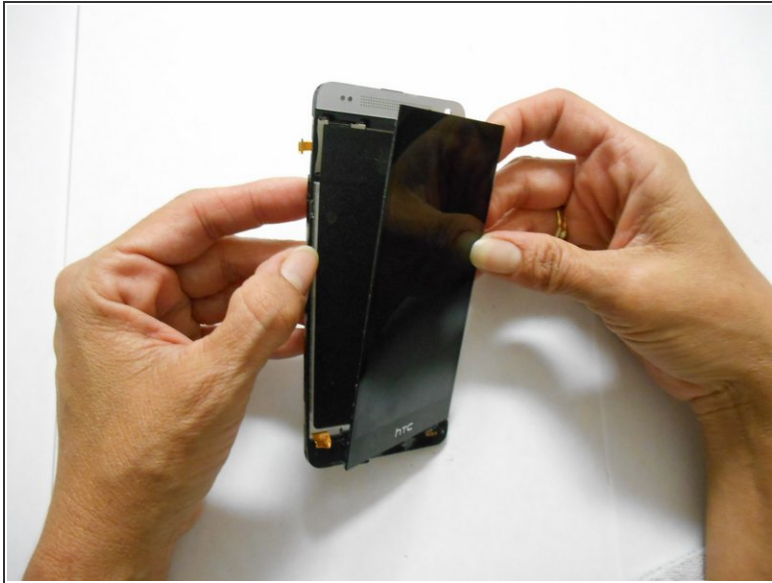

- After you have used the opening tool to pry, use some force to separate the LCD screen from the glue.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-23 07:58:50 AM.