



LG Optimus L9 P769 Speaker Replacement

If the phone has any audio distortion or does not produce any sound the speaker component may need to be replaced. See Prerequisite of Battery Replacement

Written By: Mekia Edwards



Step 1 — Unscrew The Bottom



- Remove the three screws from the bottom of the phone to unscrew the speaker.

Step 2 — Remove Speaker



- Place a prying tool between the speaker and the phone.
- Gently lift the speaker out of the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-14 05:16:51 AM.