



Nook HD+ Battery Replacement

This guide tells you how to replace the battery on the Nook HD+.

Written By: Elijah Gonsalves




INTRODUCTION

This guide tells you how to replace the battery on the Nook HD+ from Barnes & Noble.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T4 Torx Screwdriver](#) (1)
 - [Polyurethane Glue](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Remove the front frame

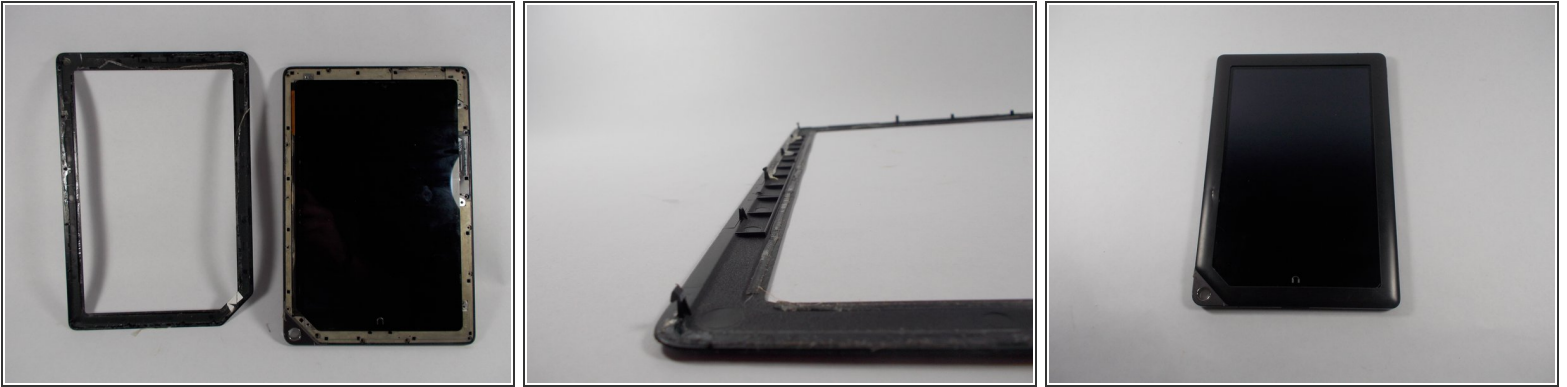

- Wedge the plastic opening piece underneath the bottom left hand corner of the front frame. Pry the frame off of the Nook.

Step 2 — Remove the screws




- Remove every visible screw tying the chassis to the bottom frame using the T-4 attachment for the screwdriver in the iFixit screwdriver kit.

Step 3 — Remove the chassis



- Carefully remove center chassis from bottom frame.

Step 4 — Detach battery

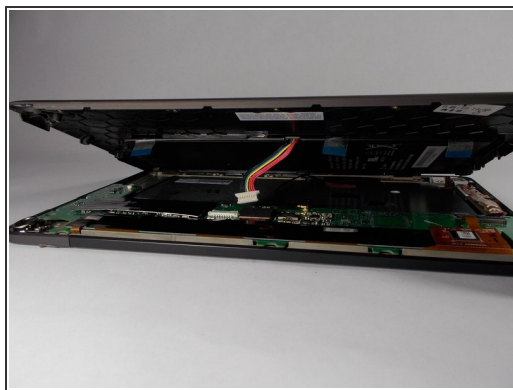

- Detach the battery ribbon from the motherboard.

Step 5 — Remove the battery



- Pry battery off of bottom frame using plastic opening tool.

Step 6 — Place new battery



- Apply glue to the bottom side of new battery. Re-insert new battery onto bottom frame and allow to dry. Follow steps in reverse to put nook back together.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-09 01:57:36 PM.

