



Honeywell HY-204 Rotation Motor Replacement

Replace a faulty or broken rotation motor.

Written By: Armando Jacob Espinoza



INTRODUCTION

This guide will walk you through the steps to remove your rotation motor. Though disassembly is simple, it is a difficult process to put back together because you have to solder wires or use a wire connector to reattach a new rotation motor.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Flush Wire Cutter](#) (1)
- [Soldering Station](#) (1)



PARTS:

- [TY-50 Synchronous Motor](#) (1)
-

Step 1 — Rotation Motor



- Lay fan on the ground and use your fingers peel the three feet off the bottom of the fan.

Step 2



- Remove the three 12mm screws using the Phillips #0 Screwdriver.

Step 3



- Remove the two 10mm screws using the Phillips #0 Screwdriver.

Step 4



- Move the rotation motor left and right to reveal the screw connecting it to the fan.
- Remove the 18mm screw from the side of the motor using the Phillips #0 Screwdriver.

Step 5



- Using the wire cutters, sever the wires connecting the rotation motor to the fan.
- ☑ To put back together you will need to resolder or use wire connectors to reattach motor.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-14 09:00:55 PM.