



Connect Four Electronic Handheld Battery Compartment Replacement

This guide will show you how to remove the battery casing so that you can access the battery compartment.

Written By: Kamaryn



INTRODUCTION

You will need to access the battery compartment before you can change the battery or remove the larger back casing. To remove the battery casing, you will need a Phillips head screwdriver.

TOOLS:

- [Small Phillips Head Screwdriver](#) (1)
-

Step 1 — Ensure the device is off.



- Make sure the Connect Four Electronic Handheld is off. There is no off button, so you will need to let it shut off automatically.

Step 2 — Removing the battery casing.



- Take a Phillips head screwdriver and remove the (9.1mm length) #2 screw in the middle of the battery casing.
- Slide the cover off and remove the battery.

To reassemble your device, follow these instructions in reverse order.