



# Acer Iconia B1-711 Back Cover Replacement

Acer Iconia B1-711 Back Cover Replacement

Written By: ZFix



---

## INTRODUCTION

How to remove the Back / Rear cover to replace it.

[Please SUBSCRIBE to my channel ツ](#)


[video: <http://youtu.be/8-djJ2aXa60>]

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover

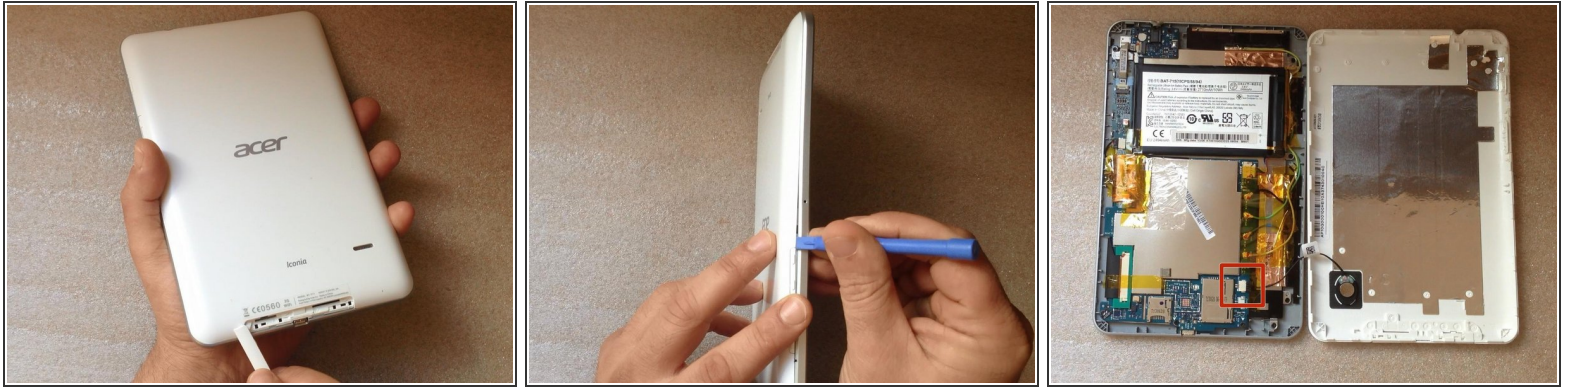

- Switch-off the tablet.
  - Remove any SIM and/or Memory Card.
  - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.

## Step 2



- Before doing anything, disconnect the battery.

To reassemble your device, follow these instructions in reverse order.