



# Acer Iconia B1-711 Microphone Replacement

Acer Iconia B1-711 Microphone Replacement

Written By: ZFix



---

## INTRODUCTION

Follow this manual if you want to change a not working microphone.

[Please SUBSCRIBE to my channel ツ](#)


[video: <https://www.youtube.com/watch?v=8-djJ2aXa60>]

---

### TOOLS:

- [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-


## Step 1 — Back Cover

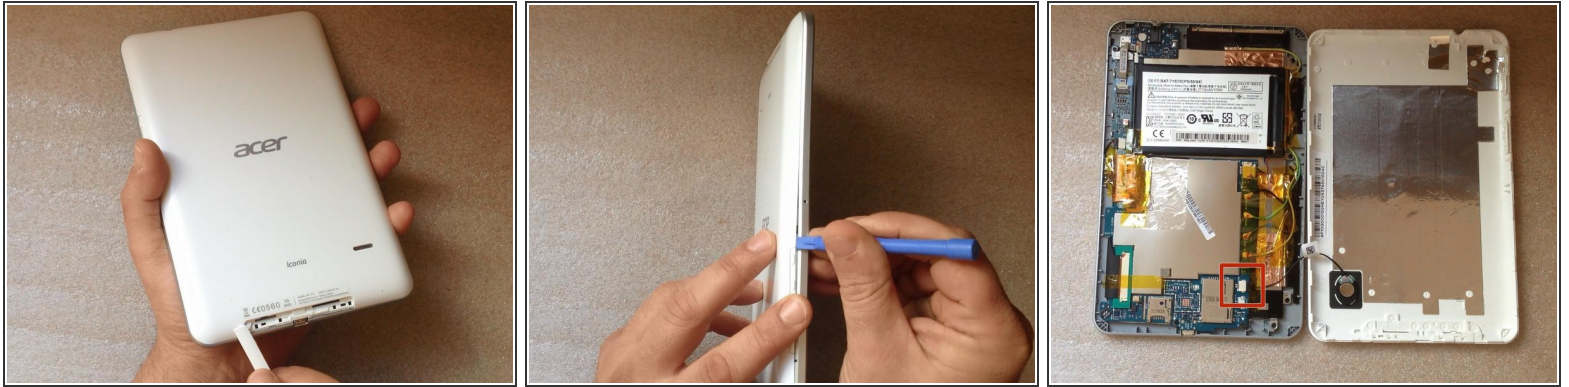

- Switch-off the tablet.
  - Remove any SIM and/or Memory Card.
  - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.

## Step 2



 Before doing anything, disconnect the battery.

 [Please SUBSCRIBE to my channel](#) ツ

## Step 3 — Microphone



- Remove the tape from the microphone.
- Disconnect the Microphone wires and remove the Microphone.

 [Please SUBSCRIBE to my channel](#) ツ

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 04:29:02 AM.

---