




# Sun King Solo Solar Lantern Device Seals Replacement

A guide to help you through replacing the seals protecting your Sun King Solo Solar Lantern

Written By: Josef Simek

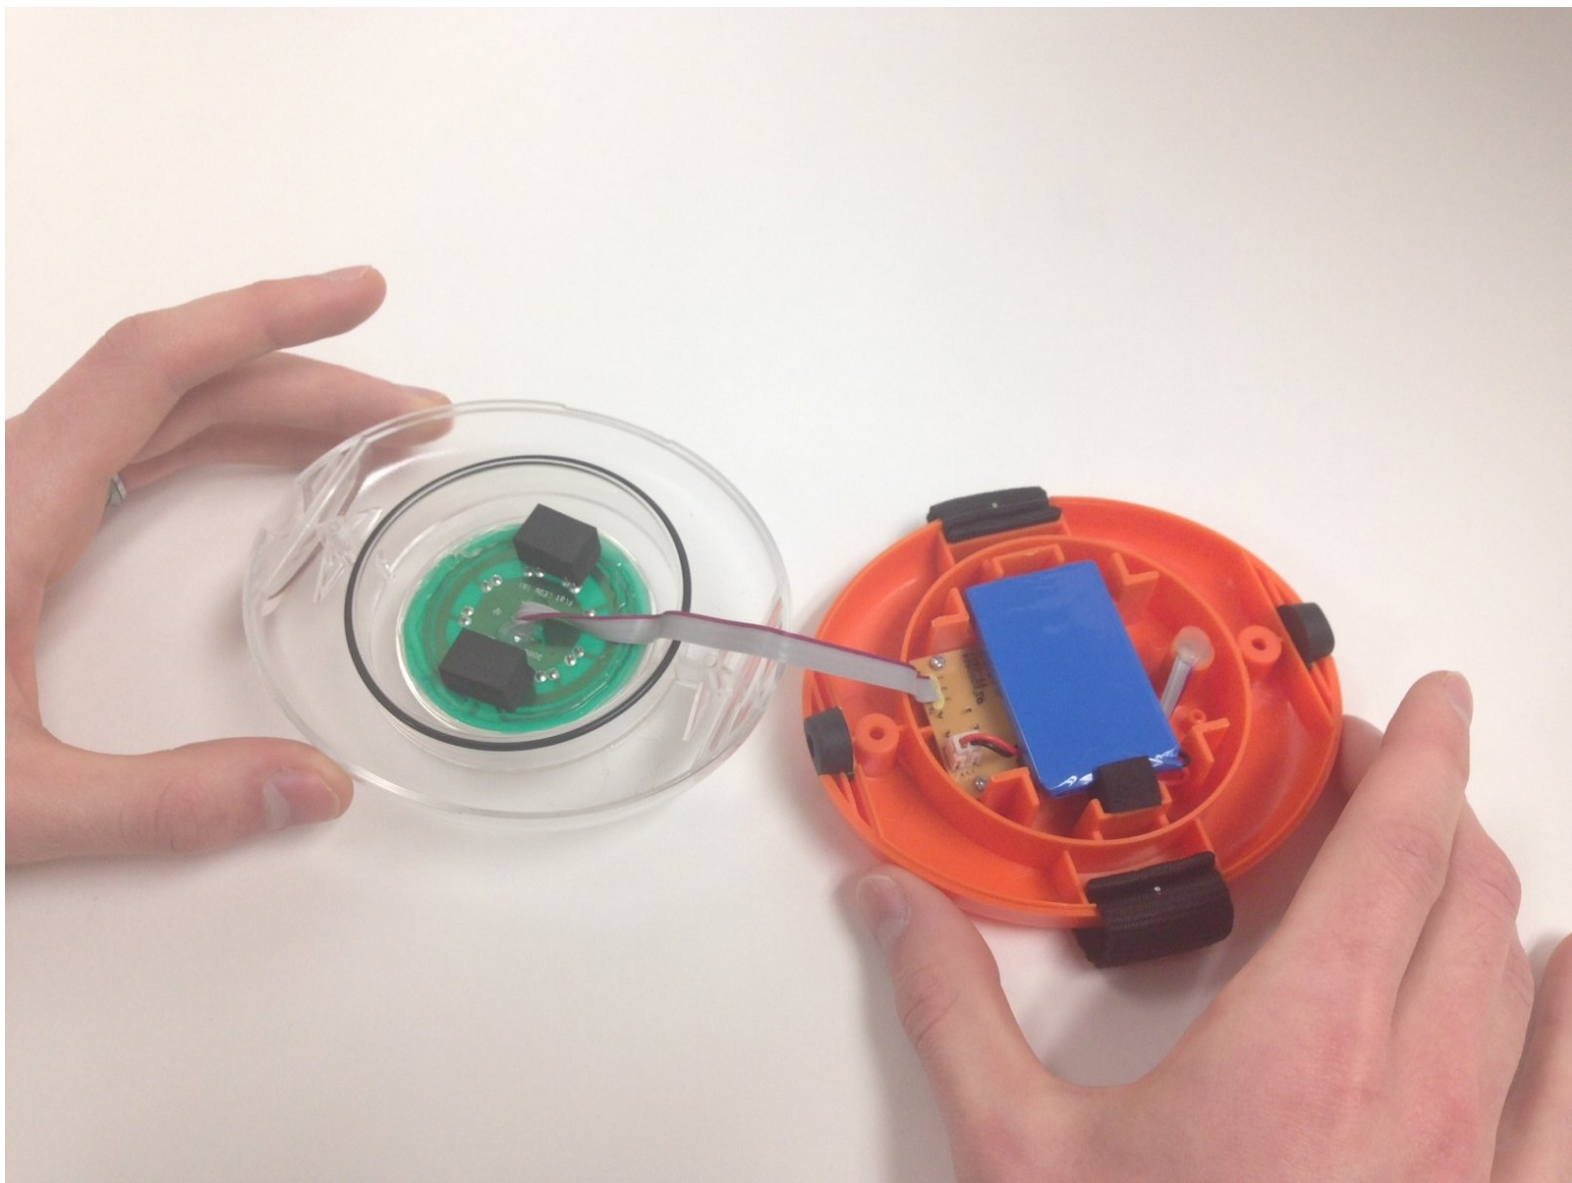

---

## INTRODUCTION

Use this guide to replace the seals on your device to prevent damages to the internal components.

---

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Locate and Remove the Screws




- Place the lamp *LED side down* on a clean workspace.
- Remove the screws holding the casing together using a Phillips #1 Screwdriver.

## Step 2 — Separate the Device

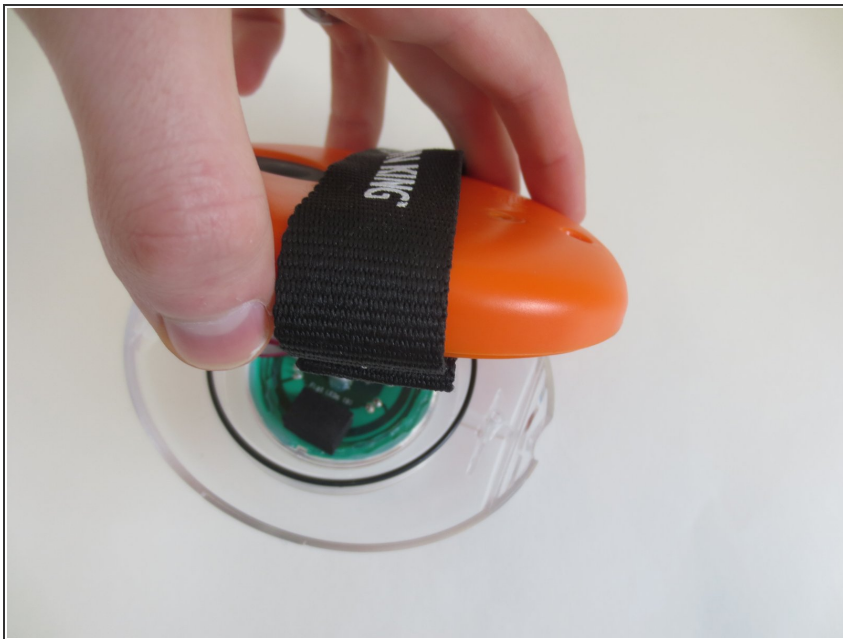


- Gently pull the two halves of the lamp apart.

### Step 3 — O-ring Replacement

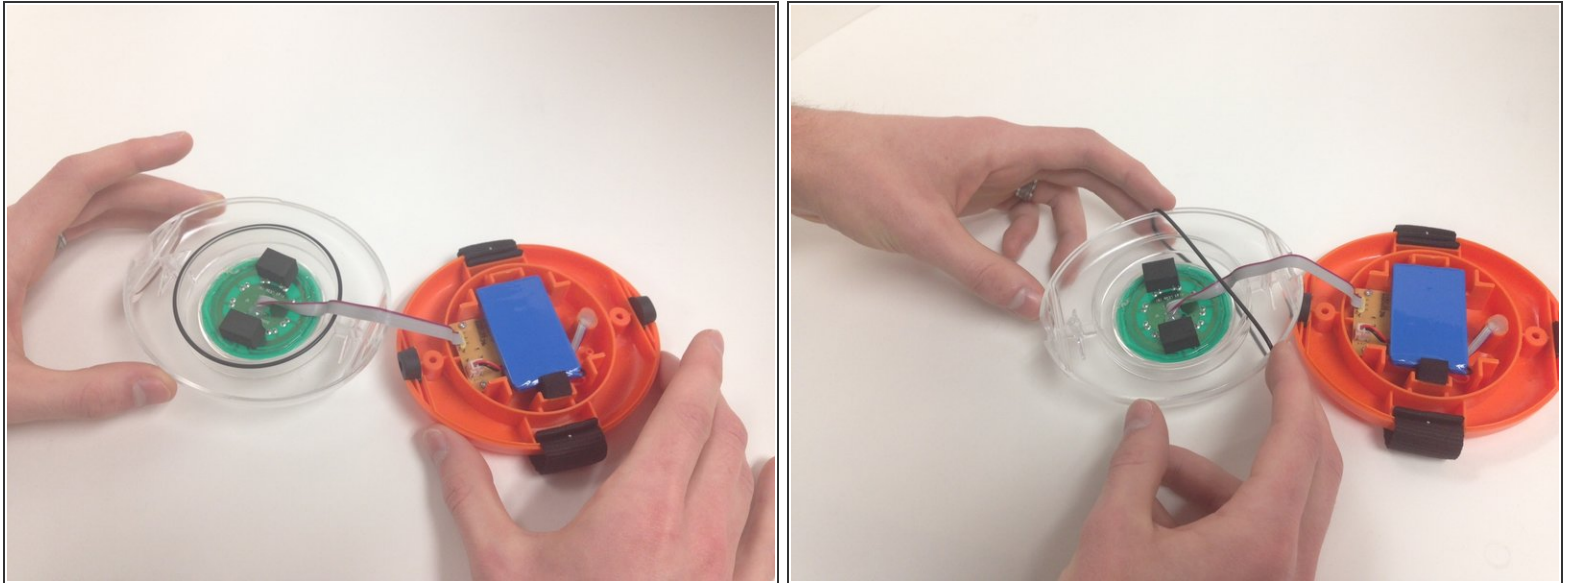

- On the clear upper half, remove the black O-ring
- Place the new O-ring, making sure it is smooth all the way around

### Step 4 — Stand Holder Replacements

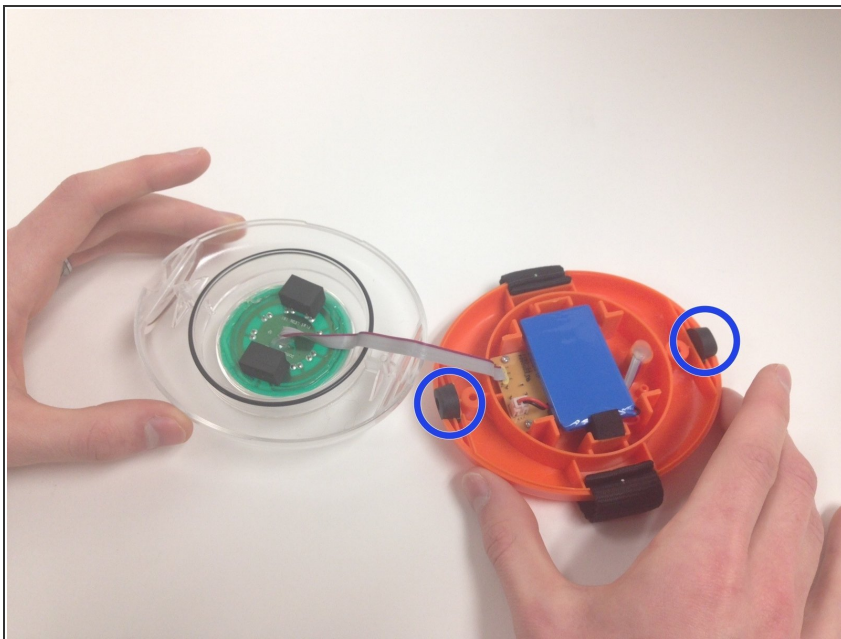

- Remove the rubber stand holders.
- Place the new stand holders, making sure the wings of the holder are in the second opening

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-20 09:37:56 PM.