






Asus V6800V Battery Replacement

How to replace an Asus V6800V battery.

Written By: Jong Park

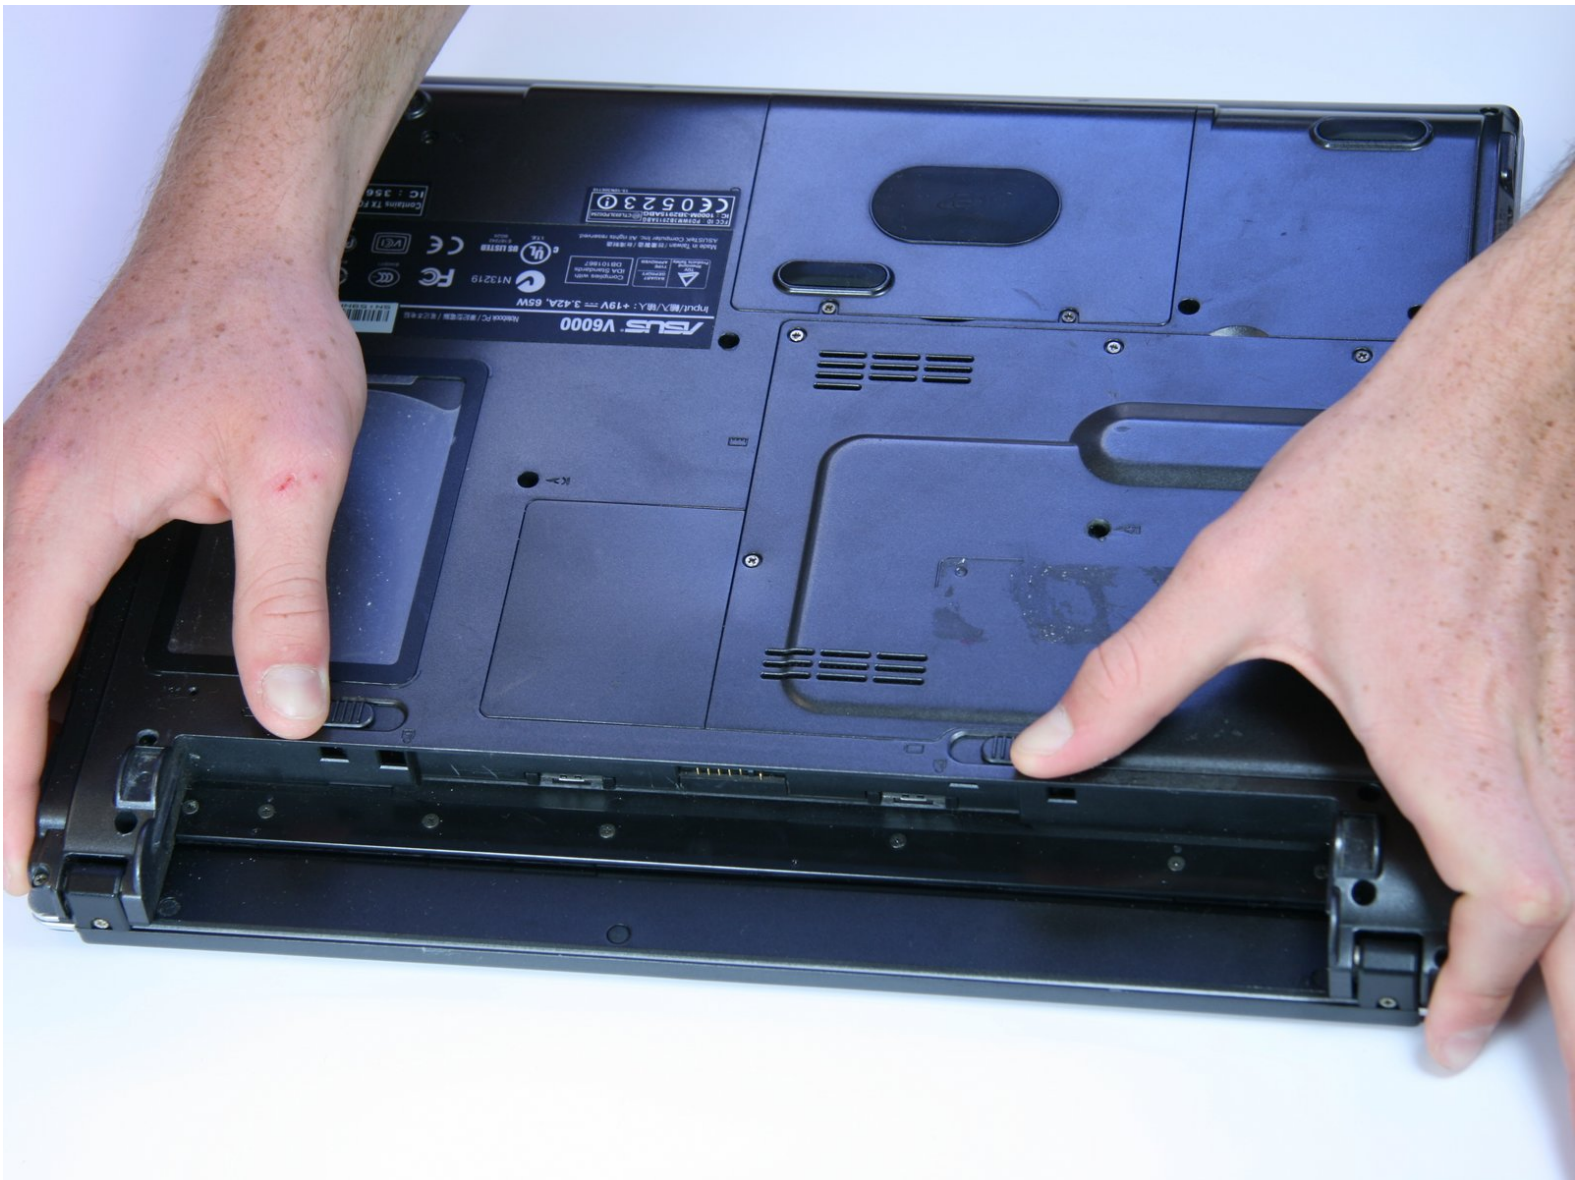

Step 1 — Battery

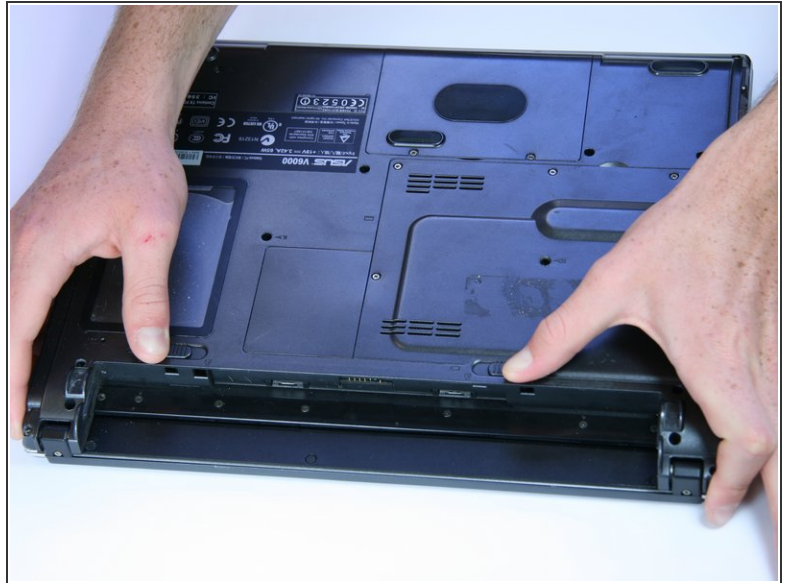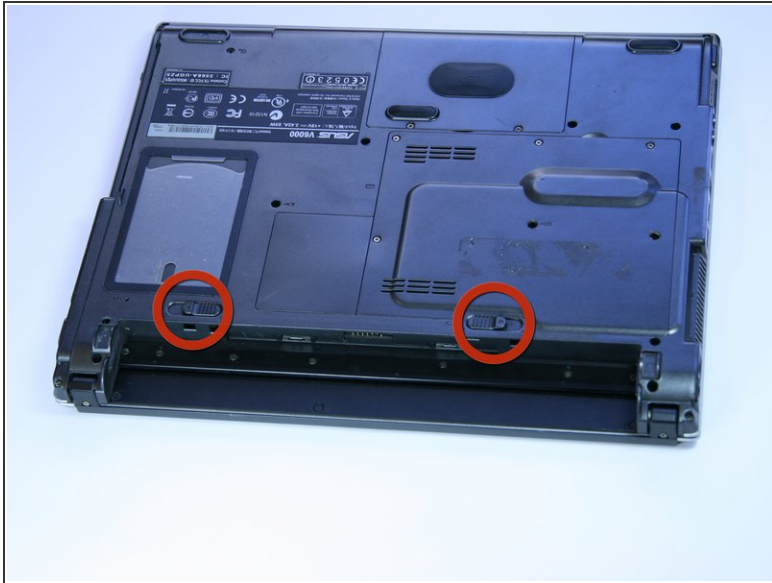

- Flip the computer over so that it is upside down.
 - Slide both latches away from each other (towards the outside).
 - Push the battery out with your fingers.
- i** The actual battery is not shown in the photograph.

To put new battery, just insert battery into the slot