




Asus V6800V Battery Replacement

Replacing battery

Written By: Jong Park



Step 1 — Battery

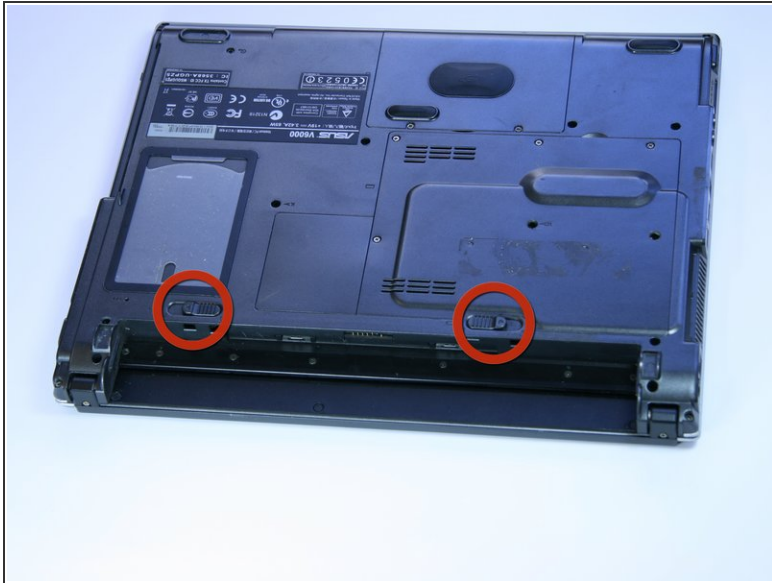

- Flip the computer over so that it is upside down.
 - Slide both latches away from each other (towards the outside).
 - Push the battery out with your fingers.
- i** The actual battery is not shown in the photograph.

To put new battery, just insert battery into the slot

This document was last generated on 2019-07-18 02:49:56 AM.