 




Asus V6800V Fan Replacement

How to replace the fan in your Asus V6800V.

Written By: Jong Park

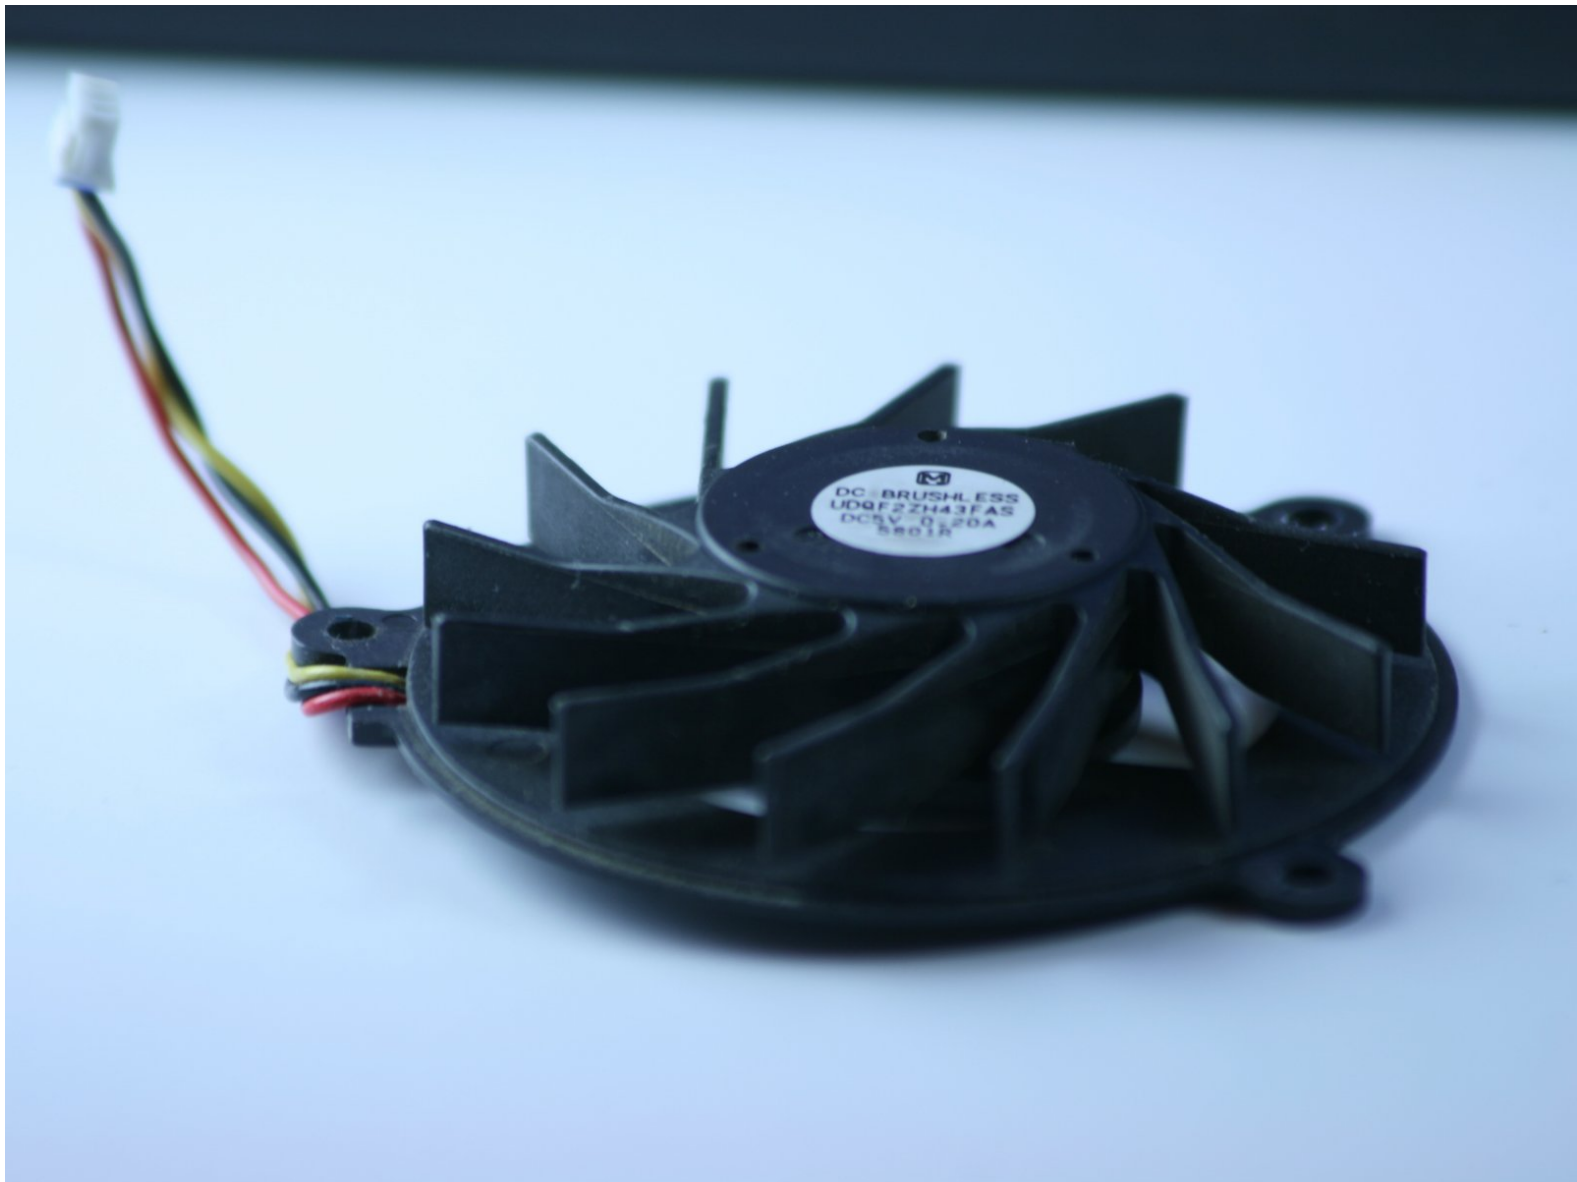

 

INTRODUCTION

This replacement guide will teach you how to remove the fan from your Asus V6800V and information on how to clean it.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Battery

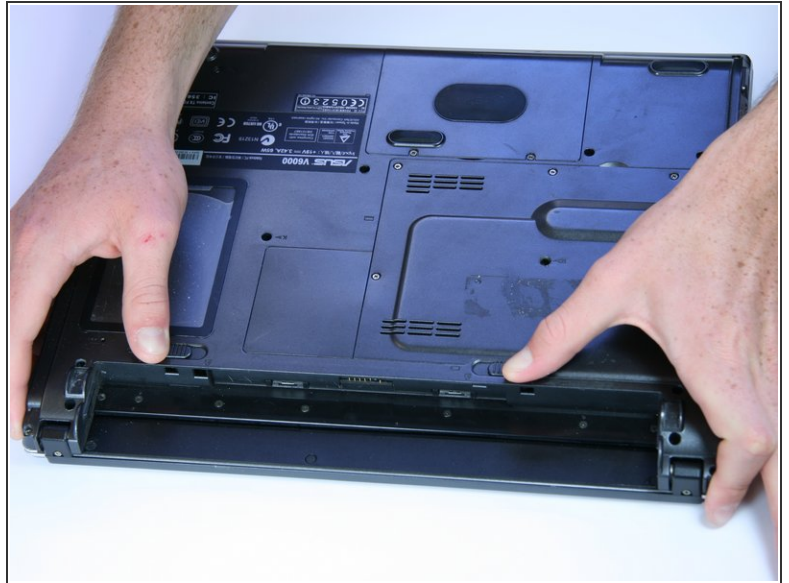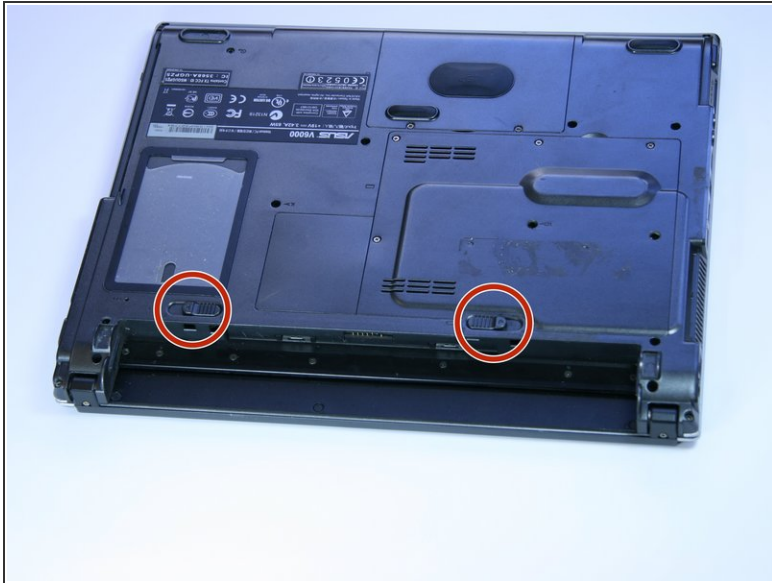



- Place the computer upside down.
 - Using your thumbs, slide both latches away from each other (towards the outside).
 - Push the battery out with your fingers.
- i** The actual battery is not pictured.

 Step 2 — Fan

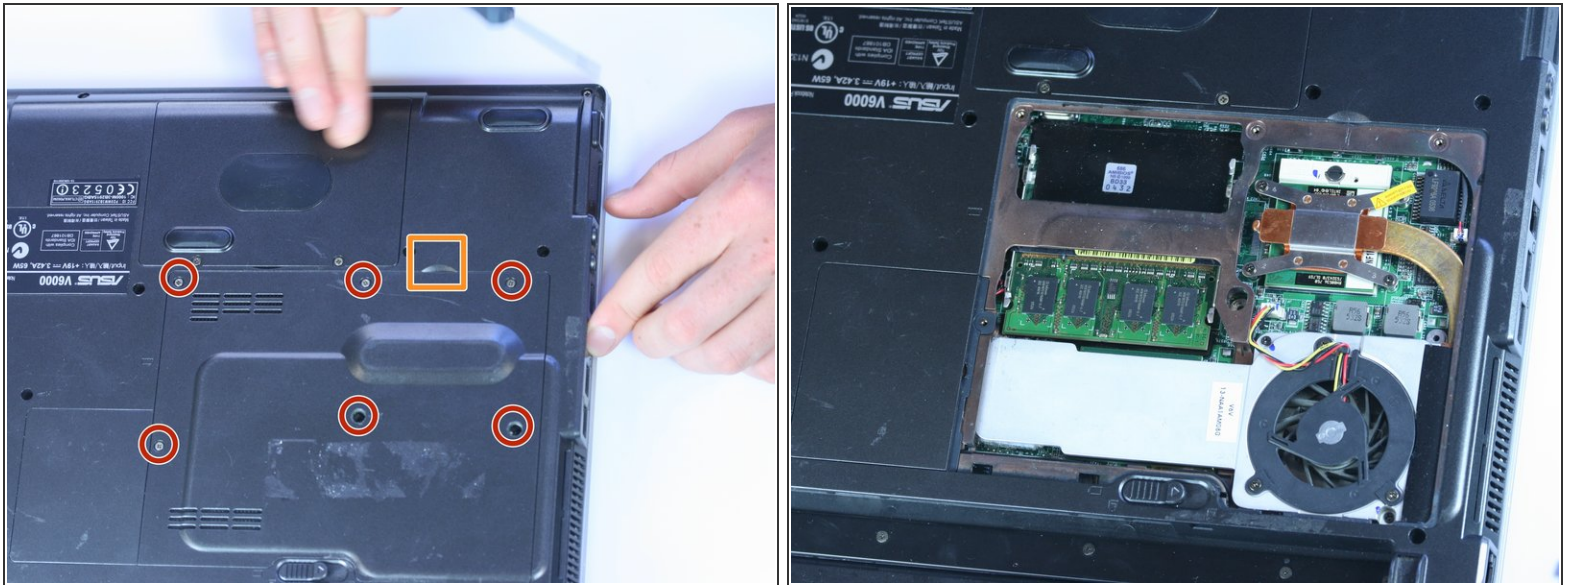

- Use the Phillips #0 to remove the six screws on the back of the device.
- Gently open the cover using the tab located by the highlighted box.

 
 
Step 3

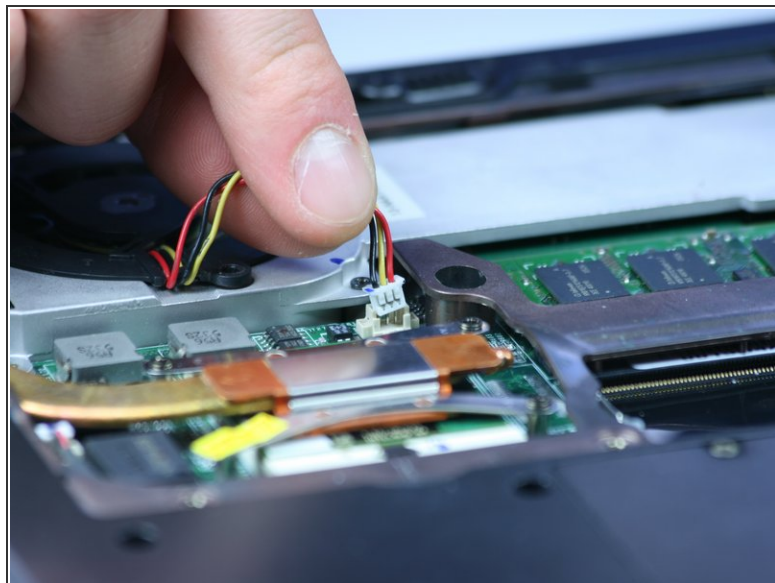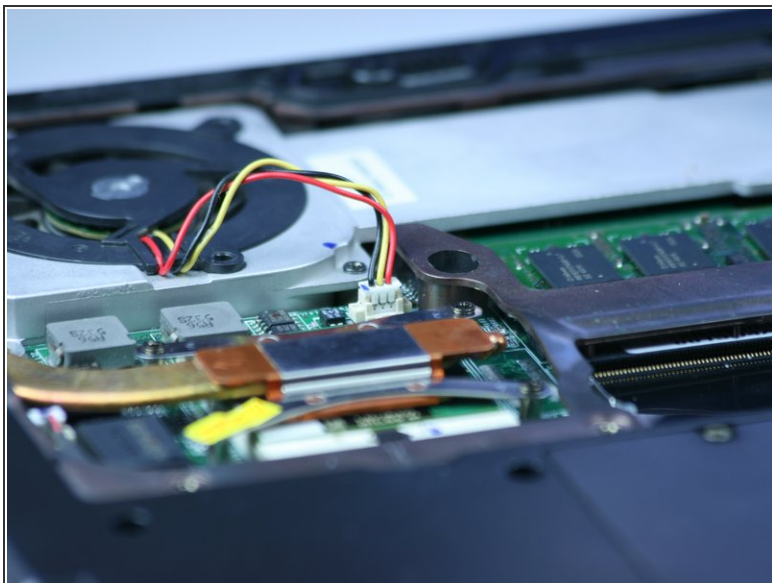

- Unplug the wires by pulling straight up on the white connector and away from the computer.



⚠ Make sure not to pull on the wires (as shown in the second picture). The white connector should pop off with very little force.

  Step 4

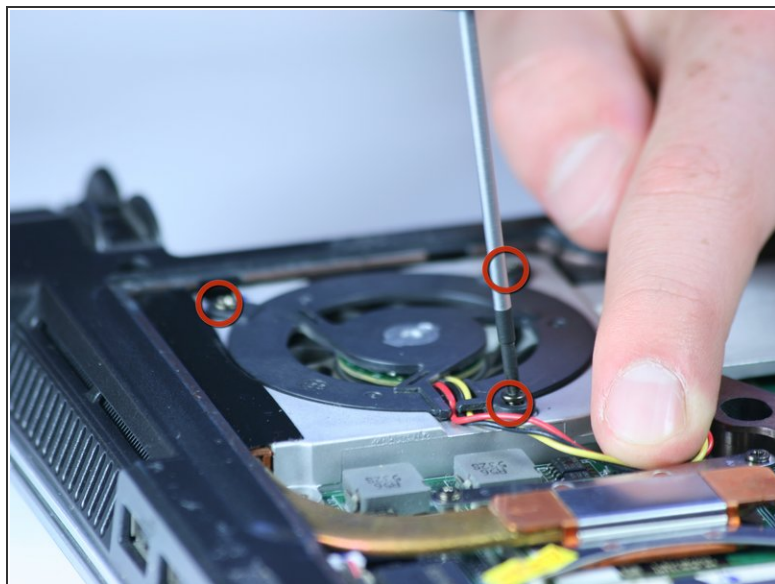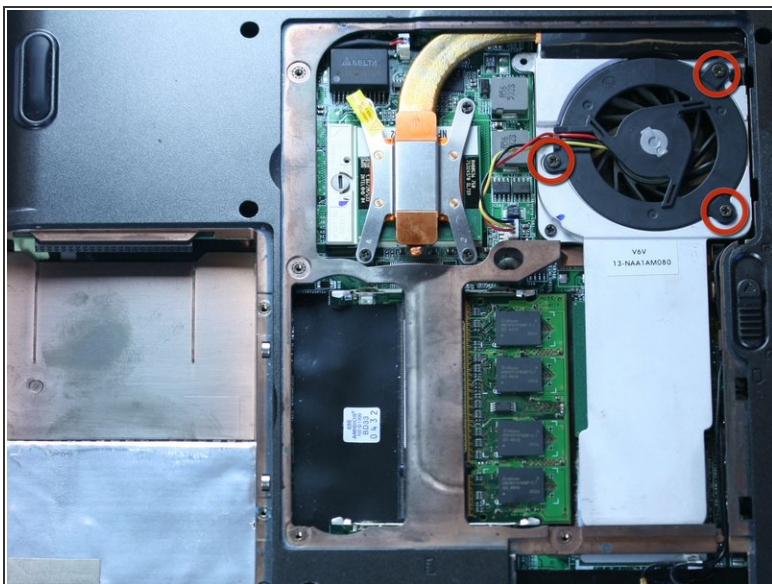



- Use a Phillips #0 to remove the three screws holding the fan in place.

  Step 5

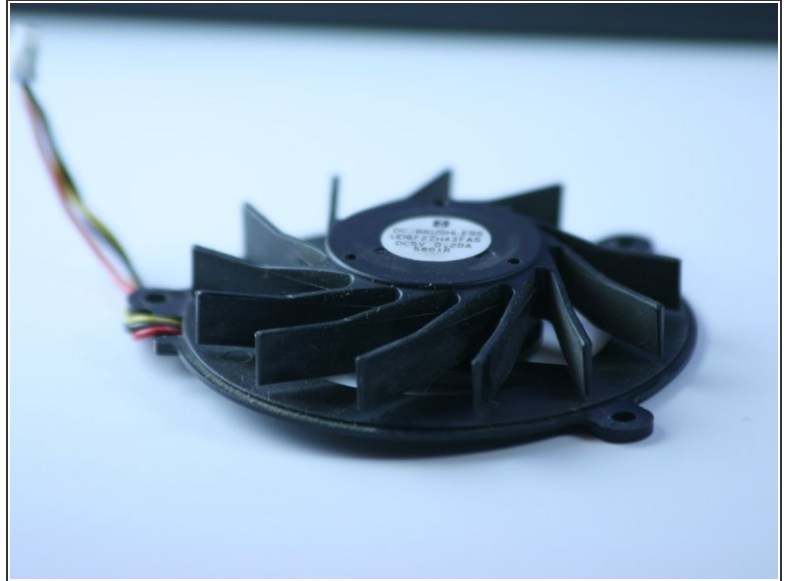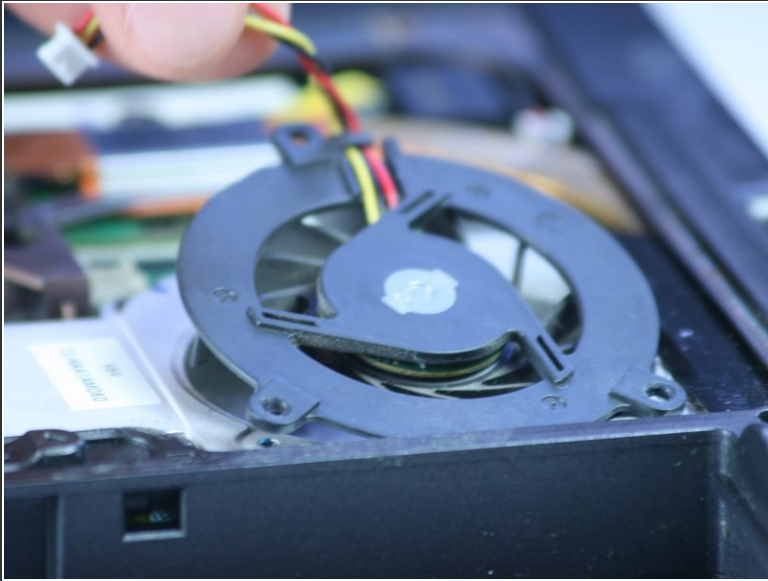

- Remove the fan from the device.
- ⓘ The fan should remove easily.

  Step 6

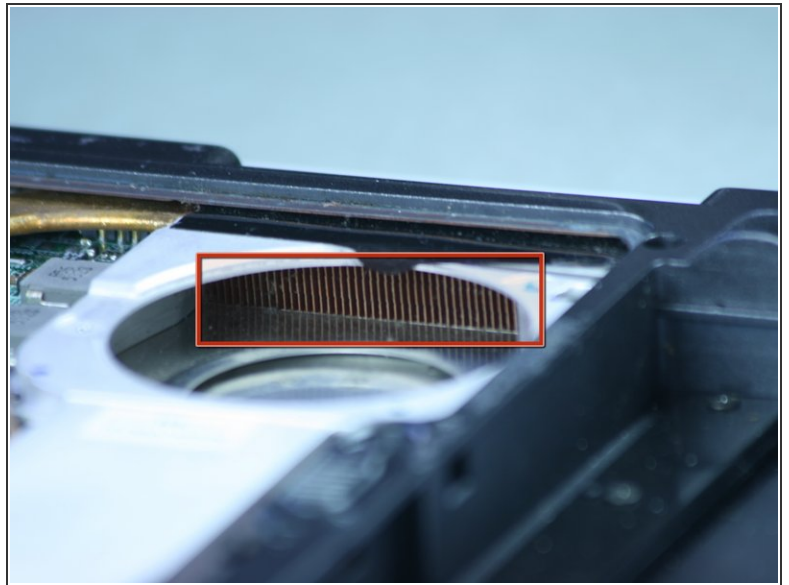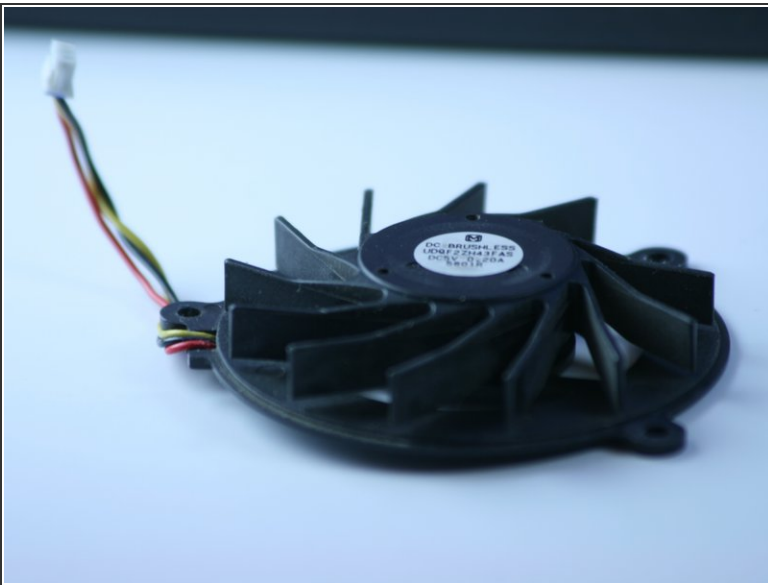

- Use a cotton swab or compressed air to blow air from the inside, out to clear dust from the vent or heat sink.

To reassemble your device, follow these instructions in reverse order.