




# Acer Aspire V5-572 Cooling / Fan System Replacement

Acer Aspire V5-572 Cooling System Replacement

Written By: ZFix

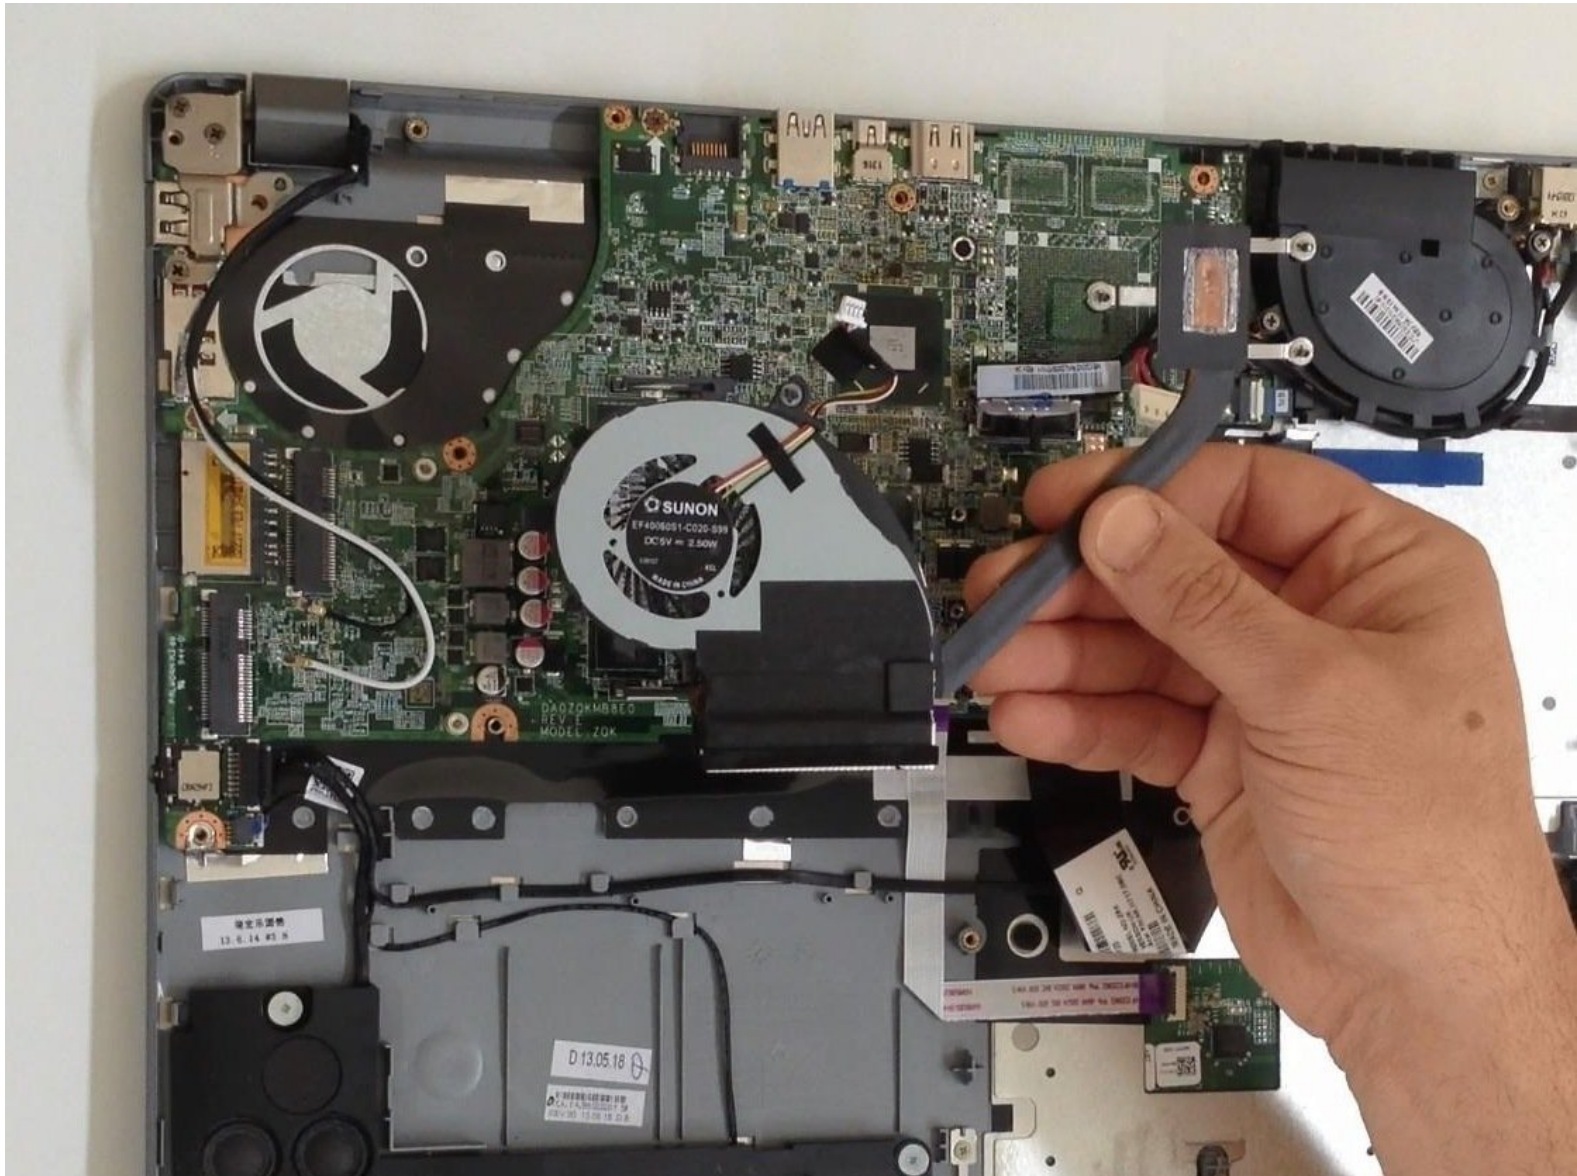

---

## INTRODUCTION


How to disassemble the laptop and change the Cooling system.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [Brush](#) (1)
-

## Step 1 — Bottom Cover

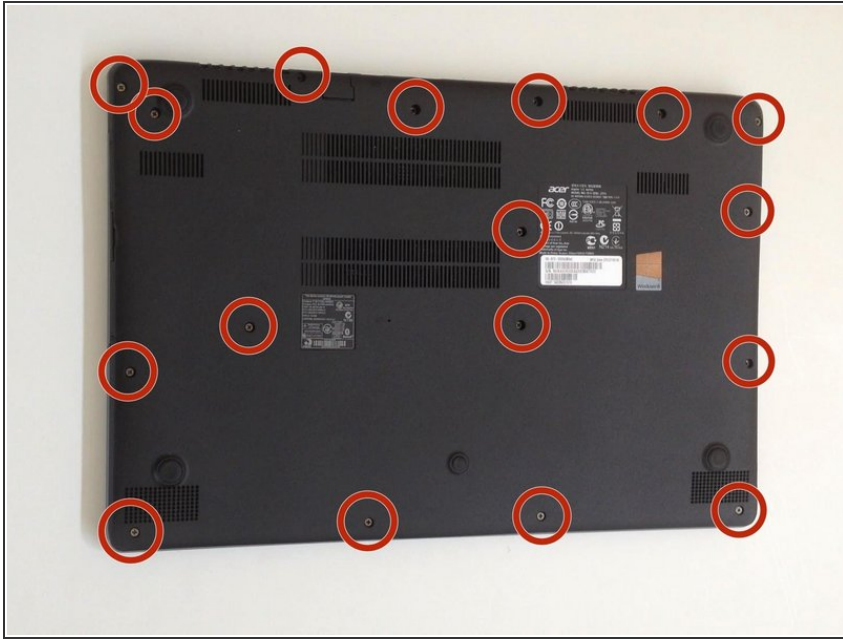


- ⓘ Switch-off the Laptop.
- Remove the seventeen Philips #0 screws.

## Step 2




- If there is a plastic storage tray in the laptop, remove it.

### Step 3

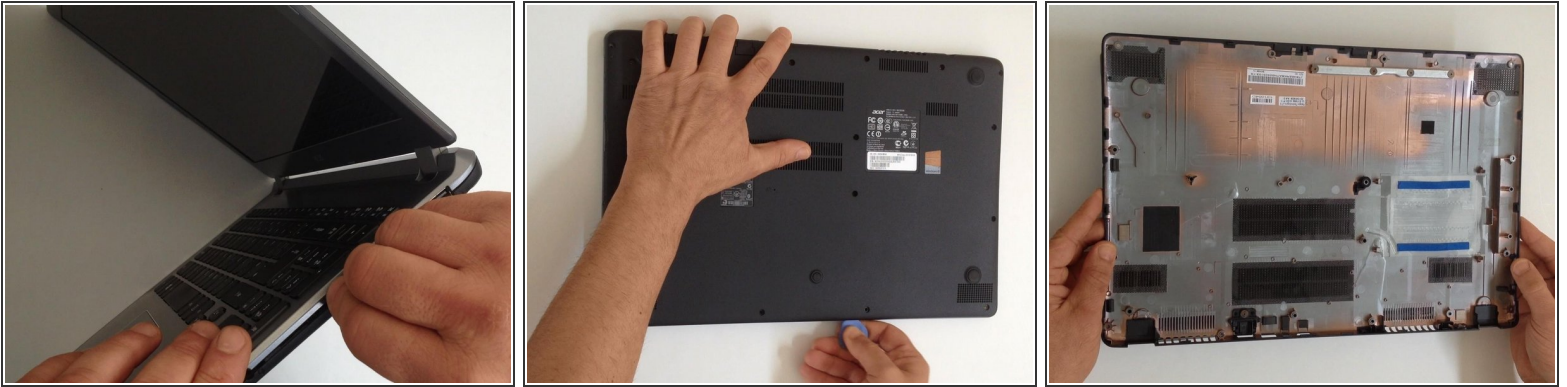



- Starting from the SD Memory Card hole, start prying between the top and bottom cases.
- ⚠ Use plastic tools to avoid damaging the cover.
- Remove the bottom case.

### Step 4

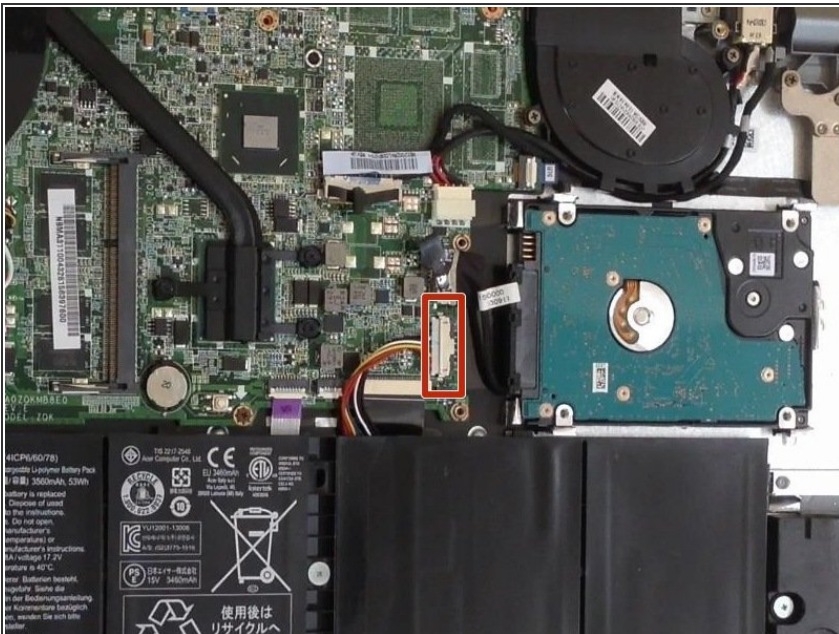

- ⚠ Disconnect the battery immediately for a safer repair.
- Pull the battery connector away from the hard drive to disconnect it.

## Step 5 — Cooling / Fan System

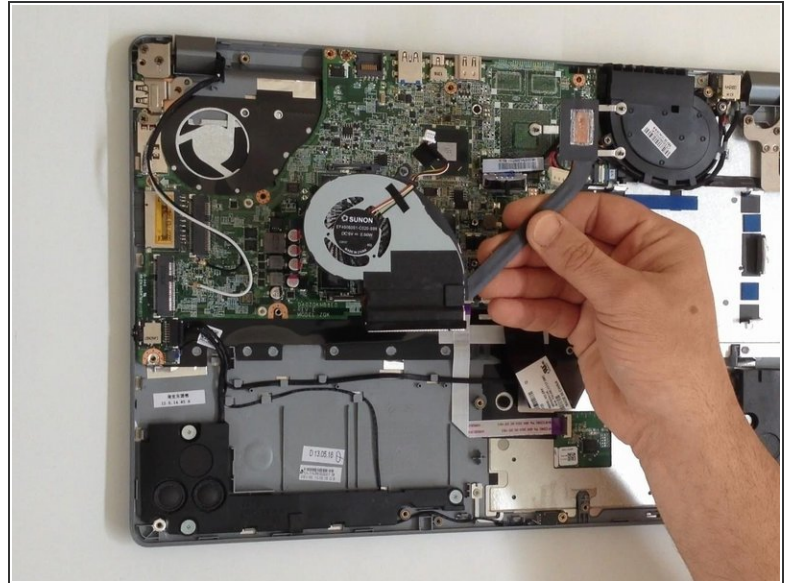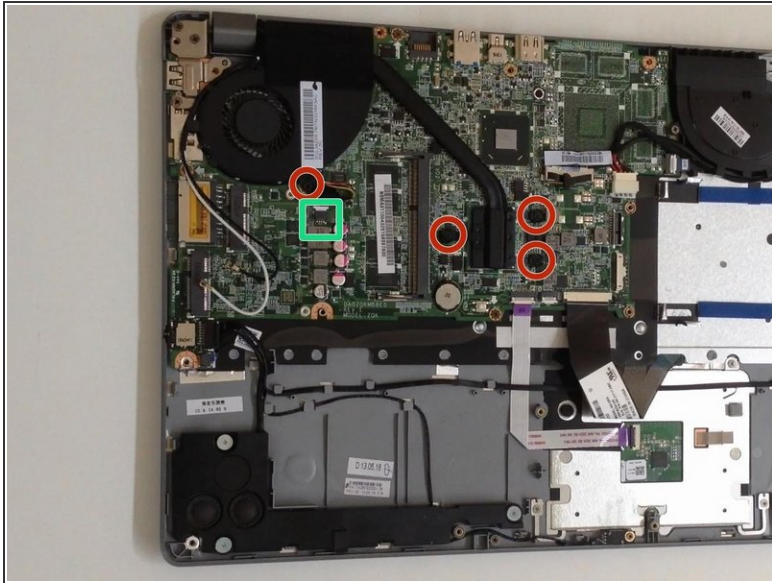

- Disconnect the Fan cable.
  - Remove the three screws from the CPU cooler and one from the Fan module.
- ⚠ When you change the Cooling system, you must clean the processor from old thermal compound and put new.

To reassemble your device, follow these instructions in reverse order.