



Asus V6800V CD/DVD Drive Replacement

Replacing CD/DVD Drive



Written By: Jong Park



 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

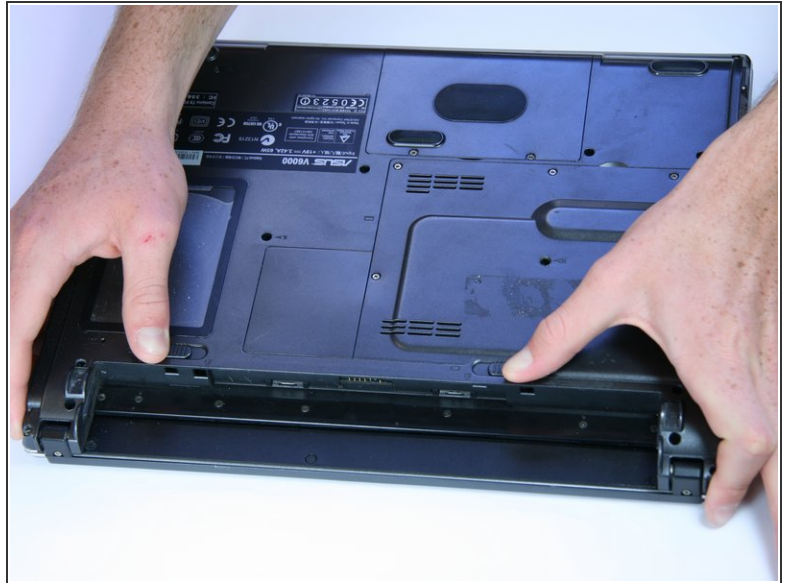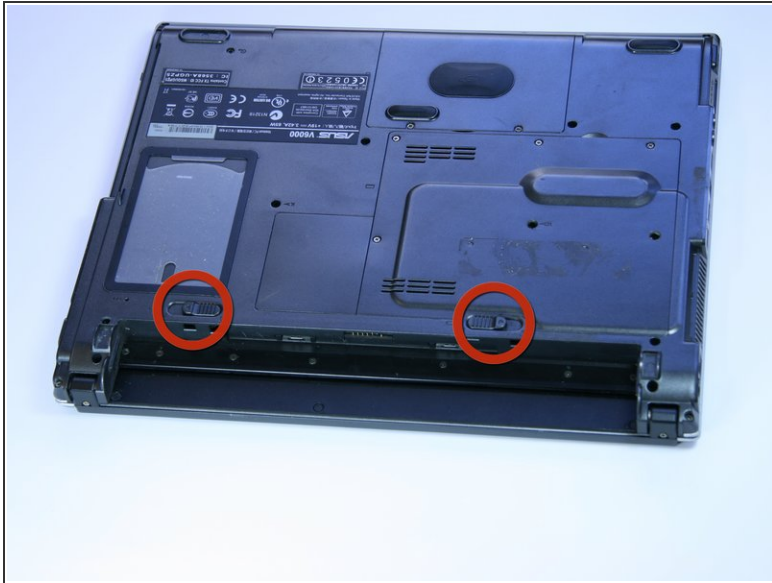

- Flip the computer over so that it is upside down.
 - Slide both latches away from each other (towards the outside).
 - Push the battery out with your fingers.
- i** The actual battery is not shown in the photograph.

Step 2 — Hard Drive




- Remove the two highlighted screws.

Step 3




- Pry open case at highlighted area.
- ⓘ Actual hard drive is not shown in the image.

Step 4

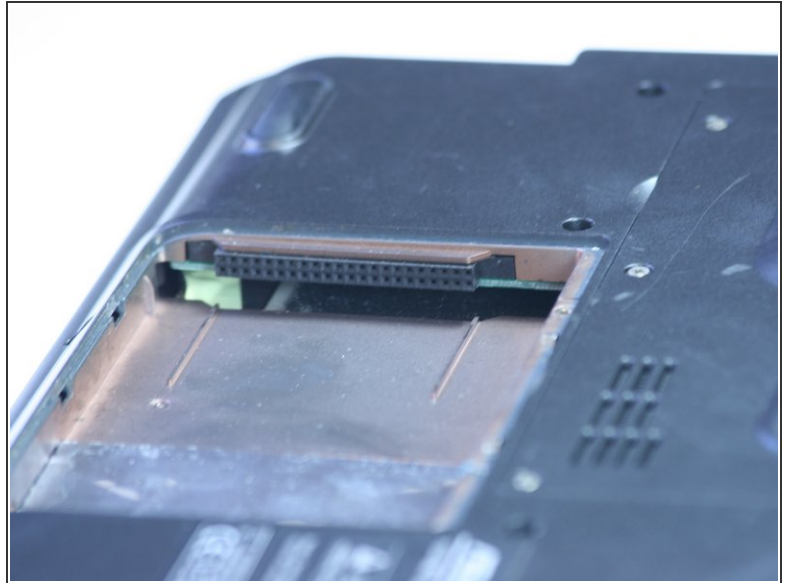

- Pull out hard drive laterally from slot shown.

Step 5 — CD/DVD Drive

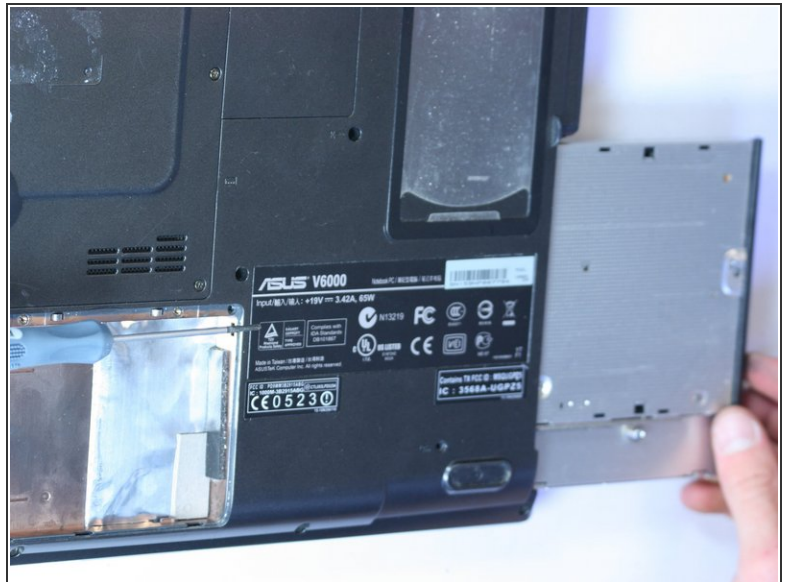

⚠ First, remove the highlighted screw (bottom right corner in the picture.)

- Using any tool that fits into the highlighted hole, carefully push CD/DVD drive out.

To reassemble your device, just push new CD/DVD driver back in