



Kodak EasyShare LS743 Battery Replacement

Replacing a dead battery

Written By: Justin Mancherje



INTRODUCTION


If your camera's battery has died, this guide will show you how to replace it.

Step 1 — Battery



- Open the battery cover.

Step 2

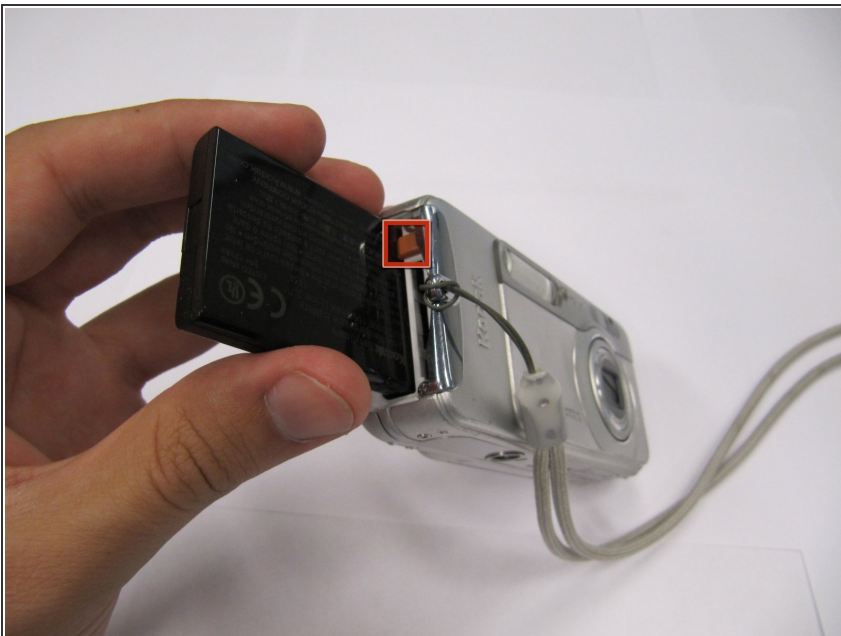

- Slide the orange latch sideways to eject the battery.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.