




Kodak EasyShare LS743 Camera Case Disassembly

Replace outer casing.

Written By: Michael

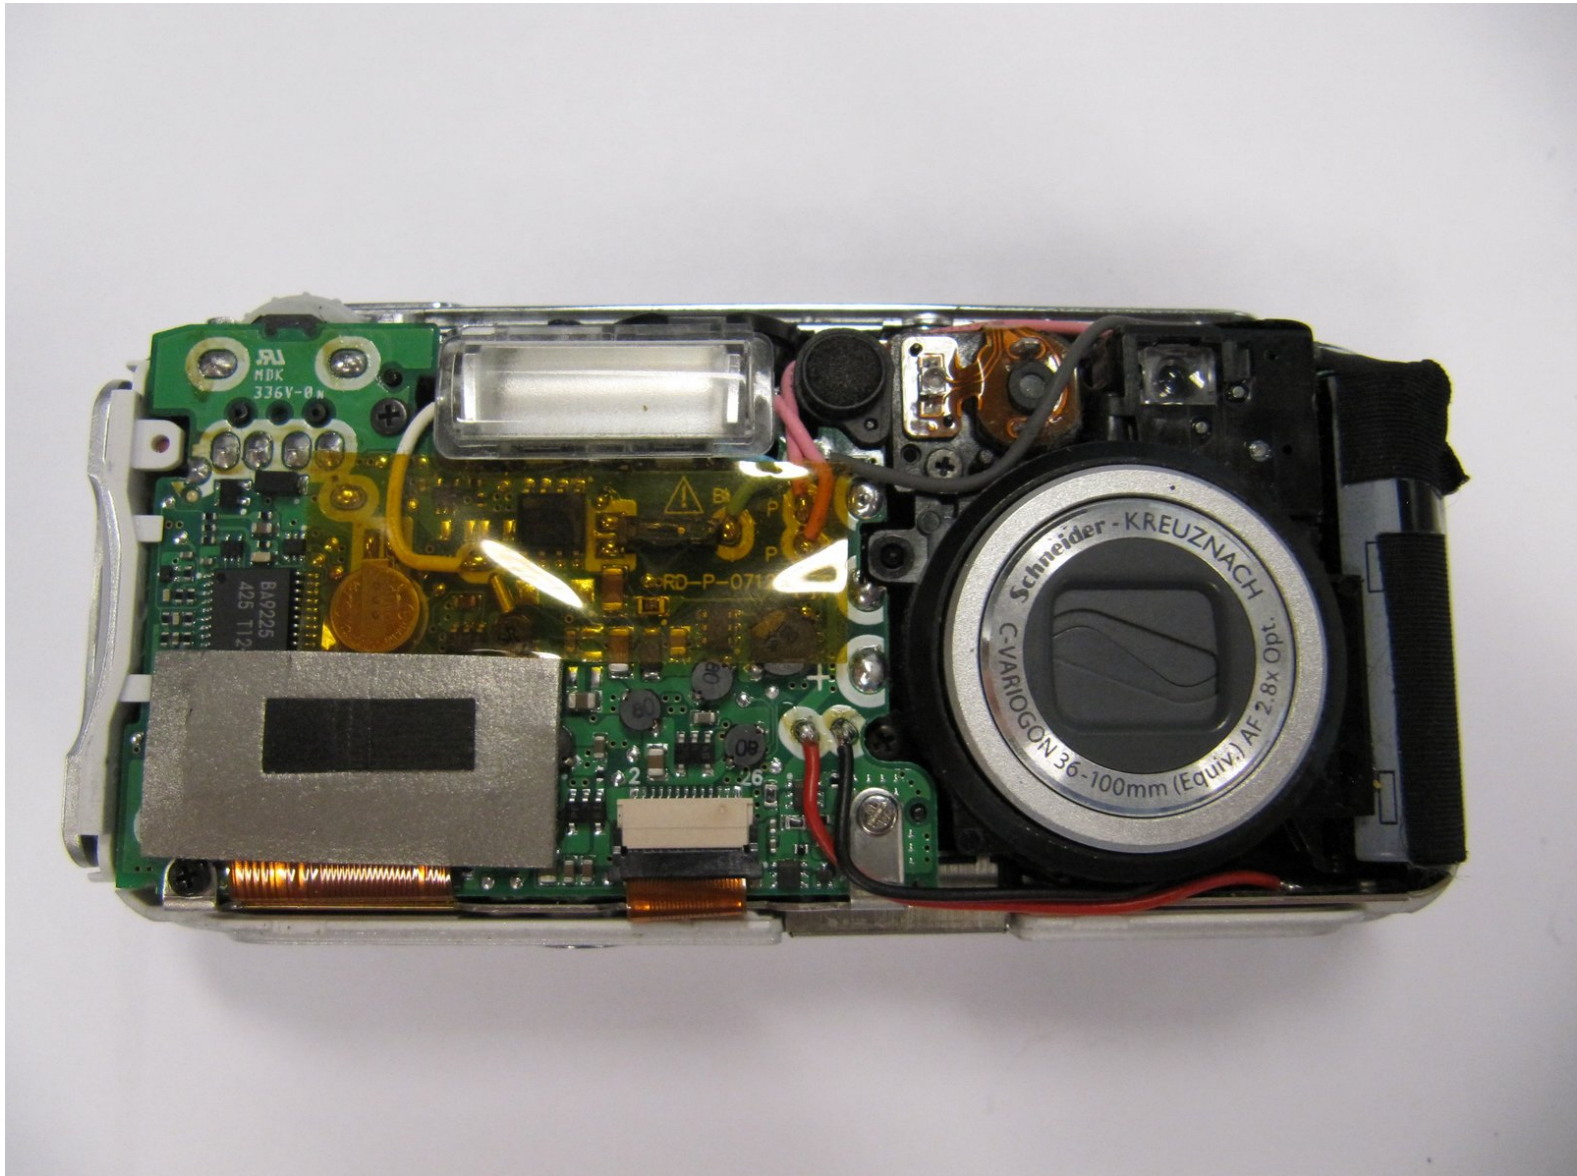

INTRODUCTION

Remove damaged case and replace with new casing.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Kodak EasyShare LS743 Camera Case Disassembly




- Remove 7 screws.
 - 1 (6.25 mm) screw located on the top right corner, next to the view screen.
 - 4 (4.45mm) screws on the bottom of the camera.
 - 2 (2.95mm) screws on the left side of the camera.

Step 2

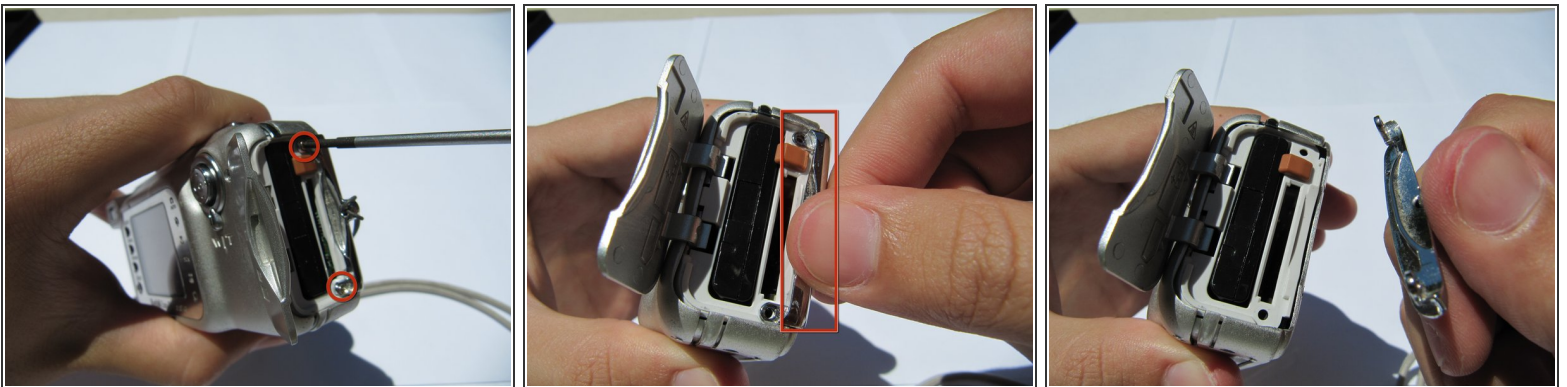

- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.

Step 3

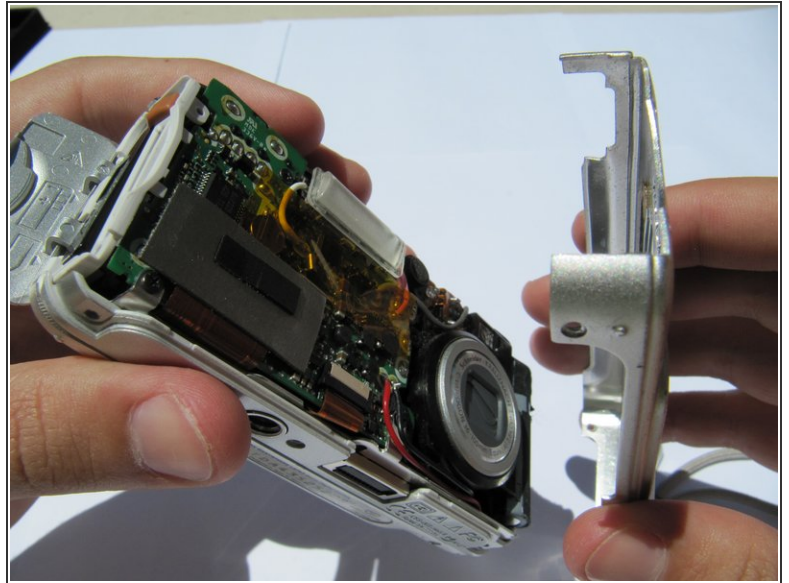

- Remove the rear camera casing.
- Remove the front casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-24 12:31:16 AM.