




Kodak EasyShare LS743 Camera Case Disassembly

How to replace outer casing. of the Kodak EasyShare LS743 Camera.

Written By: Michael

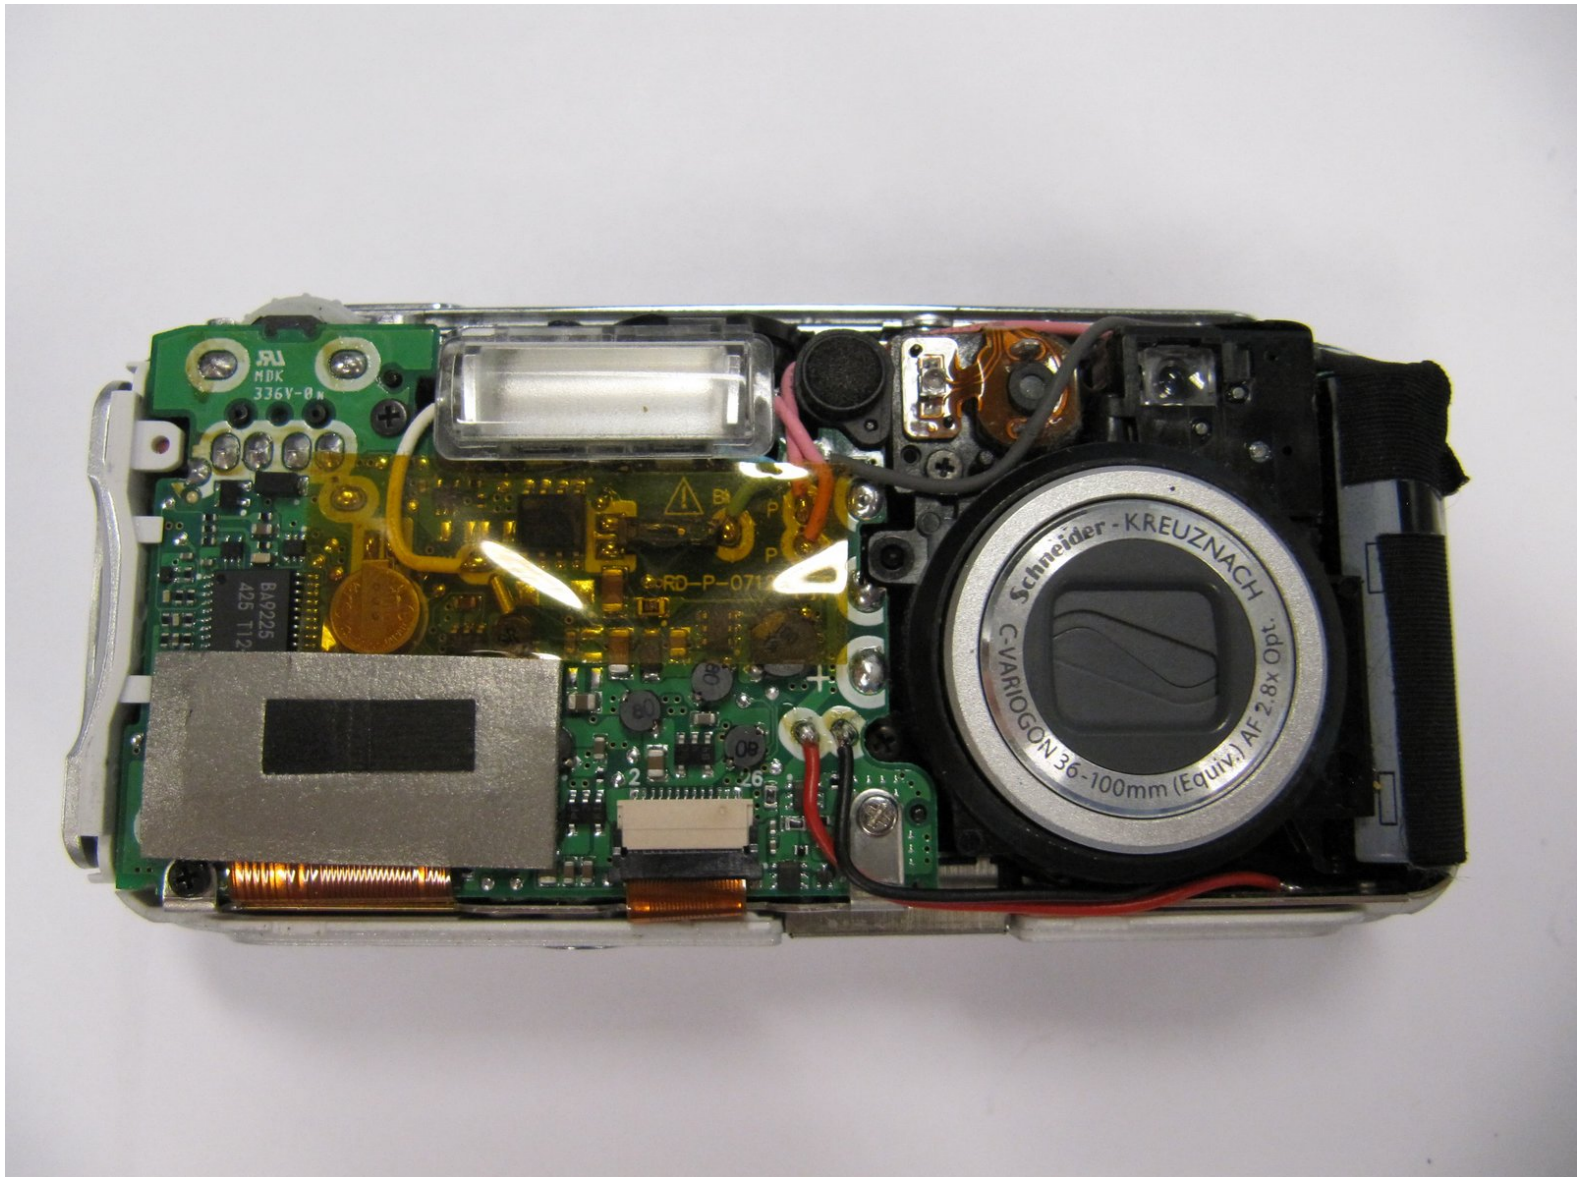


INTRODUCTION

If you need to access the internals of the Kodak EasyShare LS743 Camera, follow this guide. This guide will walk you through removal of the front and back case of the camera.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Kodak EasyShare LS743 Camera Case Disassembly

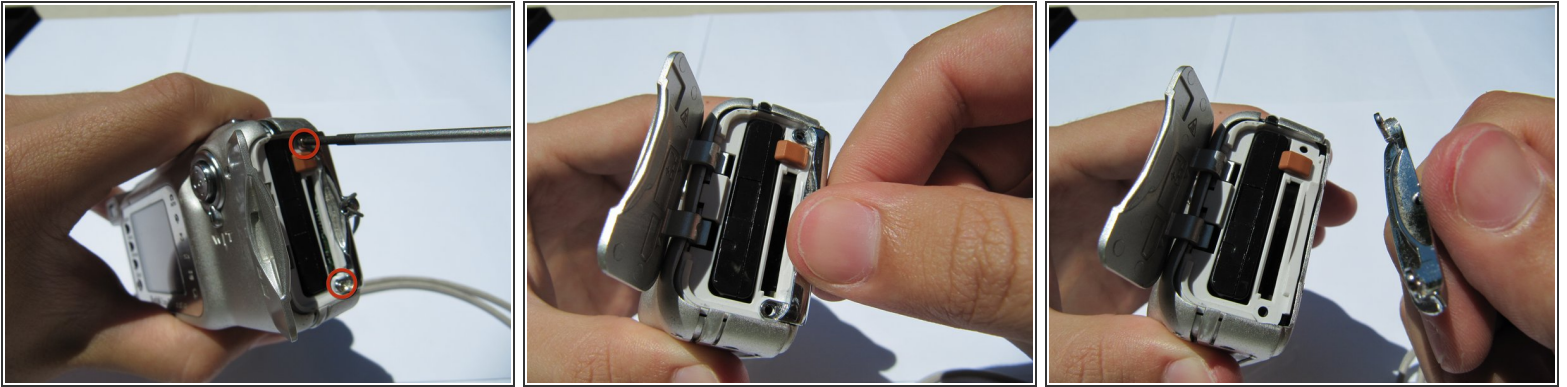


- Using a Phillips #00 screwdriver, remove two (5.39 mm) screws next to the battery slot.
- Remove the metal piece holding down the lanyard, then remove the lanyard.

Step 2



- Using a Phillips #00 screwdriver, remove seven screws located on the outside case of the camera.
 - One (6.25 mm) screw is located on the top right corner, right to the "OK" button.
 - Four (4.45 mm) screws are on the bottom of the camera.
 - Two (2.95 mm) screws are on the left side of the camera, above the USB port.

Step 3

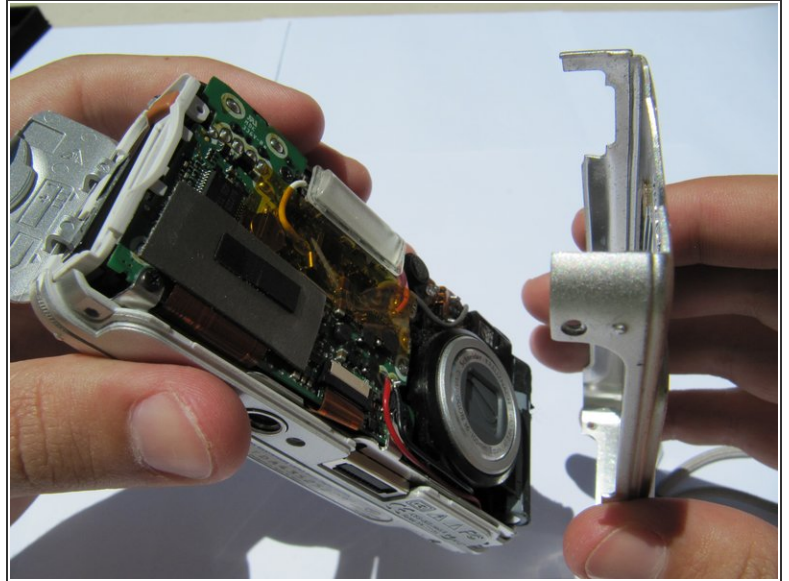

- Carefully remove the rear camera casing.
- Carefully remove the front camera casing.

To reassemble your device, follow these instructions in reverse order.