



Samsung Galaxy S4 Active SIM Card Replacement

Replace the SIM card.

Written By: Geoff Wacker



INTRODUCTION

Use this guide to replace the SIM card on your Samsung Galaxy S4 Active.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot to the left of the rear-facing camera, near the power button.
- Lift the rear case by the corner nearest the divot and remove it from the phone.

Step 2 — Battery



- Insert a plastic opening tool, or your finger, into the notch of the battery compartment and lift the battery upward to remove it.

Step 3 — SIM Card



- Use a plastic opening tool, or your fingernail, to press the SIM card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.
- Remove the SIM card.

To reassemble your device, follow these instructions in reverse order.