


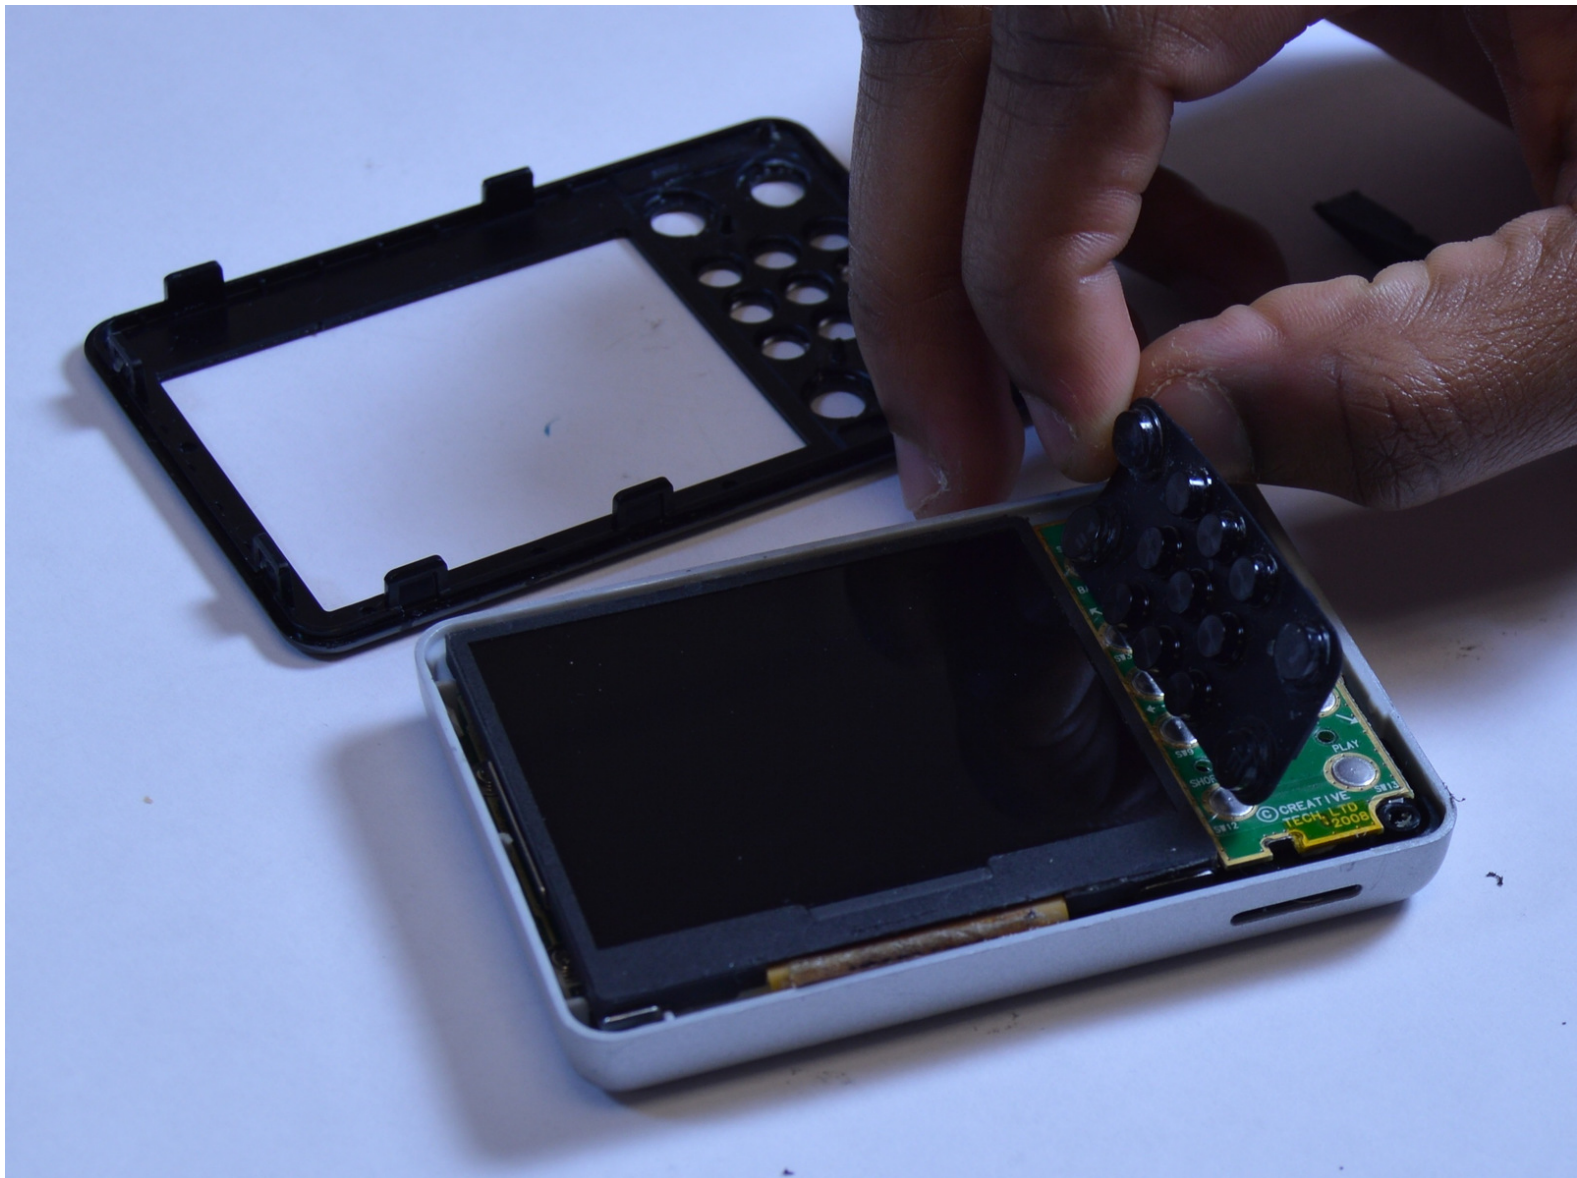

Replacing Creative Zen X-Fi Rubber Button Cover Cover

This guide will attempt to remove rubber padding used to protect the input circuitry below.

Written By: Westley Courchene



INTRODUCTION

The cover is used for protecting the underlying circuit and contributing to the overall device's aesthetic.

TOOLS:


- [Spudger](#) (1)
-

Step 1 — Detaching Front Case



- Using a spudger, wedge the tip between the front and back case to pry them apart.
- ⓘ Be careful to not apply excessive force since there are six fasteners on the screen's side that holds the cases firmly together.

Step 2 — Rubber Button Cover

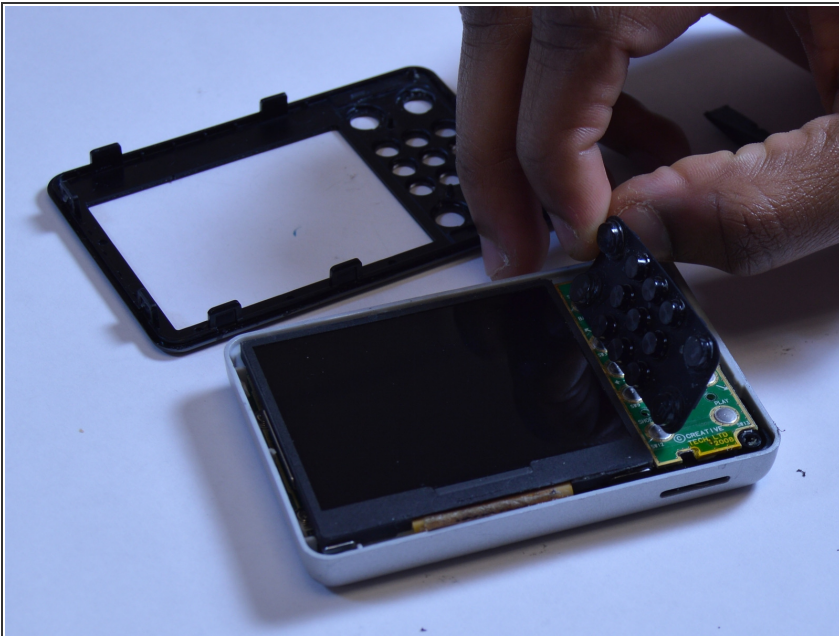

- The black rubber button pad can be removed by simply picking it up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 12:01:42 PM.