



Dell Inspiron 3520 Battery Replacement

This guide will show you how to remove the battery from your Dell Inspiron 3520 notebook.

Written By: Ian



INTRODUCTION

The Dell Inspiron 3520 has a lithium-ion battery that is easily accessible from the underside of the notebook. As a reminder, when disposing of the old battery, place it in an e-waste container.



PARTS:




- [Dell 48 WHr 6-Cell Lithium-Ion Battery](#) (1)
-

Step 1 — Battery



- Turn off notebook
- Set the notebook upside down with the battery facing away from you.
- Locate the unlock and release sliding tabs on the bottom right and left hand corners of the battery respectively.

Step 2

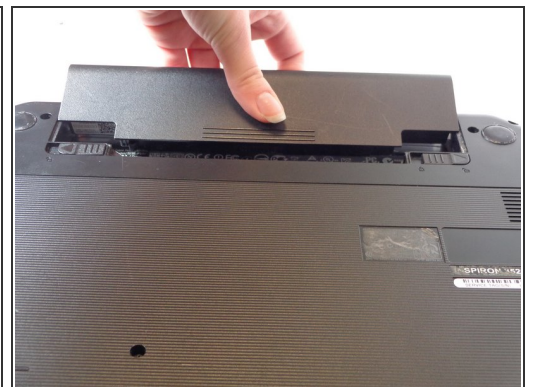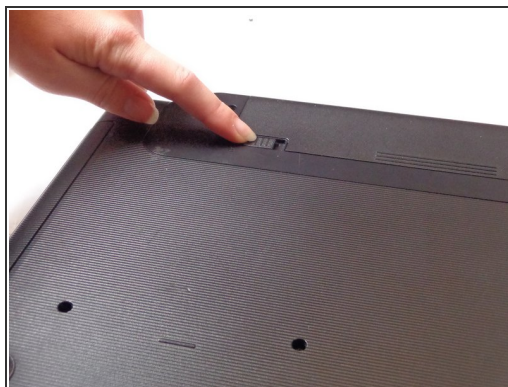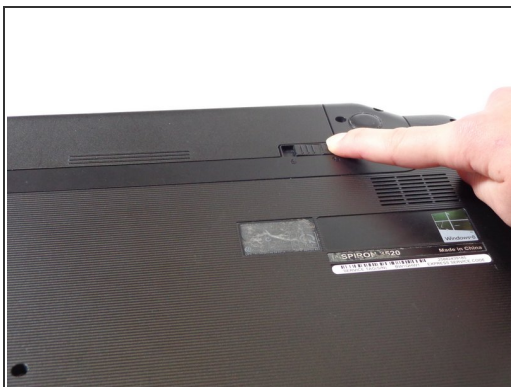

- Slide the right tab to the right to unlock the battery.
- Slide and hold the the left tab to the left to release the battery from the unit.
- Finally, remove the battery by sliding it away from the unit and yourself.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-11 12:16:28 AM.