



Acer Aspire R7 Bottom Cover Replacement

Prerequisite Only

Written By: F Fernandez



INTRODUCTION

This guide will demonstrate the steps to replace laptop ACER ASPIRE R7 RAM

TOOLS:


- [TR7 Torx Security Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Cover



- Shut down the laptop and disconnect the power cord.
 - ⚠ Failing to disconnect or shut down the laptop could result in damage to the laptop or a shock hazard.
- Turn the laptop over.

Step 2

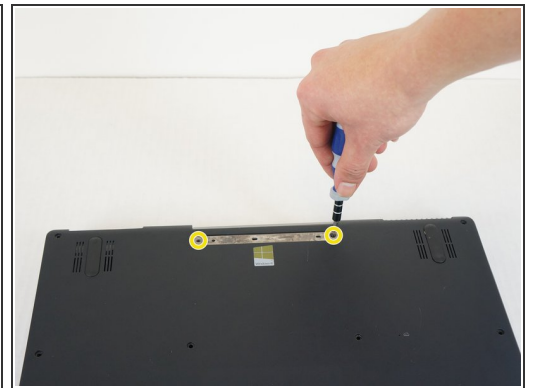

- Remove six 10 mm T7 screws.
- Remove four 6 mm T7 screws.
- Use the blue plastic opening tool to carefully remove the rubber pad which covers the two remaining screws.
- Remove the remaining two 10 mm T7 screws.

Step 3



- Carefully lift the cover upwards.
- ⓘ If the cover seems stuck, use a spudger tool to pry the sides.

To reassemble your device, follow these instructions in reverse order.