



Sony Cyber-shot DSC-W290 Battery Replacement

This guide will show you how to remove and replace the Sony Cyber-shot DSC-W290 battery.

Written By: Evan Mayer



INTRODUCTION

 
Make sure the camera's power is off and that you have the replacement battery on hand.



PARTS:


- [Lithium ion battery](#) (1)
-

Step 1 — Battery

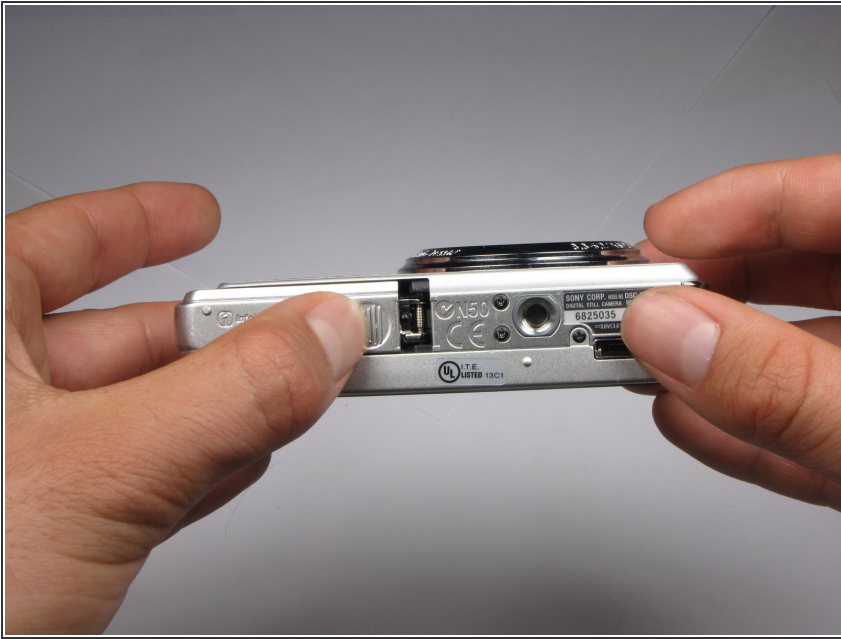

- Find the hatch labeled "open" on the left side of the bottom of the camera.
- Slide the hatch in the direction that the arrow is pointing. The hatch will open outward on its own.

 Step 2

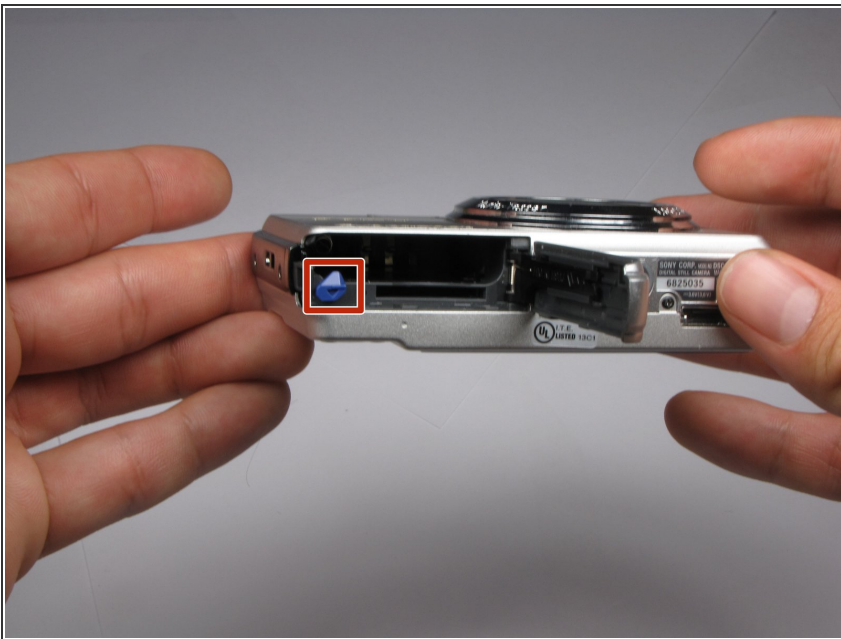

- Slide the blue locking tab to release the battery.
- Slide the battery out of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-30 08:08:10 PM.