



Nikon Coolpix L610 Battery and Memory Card Replacement

This is a guide that shows the location and how to remove the batteries and the memory card.

Written By: Jeremy



INTRODUCTION

This guide shows the location of the batteries and the memory card. It also helps to benefit how to open the door latch.

Step 1 — Battery and Memory Card



- The batteries are located on the bottom of the device on the right hand side. To open the compartment press the button in and slide it towards you and pull the door open.

Step 2



- The memory card is located next to the batteries. To remove the memory card press it in and it should pop out.

To reassemble your device, follow these instructions in reverse order.