



LG Thrill 4G Phone Buttons Replacement

This guide will show you how to remove and replace the buttons on the LG Thrill 4G mobile phone.

Written By: Kenny Richmond



INTRODUCTION


This guide shows you how to replace the buttons on your LG Thrill 4G.

Turn off your phone before starting.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover Removal

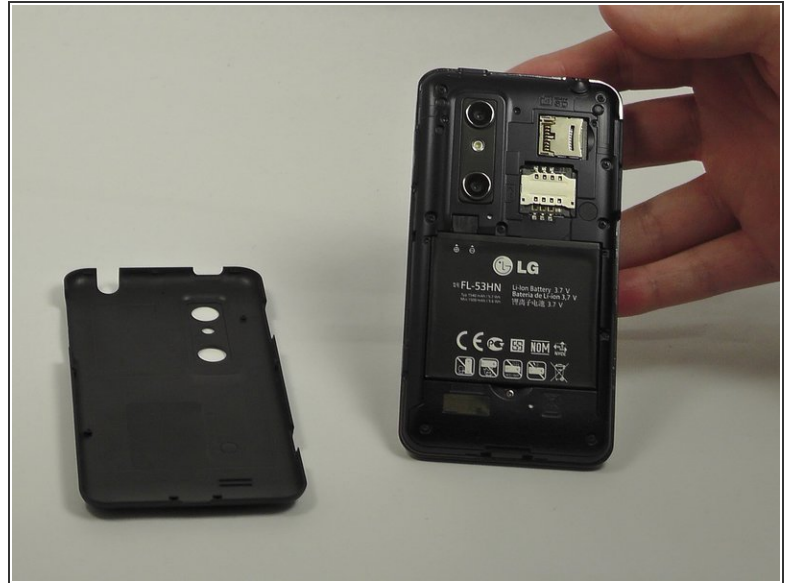

- Use your fingernail or a plastic opening tool to remove the back cover of the phone.
- ⓘ There is a notch located at the bottom of the phone that can be used for opening leverage.

Step 2 — Battery Removal



- ⓘ The battery is located at the bottom half of the phone with the LG logo on it.
- ⓘ There is a semi-circular notch at the bottom edge of the battery with the silver screw in it.
- Place a finger in the notch and push up against the battery to pop it out.

Step 3 — Screw Removal



- Remove three screws from the bottom of the phone. These three screws are located on the speaker itself.
 - 2 - 5.5mm length PH00 screws
 - 1 - 4mm length PH00 screws

Step 4 — Speaker Removal



- There is a notch located at the bottom of the speaker. Insert a fingernail in to the notch and pull up.

Step 5 — Buttons



i Place buttons and covers in a safe spot after removal so none are misplaced. There are three buttons and two covers:

- Power button
- Volume button
- 3D camera button
- USB cover
- HDMI cover

Step 6



- Place plastic opening tool under the bezel at either the bottom left or bottom right corner of the HDMI cover.
 - This will loosen the both, the HDMI and USB covers enough, so that you may now pull upwards and pop them right off.
- ★** Place covers in a safe spot after removal.

Step 7



- Remove the six screws within the mid-cover bezel.
- 6 - 5.5mm length PH00 screws

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 11:48:01 AM.