



Kindle Touch Bezel Replacement

This guide will show how to disassemble the front of the Kindle Touch.

Written By: Jerome Narine




INTRODUCTION

If you have damage to the front plate, screen or need access to the screws behind the plate, this guide will tell you how to do so.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover

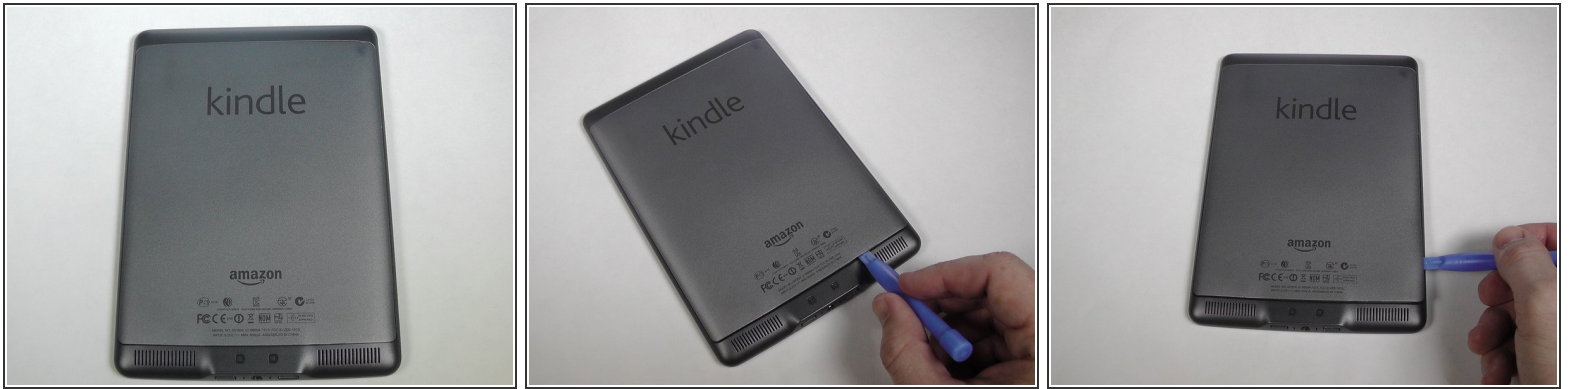


- With the small plastic opening tool, undo the plastic clips around the back lid.

Step 2




- Gently lift the bottom and pull as the rest of the plastic guides are on a track.

Step 3 — Removing the screws to access the bezel.

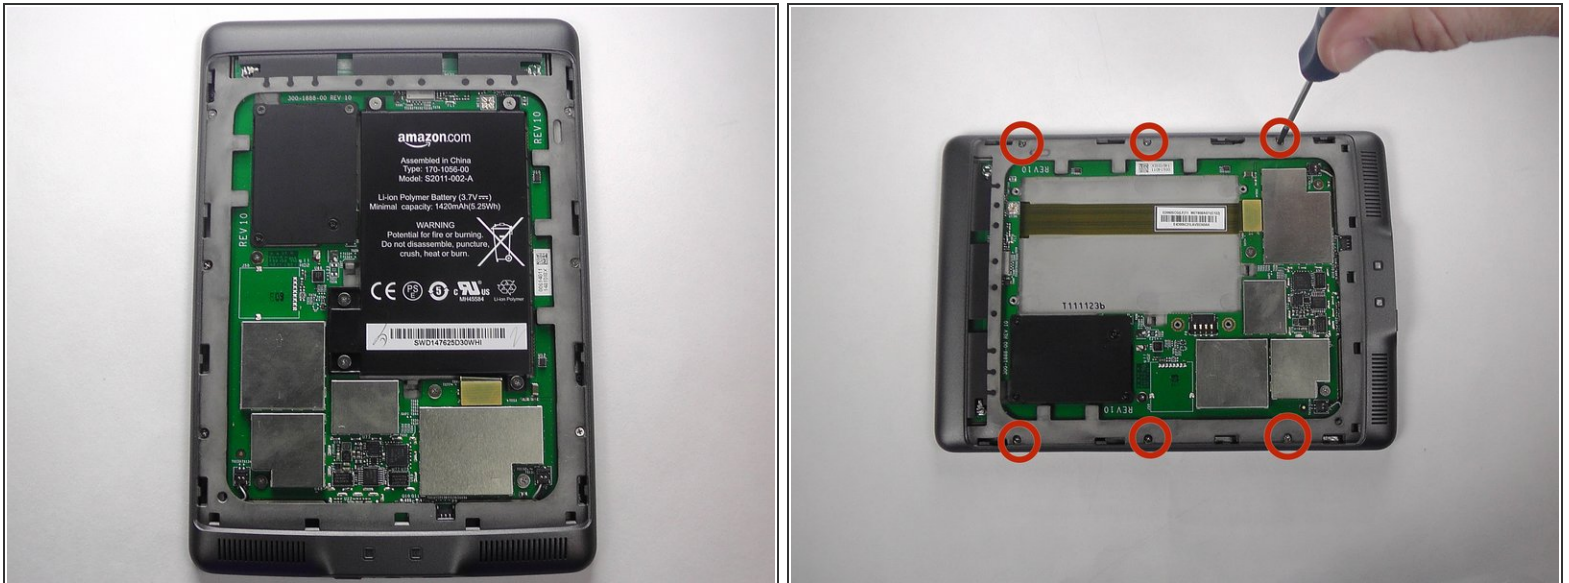

- Remove the six 4 mm screws in order to access the front plate. Use a Phillips #00 screwdriver.

Step 4 — Bezel removal.

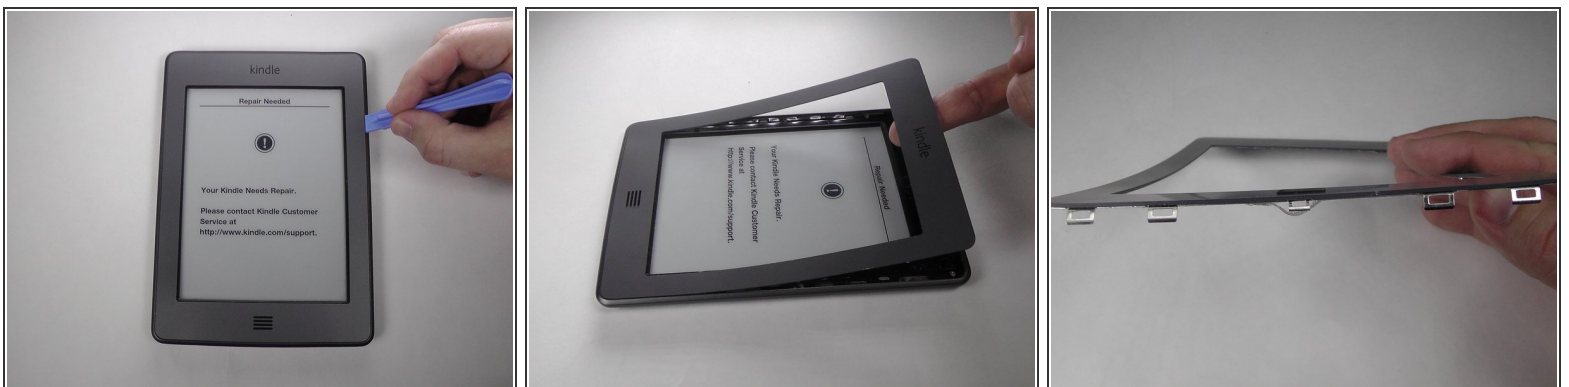

- Use a plastic opening tool to pry the top three sides of the bezel. Since there is glue under the bezel, gently pivot the face at the bottom off the Kindle and slide the clips out.

⚠ The clips can be easily bent. Do not try to force the clips out. If you do bend some, they can be bent back.

To reassemble your device, follow these instructions in reverse order.