



# Nikon Coolpix L810 LCD Replacement

Remove the LCD screen from your Nikon Coolpix L810.

Written By: Emilio Mena



---

## INTRODUCTION

Is your LCD screen not displaying anything or is displaying a corrupted image? Follow this guide to replace the LCD screen.

---

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — LCD



- Remove two 5 mm Phillips #000 screws on the right hand side of the camera located near the power button.

**i** Use of precision tweezers to help remove loosened screws is suggested.

## Step 2



- Remove two 5 mm Phillips #000 screws near the audio/video inputs on the opposite side near the flash component.

### Step 3



- Remove three 5 mm Phillips #000 screws on the bottom end of the camera.


### Step 4



- Carefully detach the back side of the camera by lifting both ends, with moderate force wobble until loosened enough to remove.






## Step 5

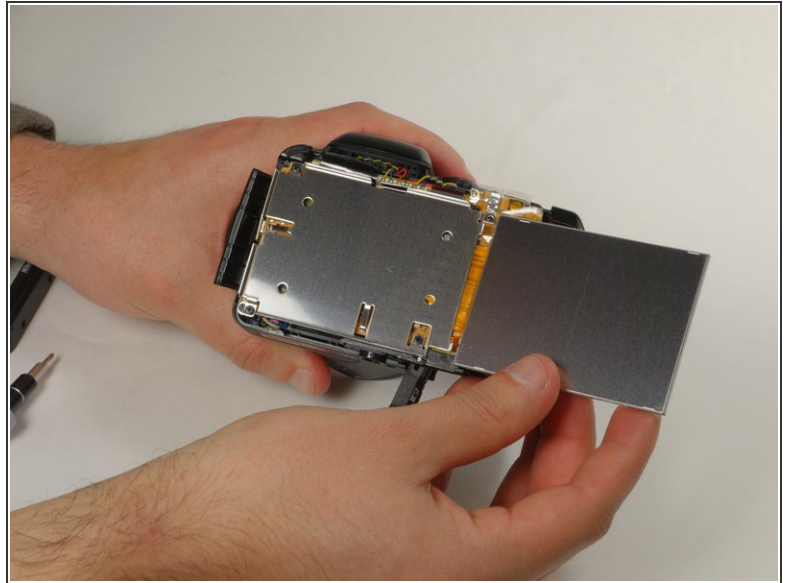

- With the LCD screen facing towards you, flip the screen to the right.



## Step 6

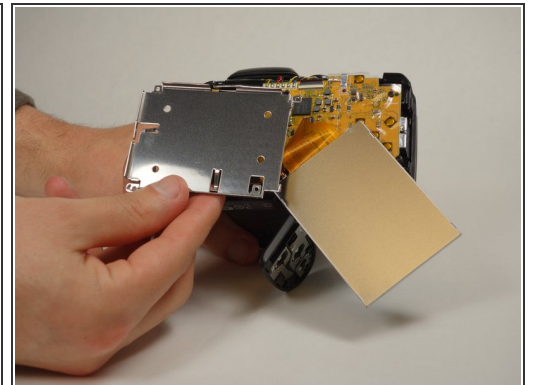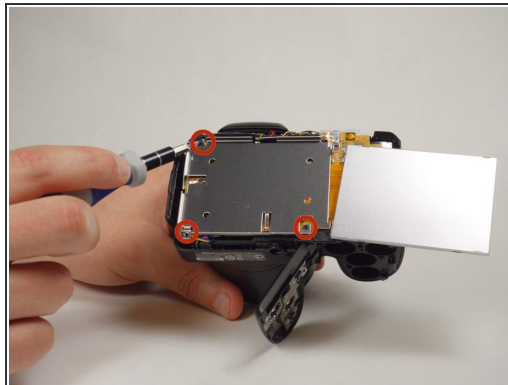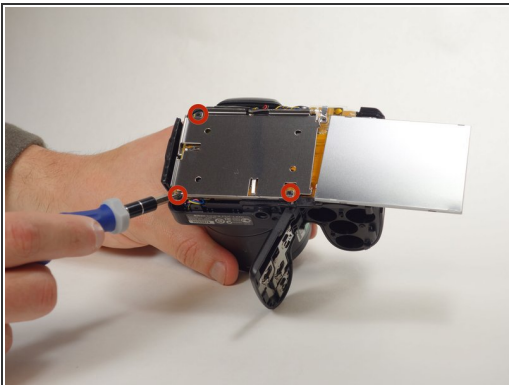

- Remove three 5 mm Phillips #000 screws located on the bracket.

**⚠** Hold the camera with the lens facing downward to prevent the bracket from falling off once all screws are removed.

## Step 7

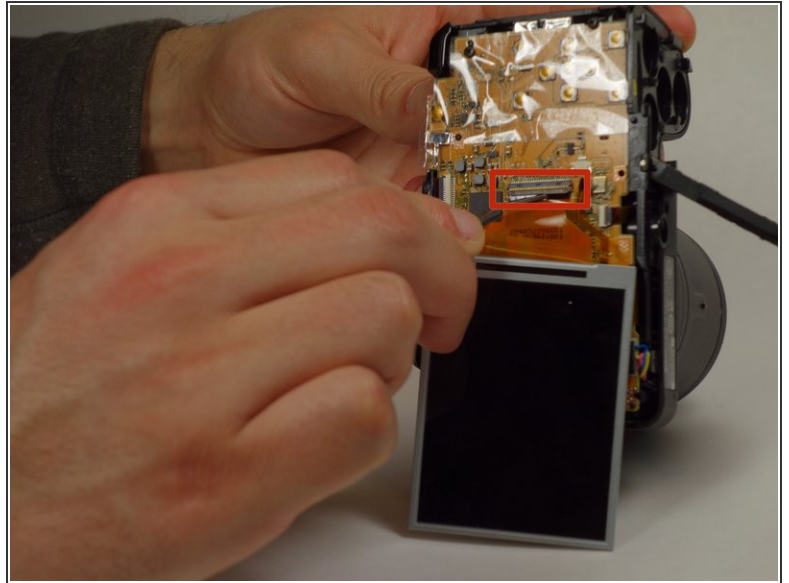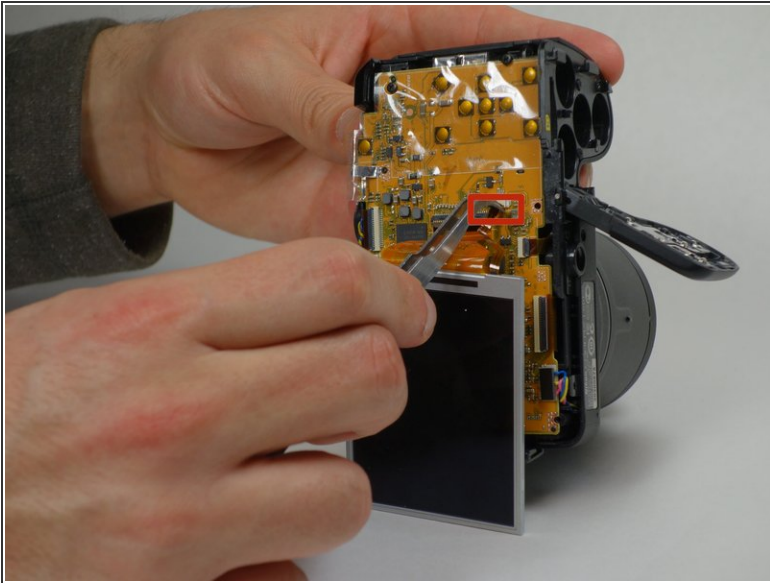

- Disconnect the ribbons that connect the LCD screen to the camera gently using precision tweezers or fingers.

To reassemble your device, follow these instructions in reverse order.