



Nikon Coolpix L810 LCD Replacement

Remove the LCD screen from your Nikon Coolpix L810.

Written By: Emilio Mena




INTRODUCTION

Is your LCD screen not displaying anything or is displaying a corrupted image? Follow this guide to replace the LCD screen.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — LCD

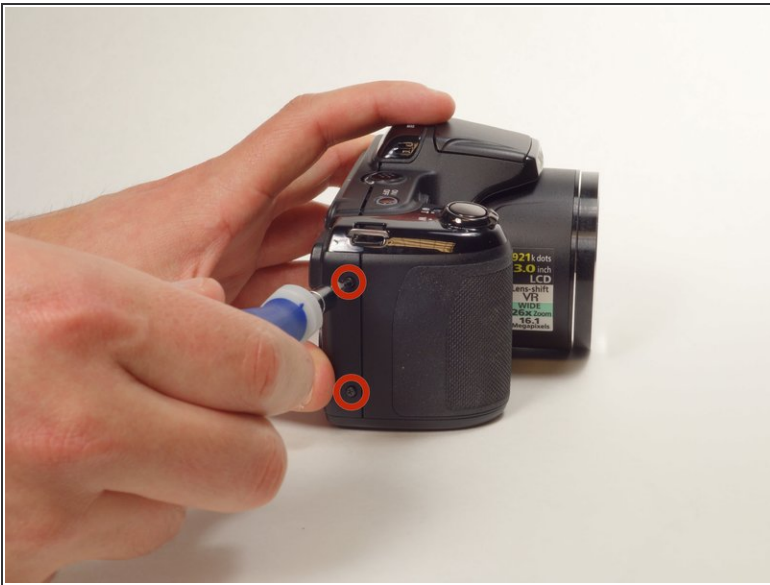

- Remove two 5 mm Phillips #000 screws on the right hand side of the camera located near the power button.

i Use of precision tweezers to help remove loosened screws is suggested.

Step 2



- Remove two 5 mm Phillips #000 screws near the audio/video inputs on the opposite side near the flash component.

Step 3




- Remove three 5 mm Phillips #000 screws on the bottom end of the camera.

Step 4






- Carefully detach the back side of the camera by lifting both ends, with moderate force wobble until loosened enough to remove.

Step 5

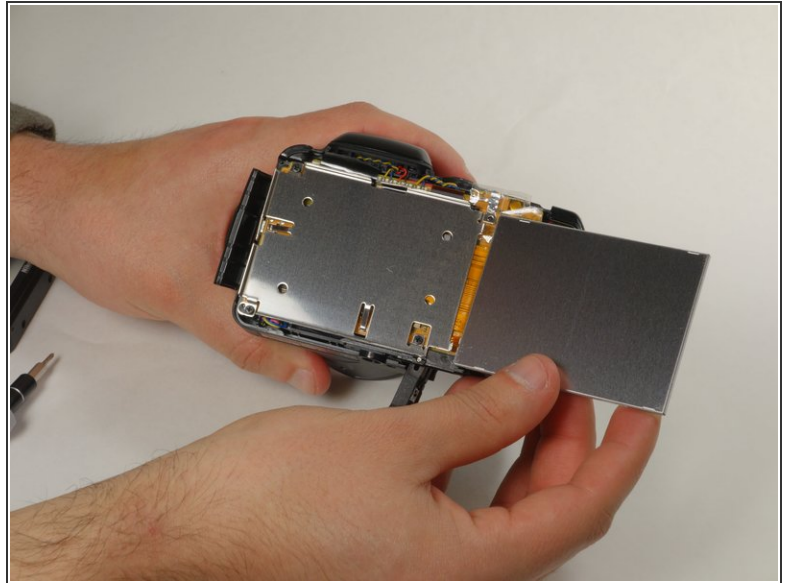

- With the LCD screen facing towards you, flip the screen to the right.



Step 6

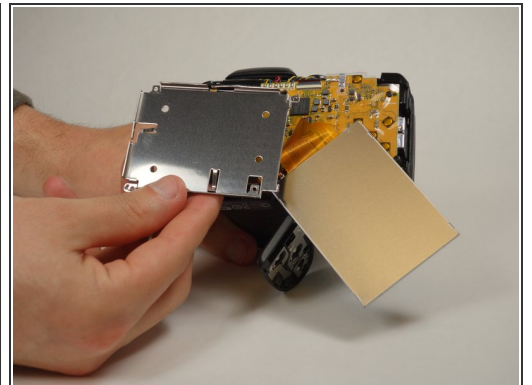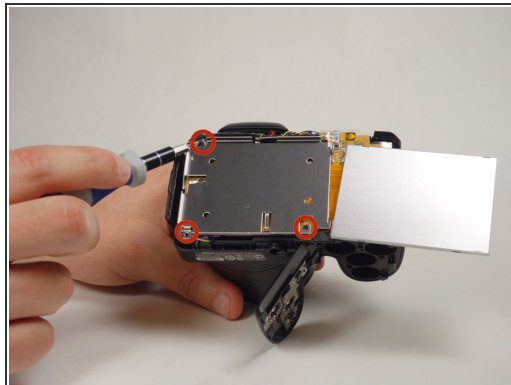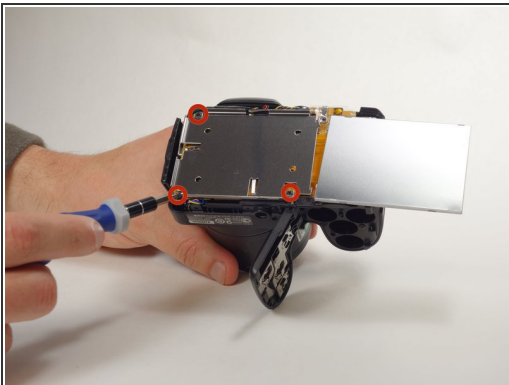

- Remove three 5 mm Phillips #000 screws located on the bracket.

⚠ Hold the camera with the lens facing downward to prevent the bracket from falling off once all screws are removed.

Step 7

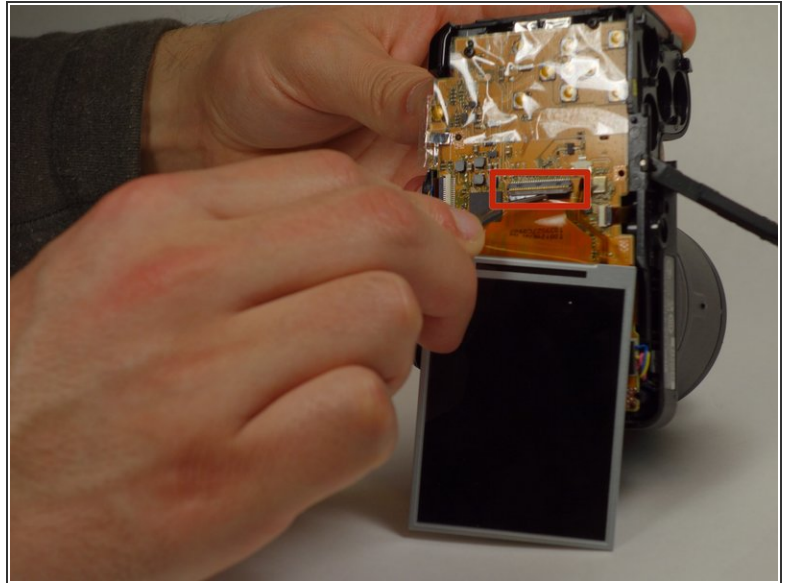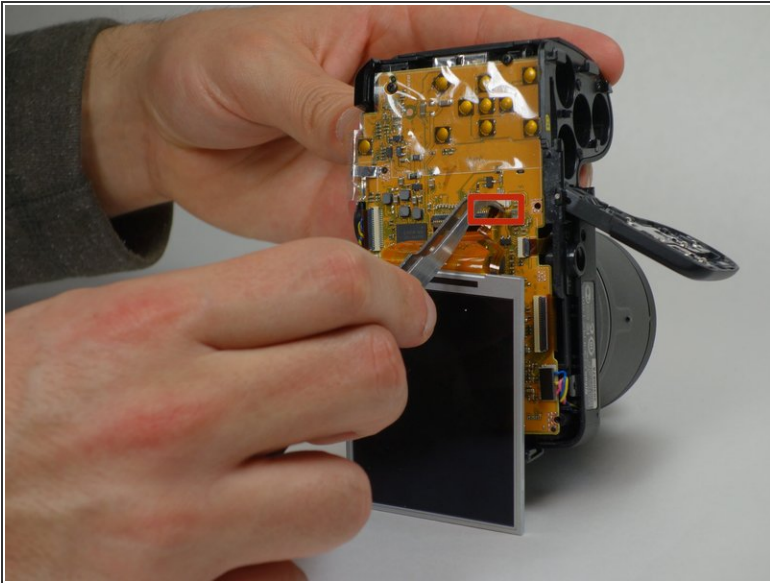

- Disconnect the ribbons that connect the LCD screen to the camera gently using precision tweezers or fingers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 09:38:03 PM.