



HP TouchSmart 15-r015dx Keyboard Replacement

This guide will show you how to replace your keyboard for your HP TouchSmart 15-r015dx.

Written By: Jacob Kleinsorge




INTRODUCTION

The HP TouchSmart 15-r015dx has a Cruus NSK-CN6SC keyboard.

TOOLS:



- [iFixit Opening Tool](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Keyboard

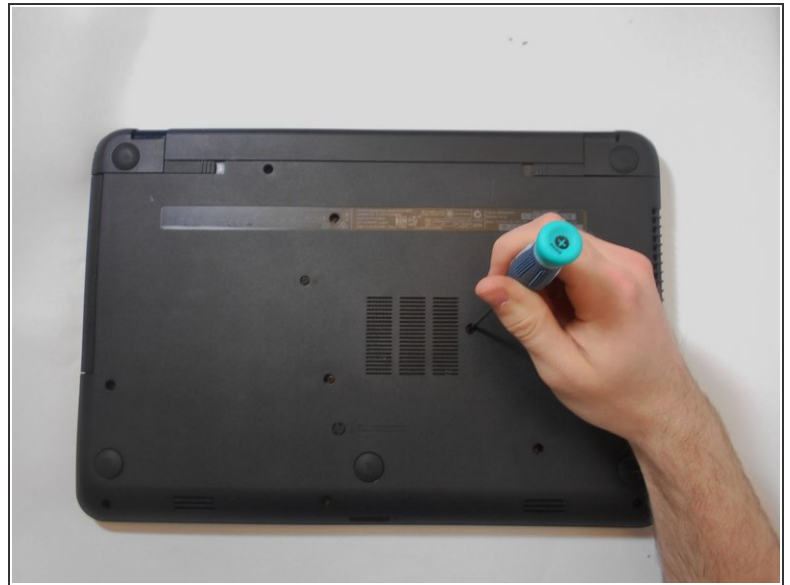


- Using your Phillips #00 screwdriver, remove the two screws to loosen the fittings of the keyboard.
- ⓘ One of the screws lies in the label.

Step 2

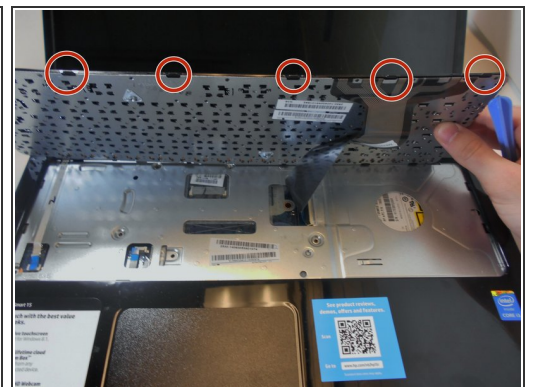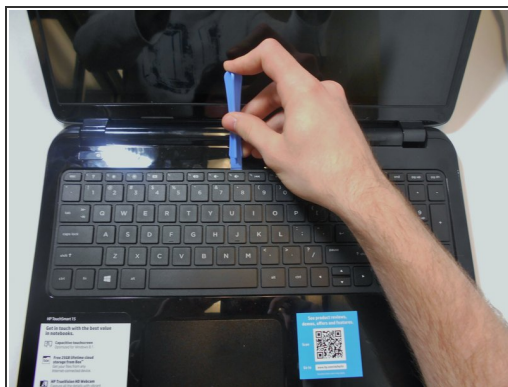

- Flip the laptop over to view the top and lift the screen up.
 - There are sixteen clips holding the keyboard in place. Gently pry up each clip using a plastic opening tool. Once all clips are loose, lift the keyboard from the computer.
- ⚠ Do NOT pull the keyboard up more than 2-3 inches as there is a film-material connecting the keyboard to the laptop.**

Step 3

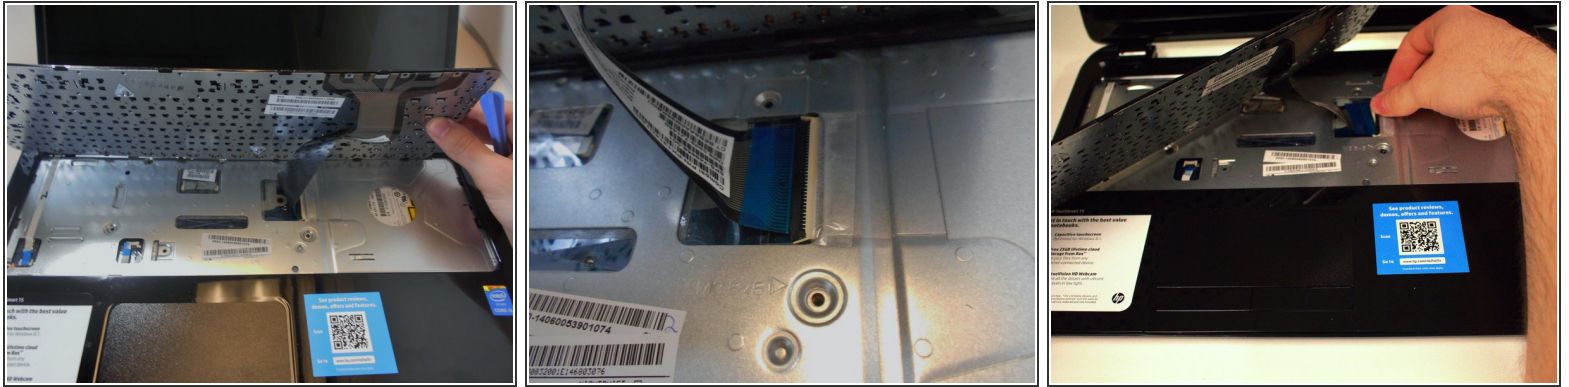

- i** There is a small black latch holding the film-material in place.
 - Flip the black latch up to release the film-material. Once flipped up, simply pull the film-material out from the laptop to release the keyboard.
- !** There are tiny prongs on the ribbon; it must be carefully removed and upon re-installation the prongs must be lined up exactly in each tiny track in order for the keyboard to work.

To reassemble your device, follow these instructions in reverse order.