



# Sony Alpha NEX-6 Battery Replacement

A concise guide upon how to remove the batteries from a Sony Alpha NEX-6 camera. This is a necessary pre-requisite for "all" guides. To insure safety, all sources of power should be removed while operating on the device.

Written By: Clayton Dale



---

## INTRODUCTION

This guide will show how to turn off the power for safety reasons, unlock the latch that conceals the battery compartment, and ejecting the battery for the Sony Alpha NEX-6

---

### **TOOLS:**

- [Spudger](#) (1)
-

## Step 1 — Battery



**⚠** Prior to operating on this device, be sure the camera is turned **OFF**. With power, the camera can be a dangerous device to work with.


- Turn the camera off by switching the power knob "OFF" text to the white selector dot.

## Step 2



- Flip the camera upside-down and carefully place it on a flat surface.
- With the lens facing outward, locate the battery compartment - indicated by a grooved latch.
- Push the latch to the right to unlock the battery compartment. The door should flip upward.

### Step 3

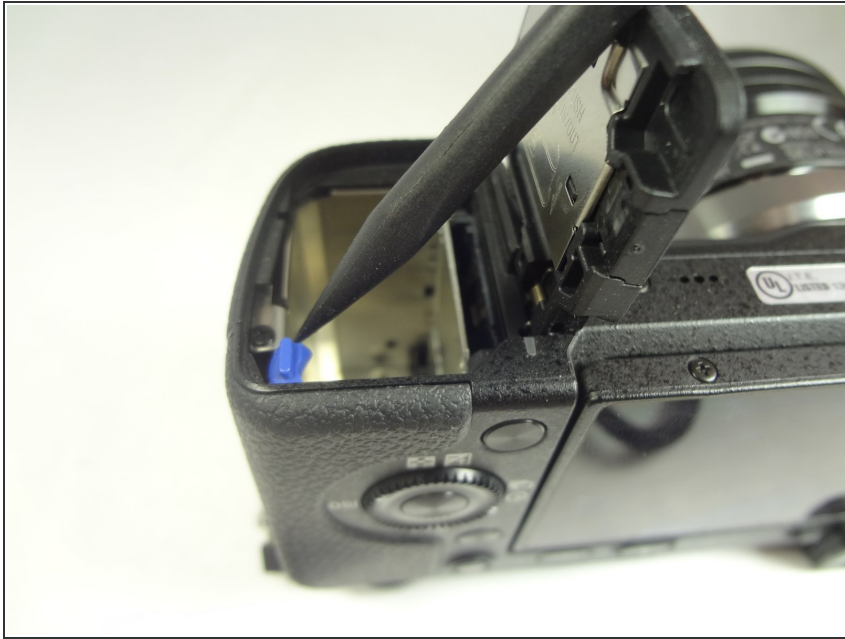

- With the compartment open, locate a blue tab shown with spudger
- Press the tab to the side (to the left, or toward the camera wall). This will eject the camera battery.

To reassemble your device, follow these instructions in reverse order.