



Nook Color Back Cover Replacement

Prerequisite Guide Only

Written By: Maria Delpilar



 **TOOLS:**


- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover



- Use the T5 Torx screwdriver to remove the two 3.8 mm screws located in the back right corner of the device.

Step 2

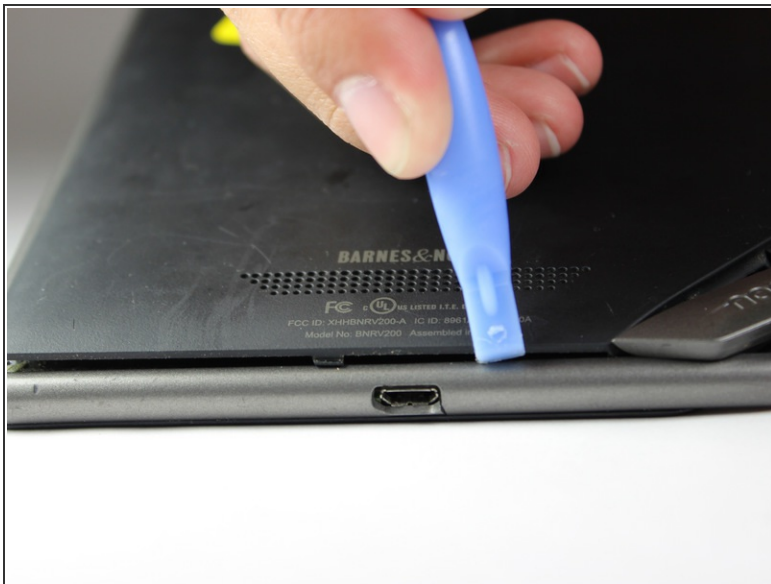

- Using a plastic opening tool, pry off the back cover by going around the device until the panel is completely detached.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:32:27 PM.