



# Audiovox CDM-8910 LCD Screen Replacement

This guide will instruct the reader on how to replace the LCD screen of the Audiovox CDM-8910.

Written By: Kevin Jafarey



---

## INTRODUCTION

The LCD screen is the main display of the Audiovox CDM-8910.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — LCD Screen




- With phone in the flipped-open position, use a spudger to remove the four (4) rubber pads (one shown in red circle) located near the corners of the face with the LCD screen.

## Step 2




- Use a small Phillips head screwdriver to remove the four (4) screws exposed by removed rubber pads.

### Step 3

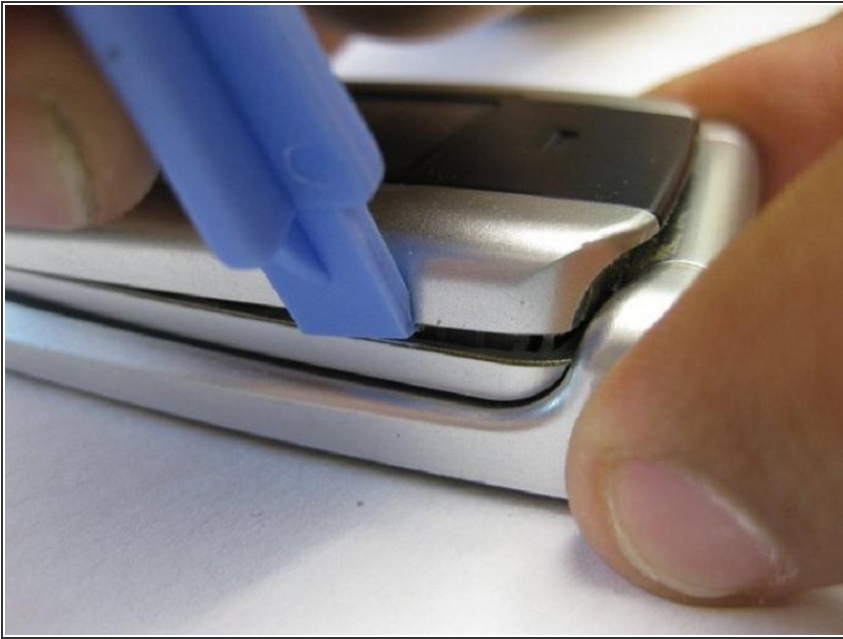


- Use a spudger to pry the front cover off of the phone, gradually working your way around the front face.

### Step 4

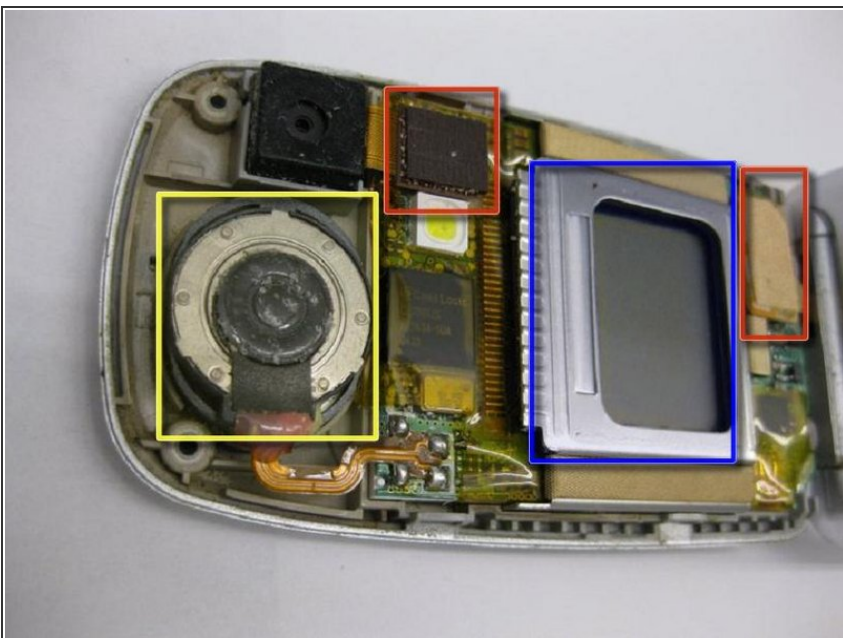


- Use a spudger to lift away and remove the metallic frame (in blue).
- Use the spudger to lift away the two electrical contacts (in red).
- Use the spudger to lift away the speaker (in yellow).

## Step 5

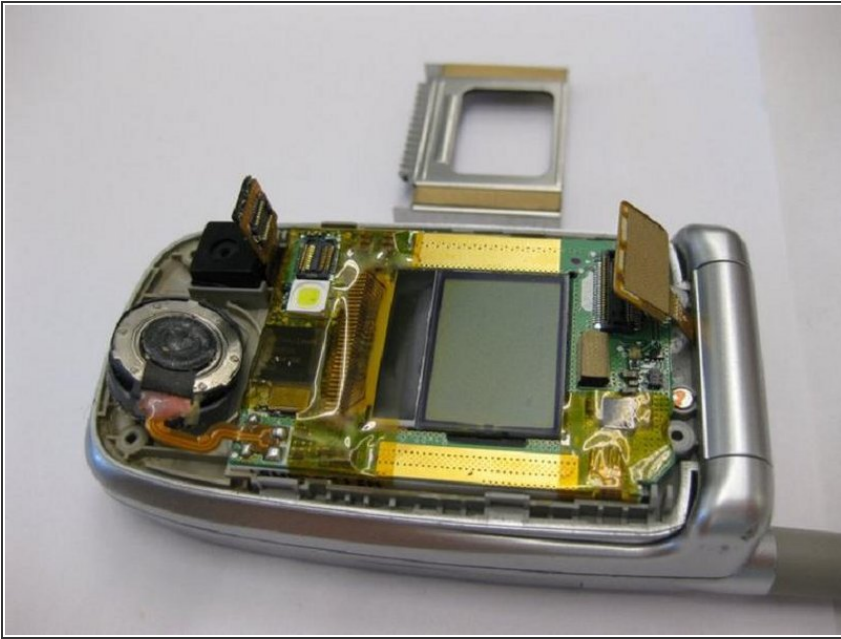

- This is what the rear of the LCD screen should look like before proceeding. Note all necessary connections are undone.

## Step 6

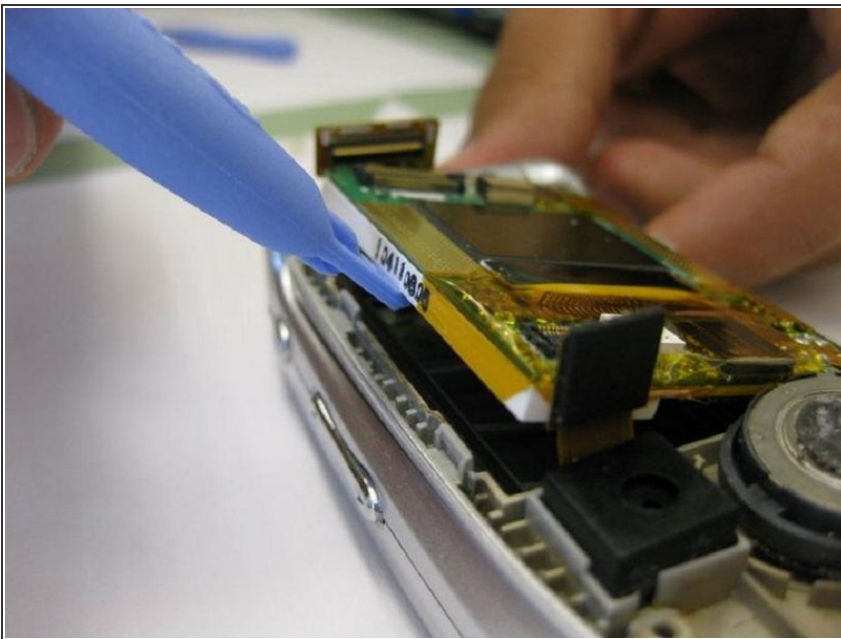

- Use a spudger to lift away the LCD screen.

## Step 7



- LCD screen successfully removed!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-22 06:22:22 PM.