



Audiovox CDM-8910 Battery Replacement

This guide will inform the reader how to access and replace/install the battery for the Audiovox CDM-8910

Written By: Sean Green



Step 1 — Battery



- Locate the back side of the phone.
- The battery is the large main compartment (red box).

Step 2



- Use your finger to slide the latch (circled) upwards.
- While holding the latch up, pull the battery off the phone.

Step 3



- The back of the phone will look like this when the battery is correctly removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-02 12:10:42 AM.