



Audiovox CDM-8910 Battery Replacement

This guide will inform the reader how to access and replace/install the battery for the Audiovox CDM-8910

Written By: Sean Green



Step 1 — Battery



- Locate the back side of the phone.
- The battery is the large main compartment (red box).

Step 2



- Use your finger to slide the latch (circled) upwards.
- While holding the latch up, pull the battery off the phone.

Step 3



- The back of the phone will look like this when the battery is correctly removed.

To reassemble your device, follow these instructions in reverse order.