



# Audiovox CDM-8910 Antenna Replacement

This guide will instruct the reader on replacing the antenna in the Audiovox CDM-8910.

Written By: Kevin Jafarey



## **INTRODUCTION**

The antenna allows the transmittal of signals necessary for the Audiovox CDM-8910 to function. Replacing a malfunctioning antenna is a simple process that could improve phone performance.

## Step 1 — Antenna



- Locate the antenna (shown in red box) at the top of the phone when closed.

## Step 2



- Using your thumb and index finger, grip the antenna near its base and unscrew counter clockwise. Once loose, remove the antenna by pulling it from its insert hole.

To reassemble your device, follow these instructions in reverse order.