



# Sony Cyber-shot DSC-W510 Battery Replacement

How to replace a battery for a Sony Cyber-shot DSC-W510.

Written By: kyle




## Step 1 — Battery




- Locate the battery gate and push the button to "open"

## Step 2

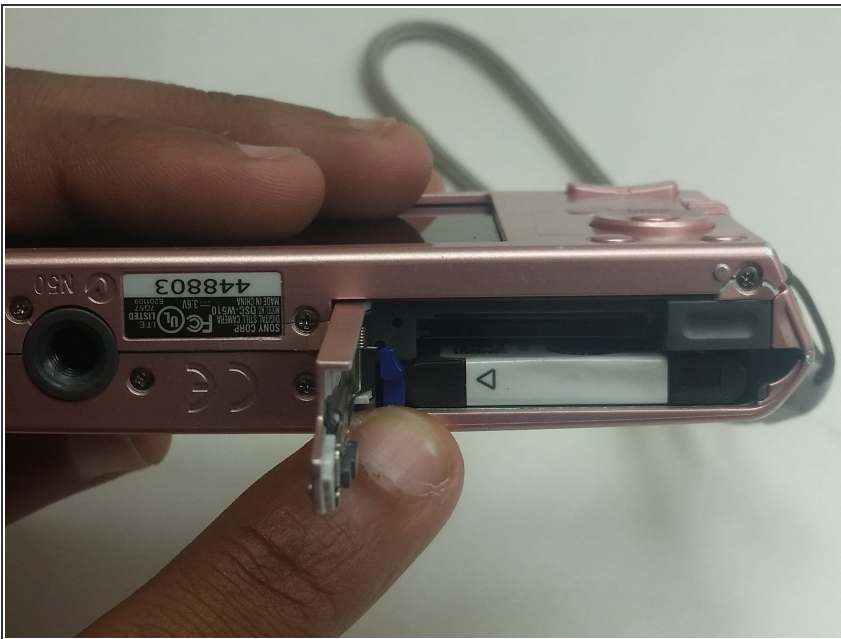

- Locate and pull the blue lever back to eject the battery.

### Step 3

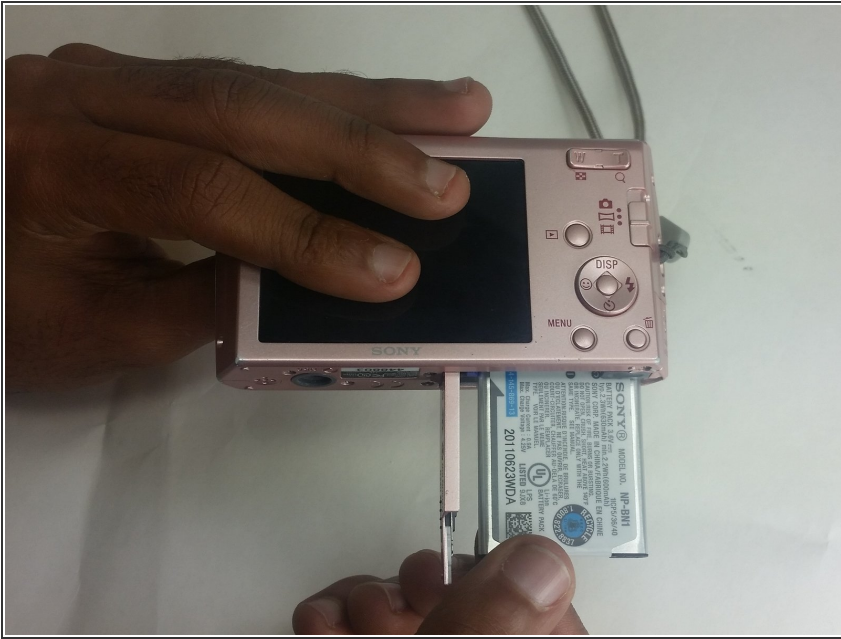

- Pull out the battery and replace the new battery.

To reassemble your device, follow these instructions in reverse order.