



Kodak EasyShare C913 Batteries Replacement

How to insert and remove batteries.

Written By: Dustin Rodgers



INTRODUCTION

Use this guide to replace batteries

Step 1 — Batteries



- Position the camera with the bottom facing up.
- With your finger, slide the battery cover in the direction of open arrow.
- The battery cover will spring open, so be careful to lift it up gently.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 09:32:47 AM.