



Kodak EasyShare C913 Back Case Replacement

How to remove and install the back case.

Written By: Dustin Rodgers



INTRODUCTION

Use this guide to remove the back case.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Batteries



- Position the camera with the bottom facing up.
- With your finger, slide the battery cover in the direction of open arrow.
- The battery cover will spring open, so be careful to lift it up gently.

Step 2 — Back Case



- Use a Phillips #00 screwdriver to remove the seven 4.5mm screws.
 - There are 2 on the left
 - There are 2 on the right
 - There are 3 on the bottom

Step 3



- Firmly grasp and pull back casing off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-18 02:34:59 PM.