




# Kodak EasyShare C913 Front Case Replacement

How to remove and install the front case.

Written By: Dustin Rodgers

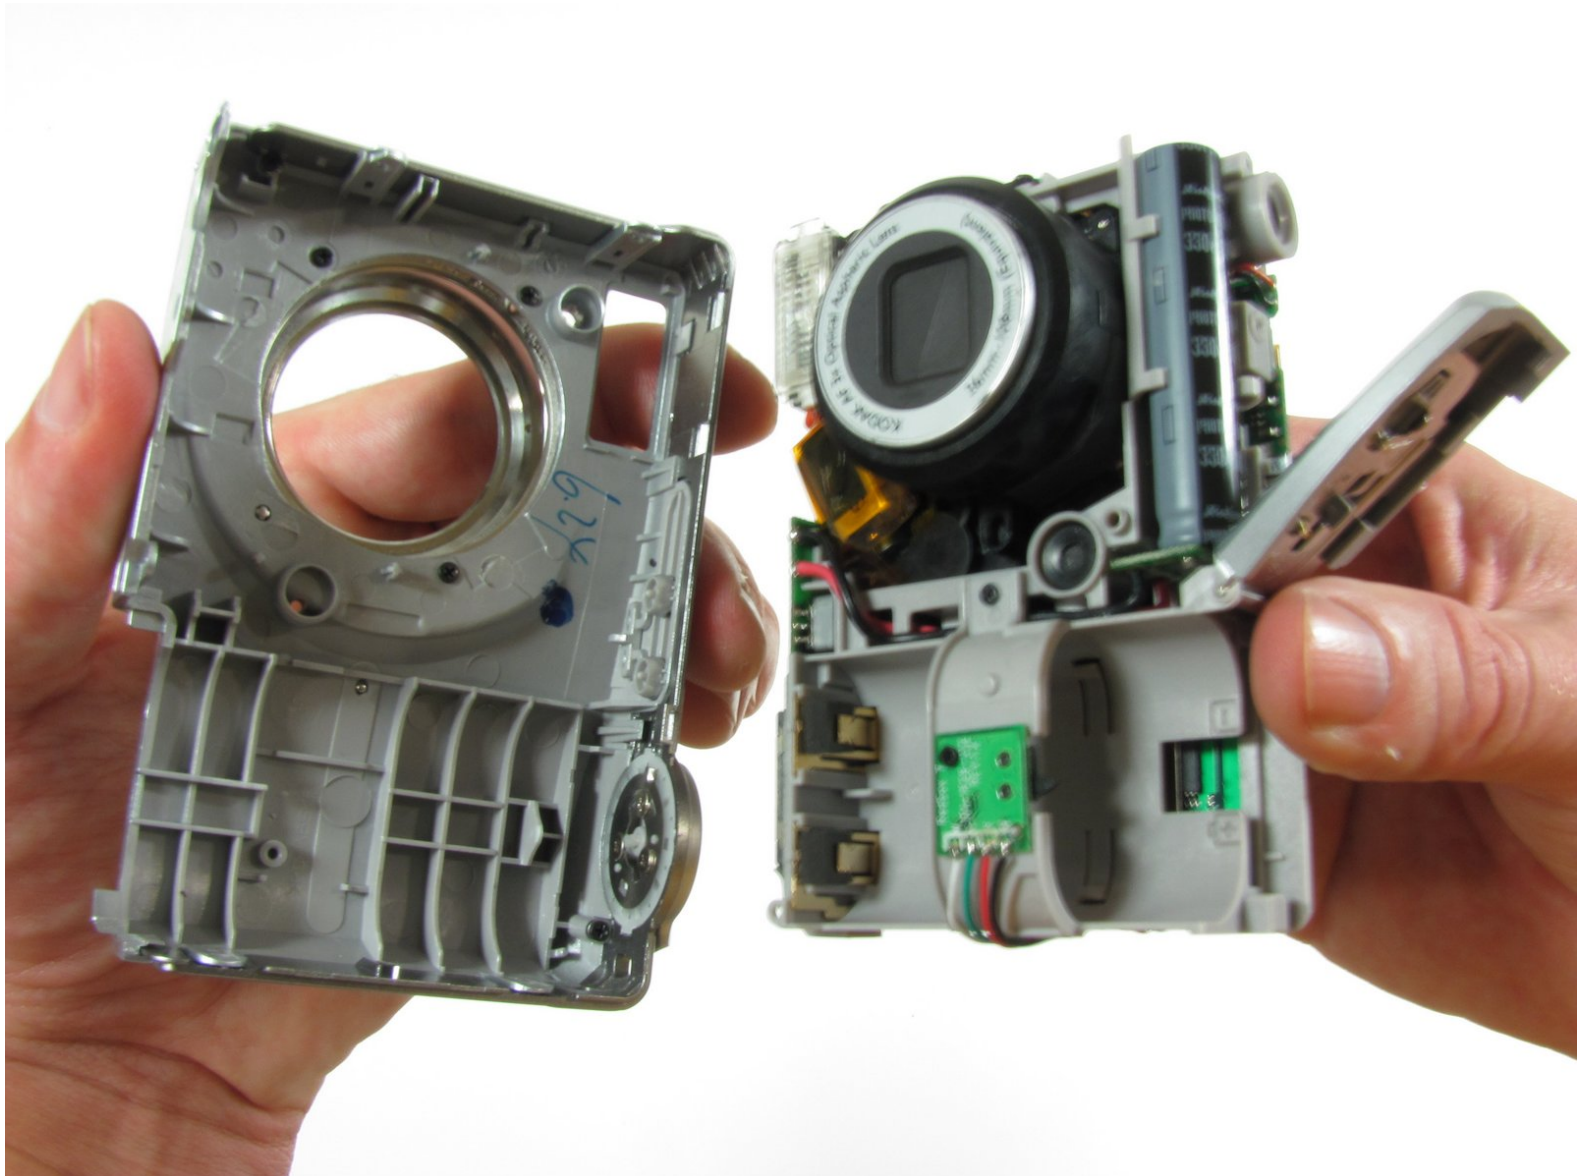

---

## INTRODUCTION

Use this guide to remove and install the front case.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Batteries



- Position the camera with the bottom facing up.
- With your finger, slide the battery cover in the direction of open arrow.
- The battery cover will spring open, so be careful to lift it up gently.

## Step 2 — Back Case




- Use a Phillips #00 screwdriver to remove the seven 4.5mm screws.
  - There are 2 on the left
  - There are 2 on the right
  - There are 3 on the bottom

### Step 3



- Firmly grasp and pull back casing off.

### Step 4 — Front Case

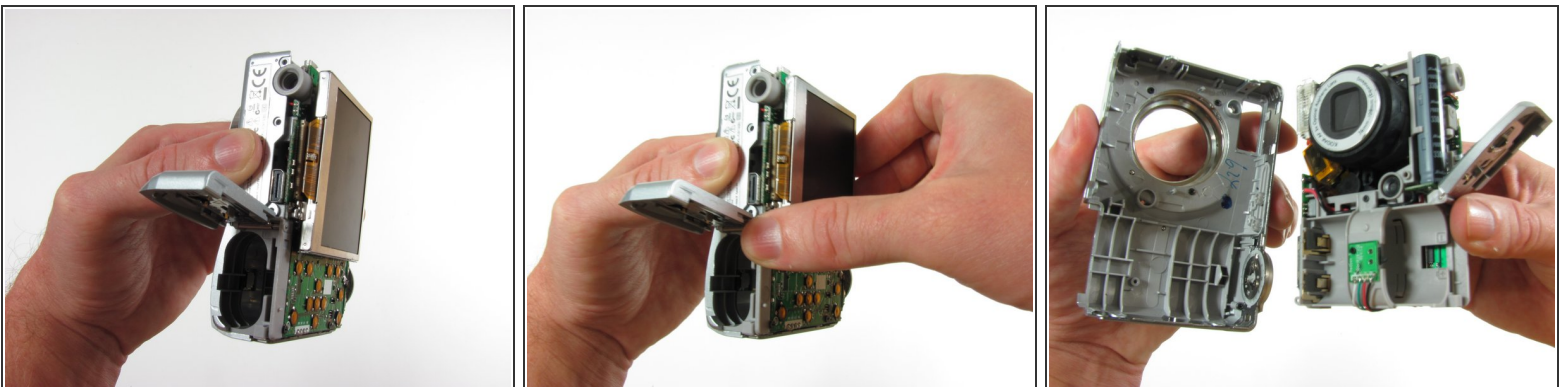

- With battery door open, grasp the front case and remove it from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-22 11:50:13 AM.