



Kindle 7th Generation Front Panel Replacement

Your frame is cracked or damaged so you need to replace it.


Written By: Abby Roulier



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
-

Step 1 — Front Panel

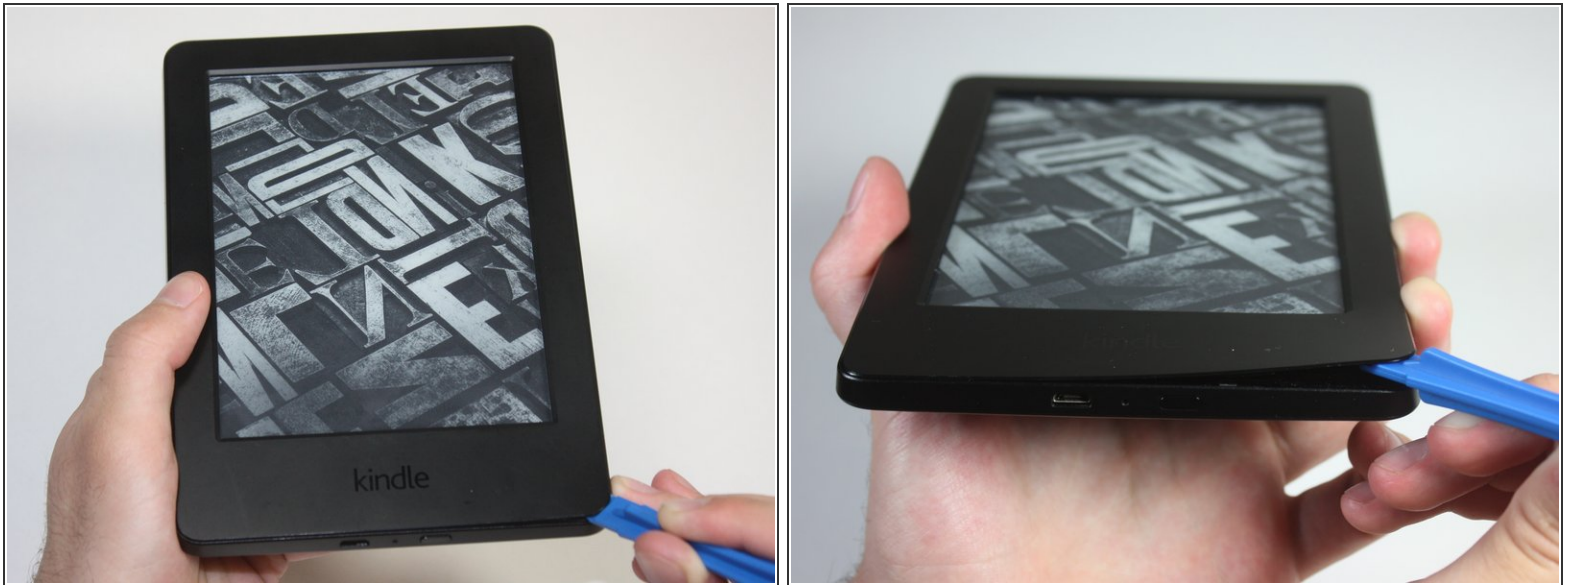

 Power off your Kindle before beginning disassembly.

- At each corner, use the blue plastic opening tool to unhook and separate the front panel from the adhesive.
- Run the tool along the seams to pry open the front panel.

Step 2



- Peel the front panel off to remove it from the Kindle.
- ⚠ If this is the first time the front panel has been removed, the adhesive may require a significant amount of force to undo.
- To prevent damaging the front panel, peel the panel from the corners towards the middle of the Kindle.
- ★ When reassembling your device, if you are replacing the front panel, additional adhesive may be required.

To reassemble your device, follow these instructions in reverse order.