



# Dell Optiplex SX280 Panel Cover Replacement

Remove the Panel Case

Written By: Wyatt



## **INTRODUCTION**

Remove the Panel Cover to access the components of the device.

## Step 1 — Panel Cover



- ⚠ Make sure the computer is turned off, by selecting the start menu and choosing “Shut Down”.
- ⚠ Ensure all cables, speakers and other devices are unplugged and turned off before opening the computer case.

## Step 2



- Lay the computer on its side; you will see a blue knob.
- Turn this knob 90 deg clockwise.

## Step 3



- Slide the panel case forward about 1/2 inch while knob is turned.
- Lift panel case off computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-08 05:43:13 PM.