



# Dell Optiplex SX280 RAM Replacement

RAM cards removed from computer.

Written By: Wyatt



## INTRODUCTION

Replace the old RAM cards to greatly enhance computer speed.

## Step 1 — Panel Cover



- ⚠ Make sure the computer is turned off, by selecting the start menu and choosing “Shut Down”.
- ⚠ Ensure all cables, speakers and other devices are unplugged and turned off before opening the computer case.

## Step 2



- Lay the computer on its side; you will see a blue knob.
- Turn this knob 90 deg clockwise.

### Step 3



- Slide the panel case forward about 1/2 inch while knob is turned.
- Lift panel case off computer.

### Step 4 — RAM



- The RAM are the two green cards in the corner of the computer.
- At each end of the card, there are two white clips securing the RAM to the Motherboard.

## Step 5



- Push down both white clips with your thumbs until you hear a click.
- The RAM cards can now be removed.

To reassemble your device, follow these instructions (steps 1-3) in reverse order.