



# Dell Optiplex SX280 Optical Drive Replacement

Optical Drive (CD, DVD)

Written By: Tom



---

## INTRODUCTION

Replace the Optical Drive in the computer tower to allow the Optiplex to read CD's and DVD's

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Optical Drive




- Position the tower with the Optical Drive facing upward.

## Step 2



- Remove the small black screw connecting the Optical Drive to the computer.

### Step 3

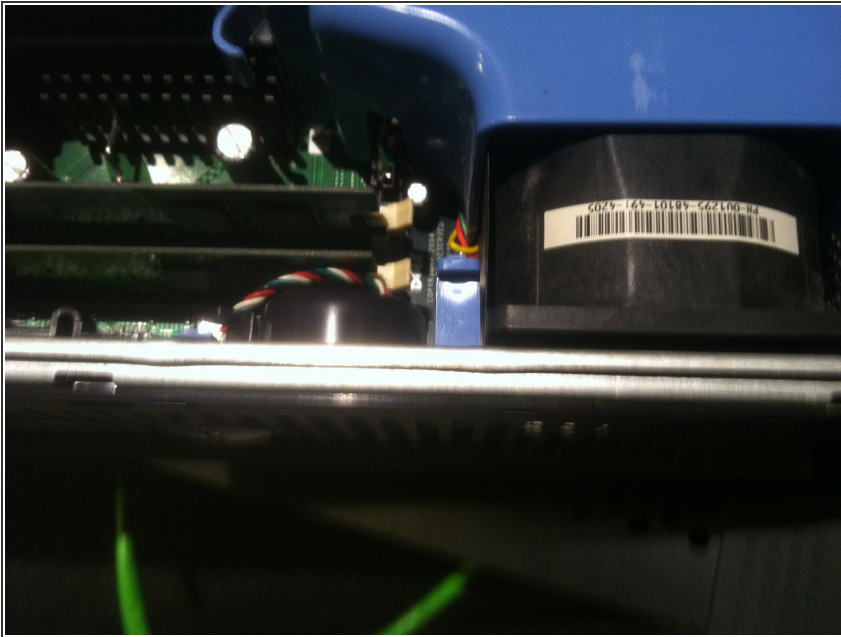

- There is a little blue tab you have to disengage, inside of the case, to be able to pull the DVD drive out. Simply pull it up to release the DVD.

### Step 4



- Press on the drive release button.

## Step 5



- Pull Optical Drive out of the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 12:27:28 AM.