



Canon PowerShot SD200 Battery Replacement

This guide will show how to remove the battery from the Canon PowerShot SD200.


Written By: James Loy



INTRODUCTION



The Canon PowerShot SD200 has a 3.7V Lithium-ion battery that requires it to be removed from the camera in order for it to be charged. This guide will show you how to remove the battery from the camera assembly.

Step 1 — Battery

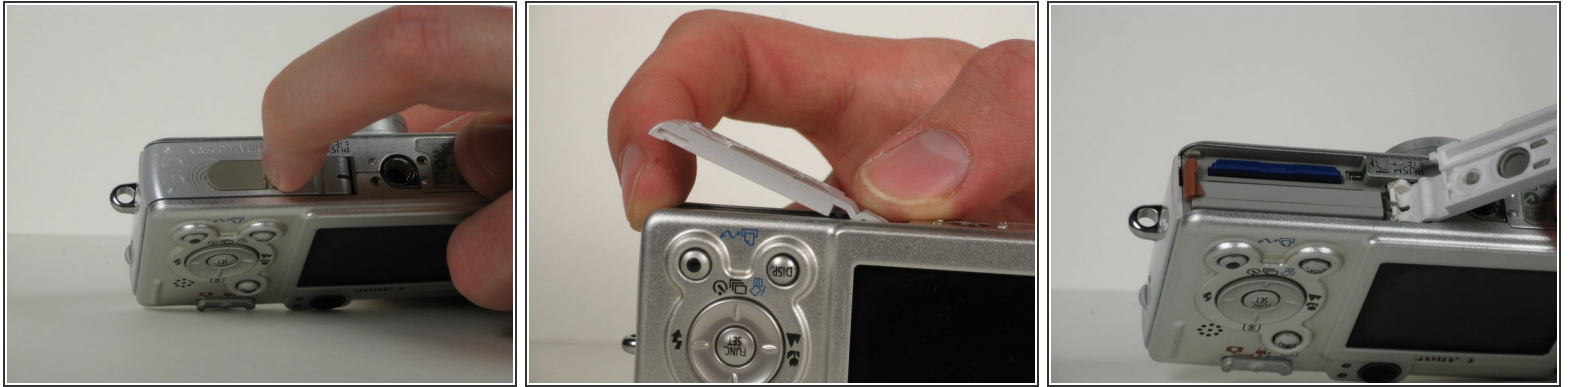

- i** The camera used to create these repair guides had a broken lens assembly. As a result, the lens is sticking out in all of the photos, but it is important to note that this should not be the case with your camera. The lens should retract itself back into the camera when it is turned off.
- Use your fingernail to slide the dark gray tab located on the bottom of the device towards the edge of camera.
- Slide the light gray door away from the LCD screen and pull up to open the door.
- i** Both battery and memory card should now be visible.

Step 2

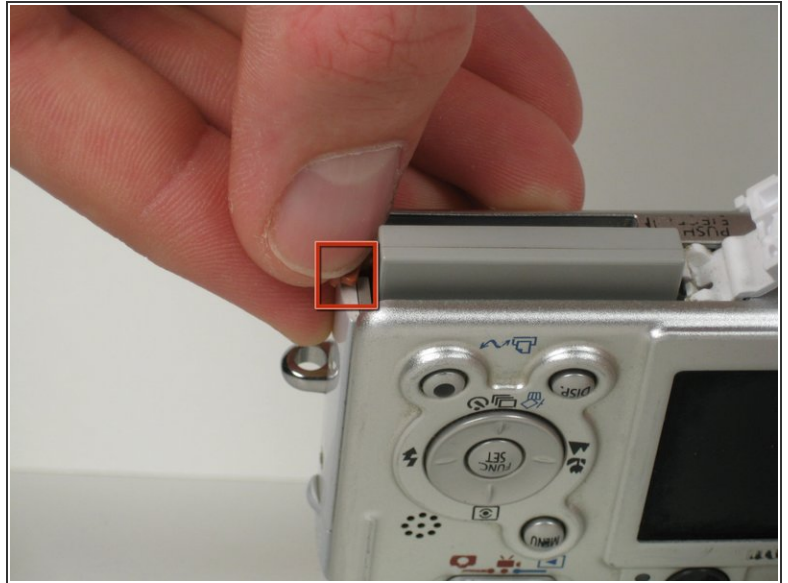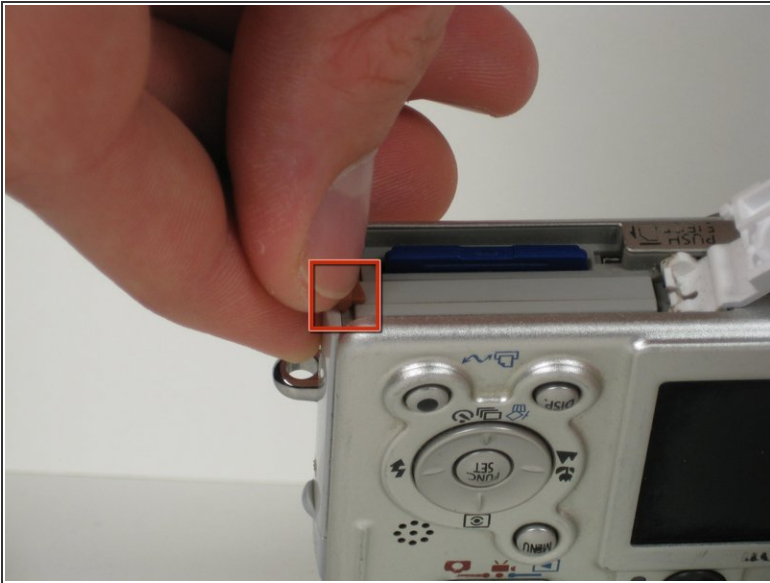

- Rotate the small brown tab towards the edge of the camera.
- The battery should pop up.

Step 3



- Pull the battery straight out of the battery holder.
- ☑ When putting the battery back in, make sure it is orientated the same as it was before.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 07:36:38 AM.