




# Canon PowerShot SD200 Memory Card Replacement

This guide will show how to remove the memory card from the Canon PowerShot SD200.


Written By: James Loy

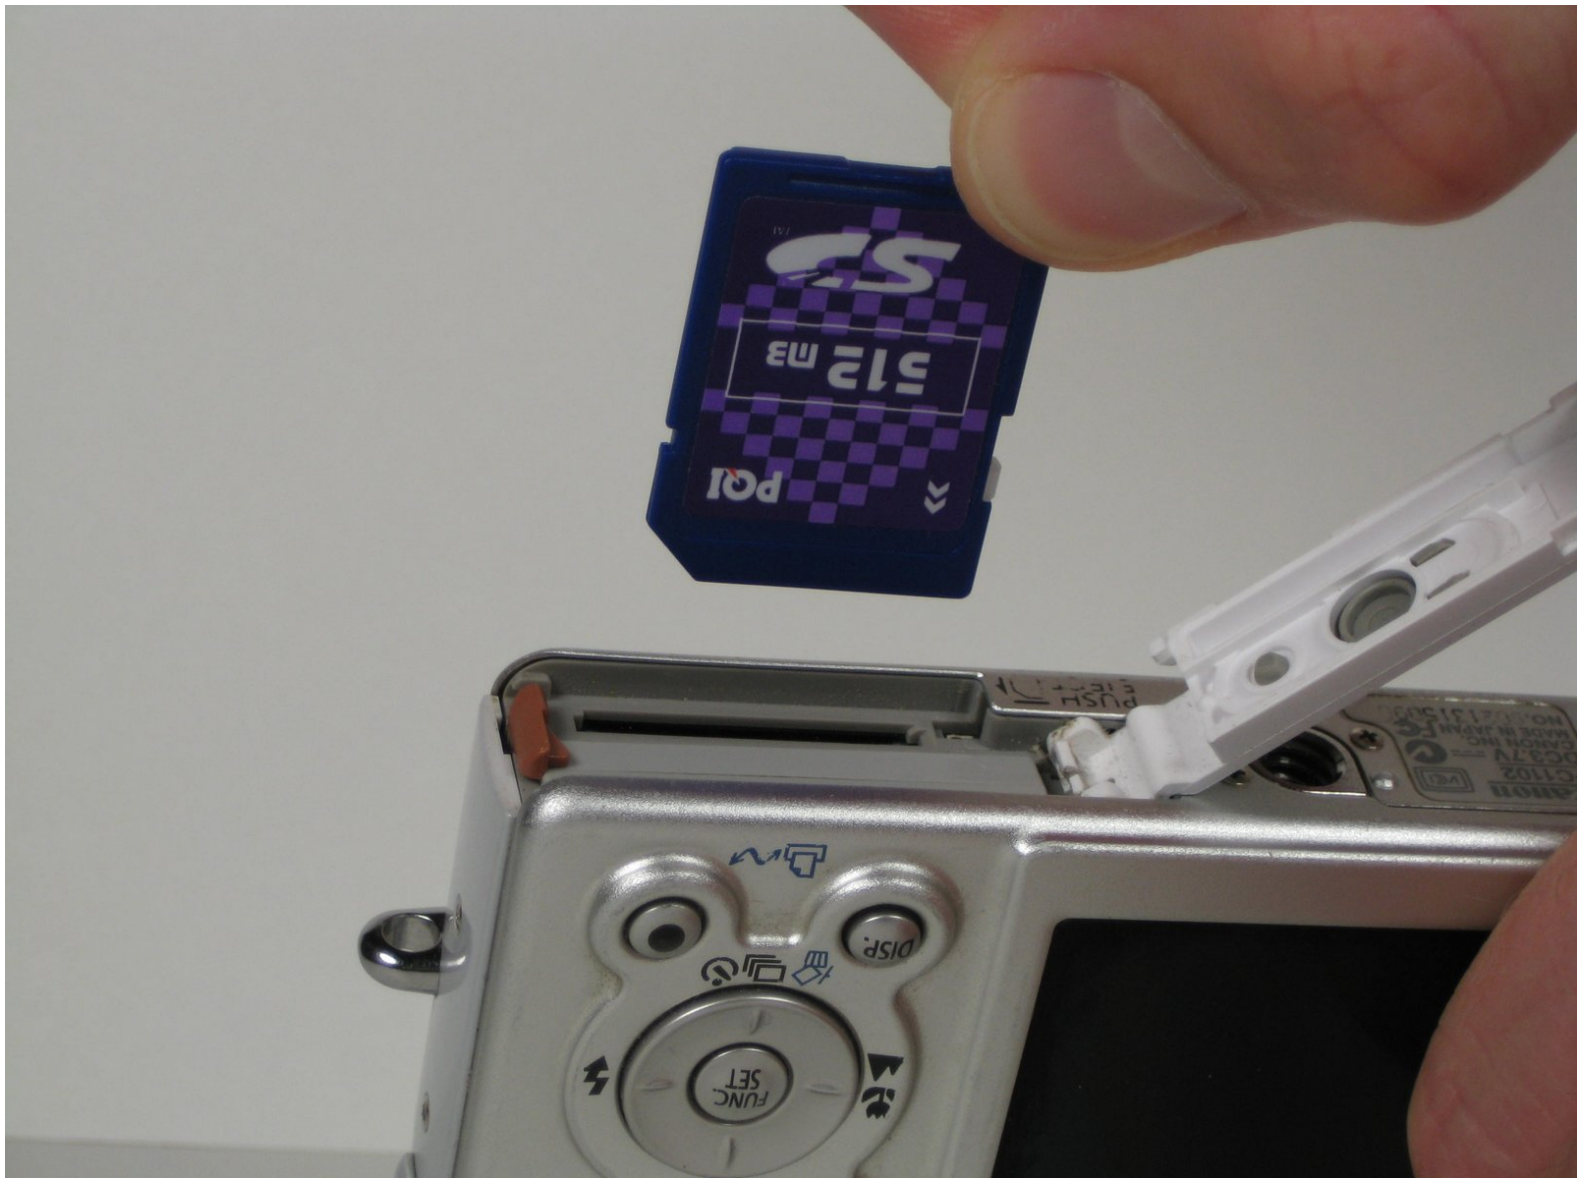

## INTRODUCTION


The Canon PowerShot SD200 has an opening for a SD Memory Card. Removing the memory card might be necessary to obtain pictures from the camera. This guide will show how to easily remove the memory card.

## Step 1 — Memory Card

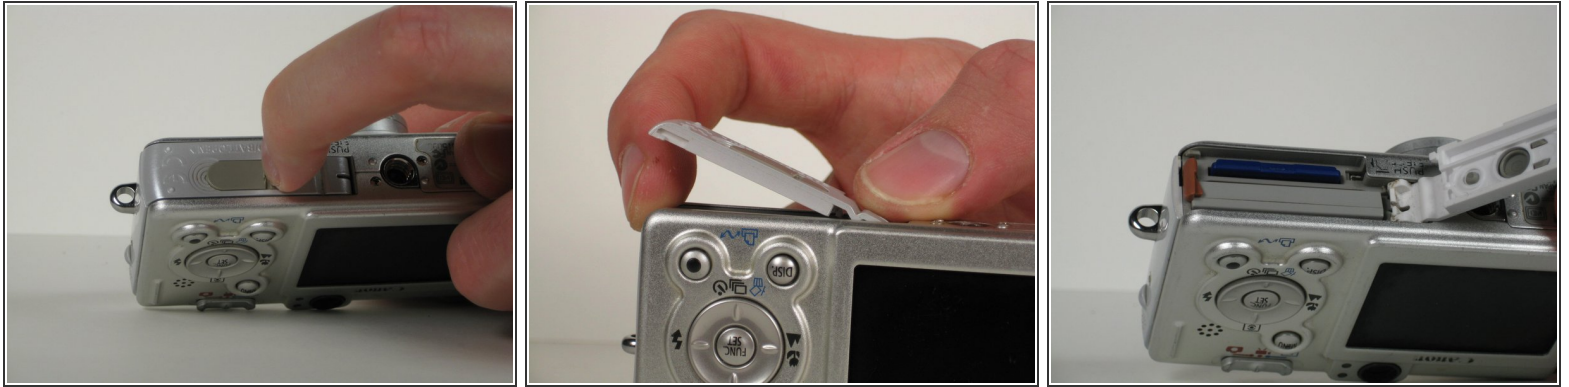

- Use your fingernail to slide the dark gray tab towards the edge of the camera.
- Slide the light gray door away from the LCD screen and pull up to open the door.
- ⓘ The battery and the memory card slots should now be visible.

## Step 2

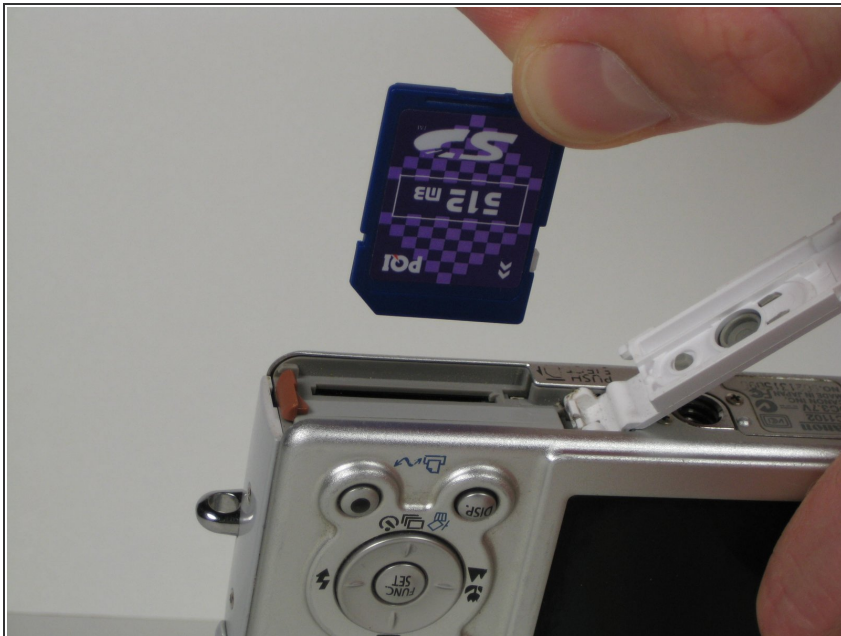

- Press down on the memory card.
- Memory card should pop out of place.
- Pull the memory card straight out of the slot.
- ★ When putting the memory card back in, orient the memory card in the same direction when pulling out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 01:57:32 AM.