



Linsay Model F-7HD2CORE Battery Replacement

This guide will show you how to replace your Linsay tablet's damaged battery.

Written By: Lindsay Byrnes




INTRODUCTION

After determining that your battery is permanently damaged or broken, you can replace it with a new one.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Soldering Workstation](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

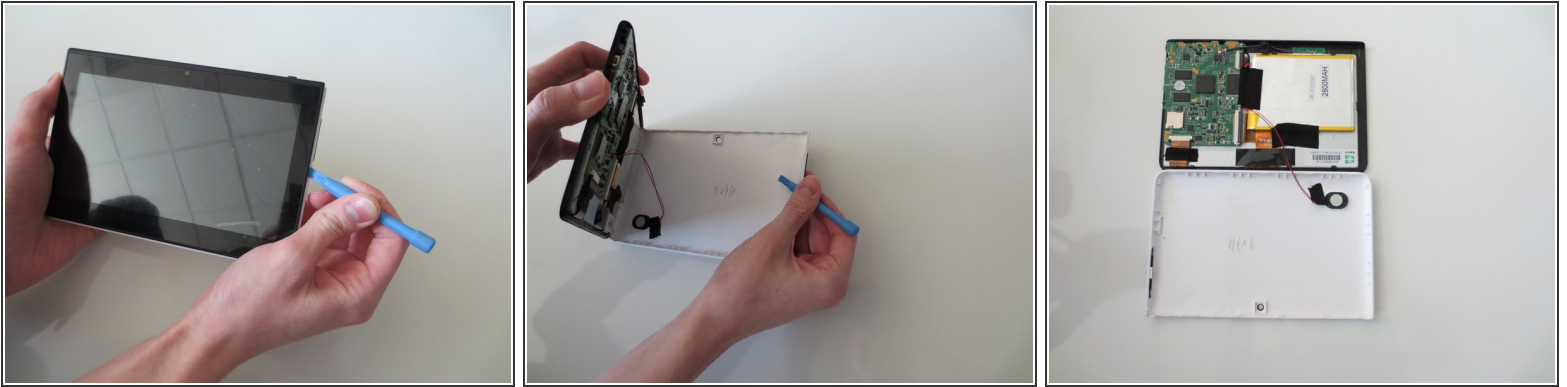

- Carefully insert your plastic opening tool in between the white and black sections of your device.
- Gently pry the top screen portion from the base of the tablet.
- Your tablet should now look like the third image.

Step 2

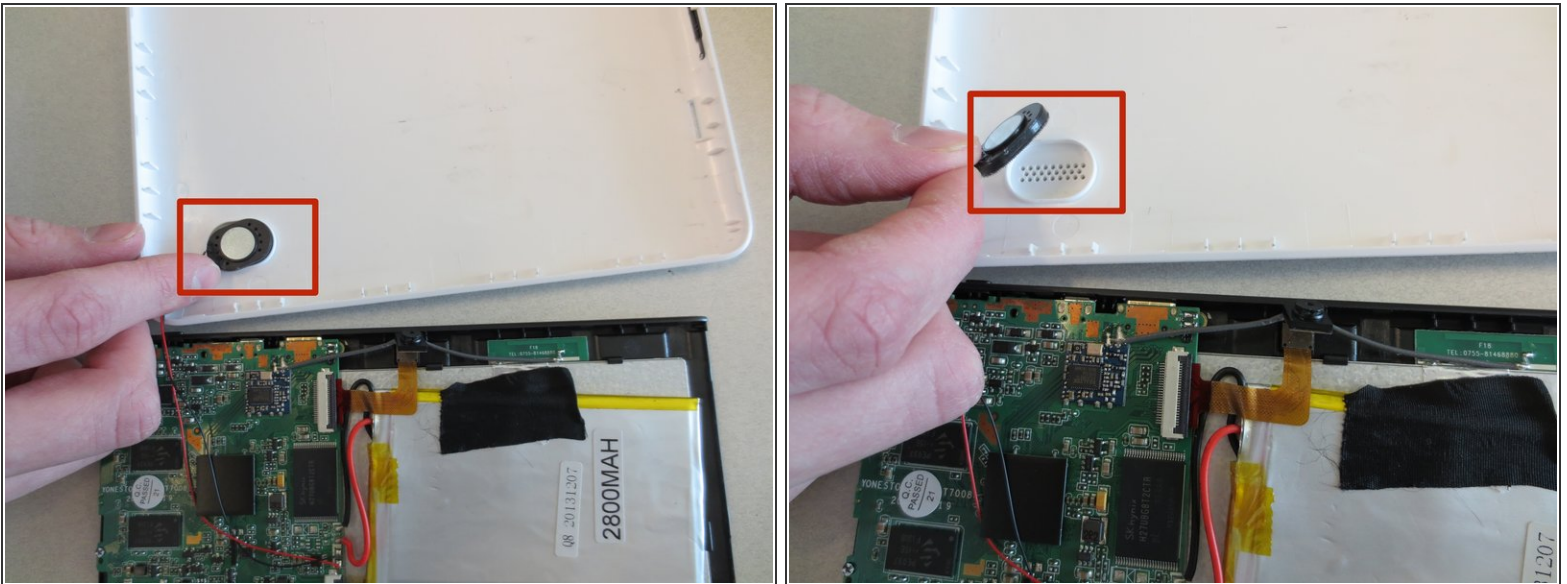


- To completely remove the base from the top of the tablet, peel the microphone from the back.

Step 3




- Remove the two pieces of tape holding the battery in place by gently peeling it off.

Step 4

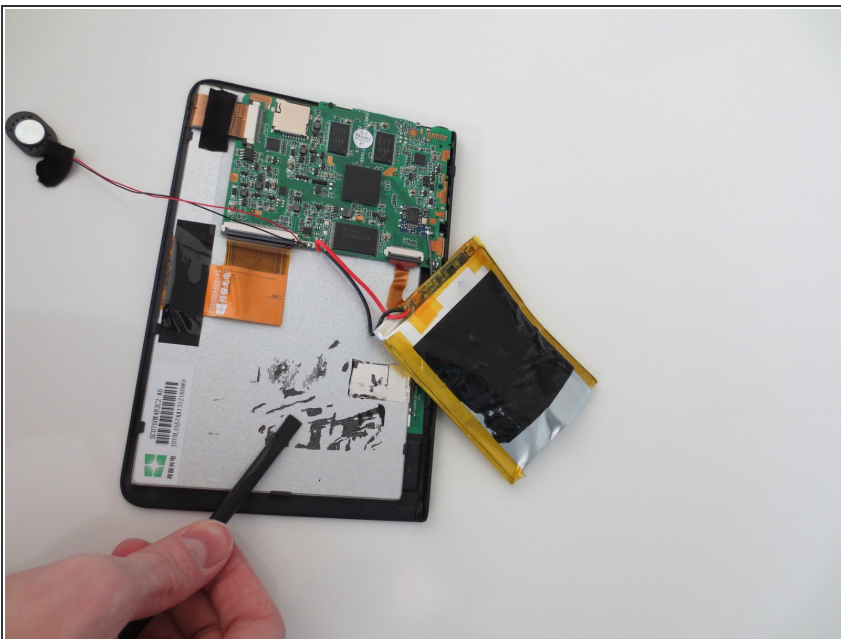

- Using the spudger, carefully peel the battery off of the tablet panel.
- ⓘ Tape of the back of the battery will be very strong, pull gently!
- ⚠ The metal exterior of the battery can be quite pliable. Use caution when removing the battery from the tablet.

Step 5

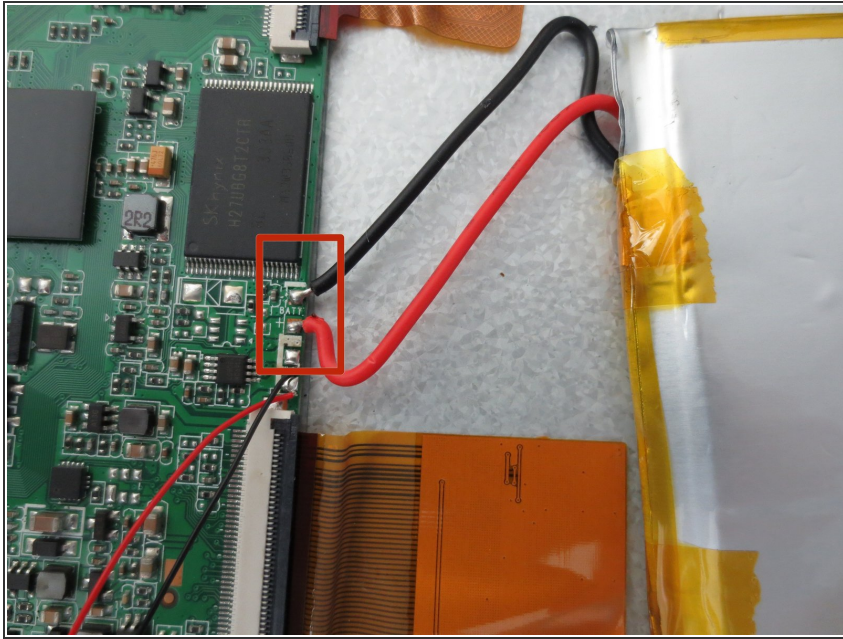

- To remove the battery, completely desolder the wires connected to the circuit board.
- ⓘ To reattach the new battery, you must solder the wires back on.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-23 07:47:56 AM.