



Sony Cyber-shot DSC-T1 Battery Replacement

How to replace your camera's battery.

 
Written By: iDeleted



INTRODUCTION


You will want to have Sony-Cyber-shot DSC-T1 handy to follow steps of replacing camera battery.

Step 1 — Battery

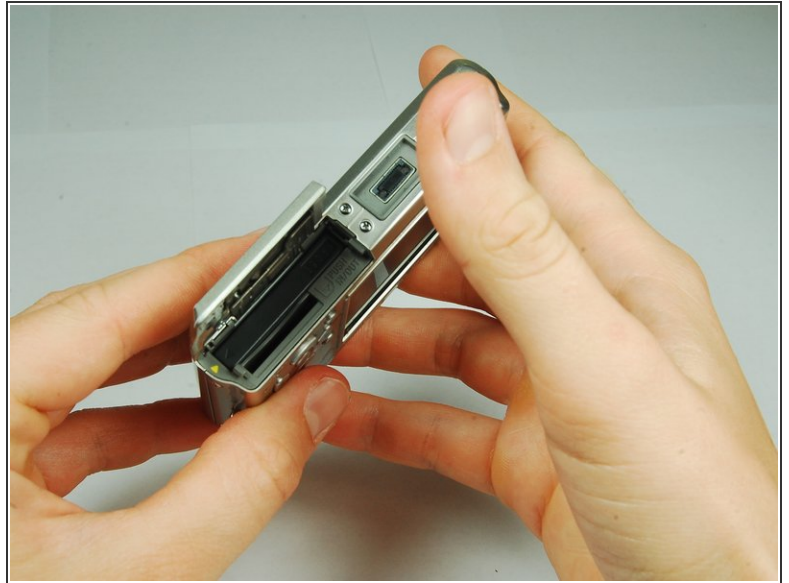

- Locate the battery door at the bottom of the camera.
- Press down on the door and slide it back. The door will pop open.

 Step 2

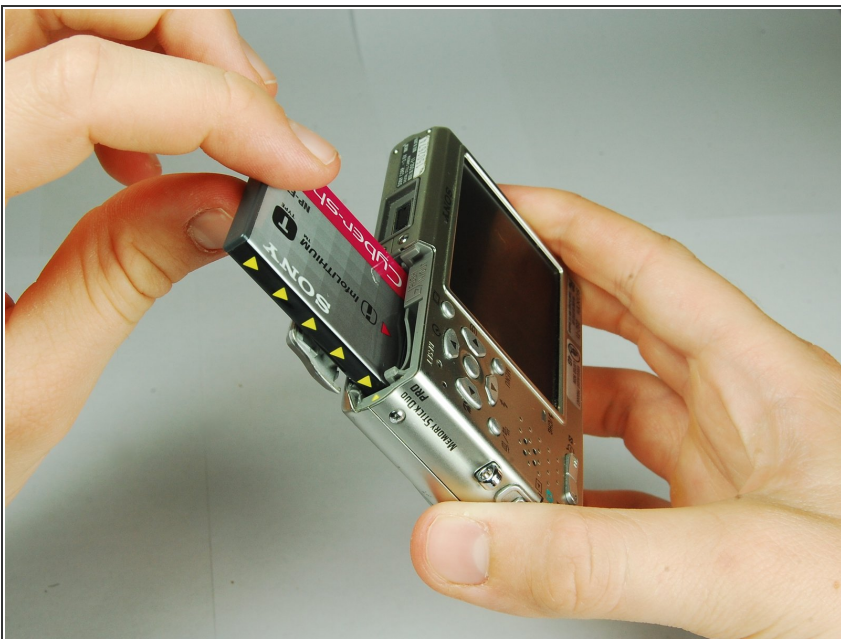

- Remove the battery from the door that you opened in the previous step.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 04:05:21 PM.