



iPod 4th Generation or Photo Hard Drive Replacement

Written By: iRobot



INTRODUCTION

Upgrade your storage with a new hard drive.



TOOLS:

- [iFixit Opening Tools](#) (1)



PARTS:

- [iPod 20 GB Hard Drive](#) (1)
- [iPod 40 GB Hard Drive](#) (1)

Step 1 — Rear Panel



- ⓘ Before opening your iPod, ensure that the hold switch is in the locked position. The orange bar should be visible, indicating hold is active.

Step 2




- Insert an opening pick as far as possible into the seam between the plastic front and the metal rear panel, on the right edge of the iPod.
- ⓘ You may need to rock the pick back and forth to slide it in farther.
- Use the opening pick to pry up against the plastic front panel and release five retaining tabs (seen in the third photo).
- Slide the pick along the edge of the iPod and continue prying to release the rest of the retaining tabs.
- After all five tabs along the right side are free, the case should easily open.

Step 3




- ⓘ The iPod case is now open, but don't separate the two halves just yet. There is still an orange ribbon cable connecting the headphone jack to the logic board.
- Open the case like a book with the dock connector edge at the top, and lay the rear panel next to the front half of the iPod.

Step 4

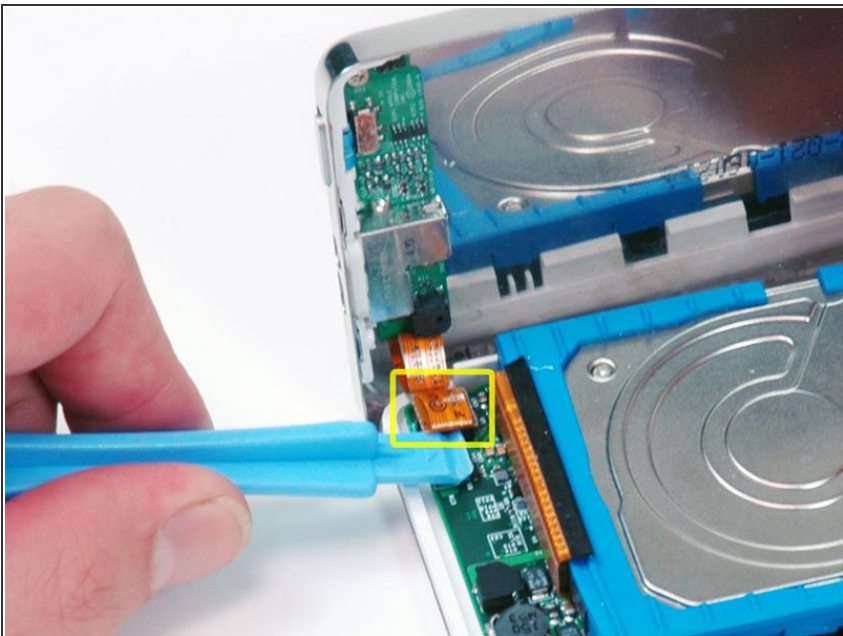

- Use a plastic tool or your fingernails to carefully disconnect the orange headphone jack cable. Be sure to pull straight up on the connector, not the cable itself.

Step 5 — Hard Drive

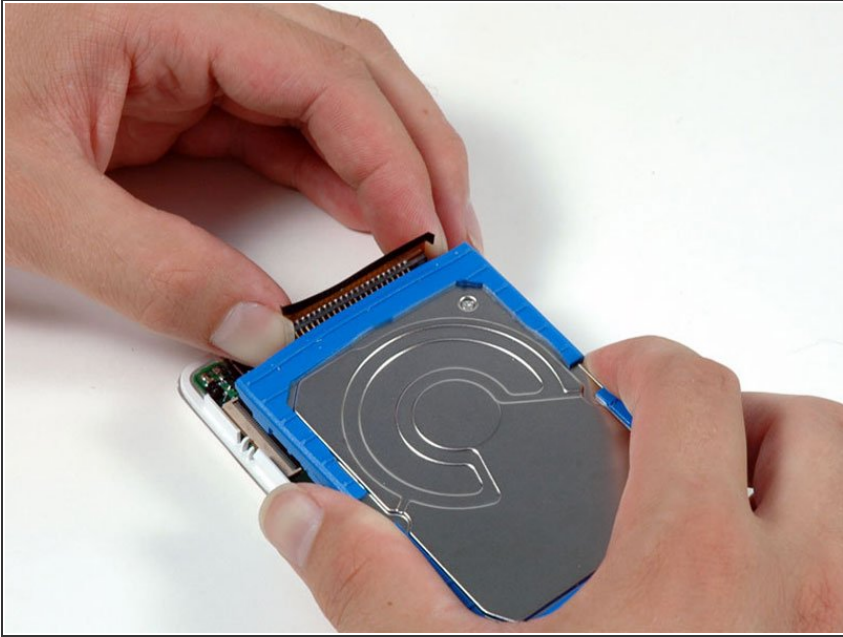

- Grasp the hard drive with one hand and carefully disconnect the orange ribbon cable from the hard drive using your other hand.
- ⓘ If the cable doesn't come free easily, it may be helpful to gently wiggle the cable from side to side.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 06:34:46 AM.