



Nokia 2610 Front Pannel Replacement

Written By: Andrew Wood



INTRODUCTION

This guide shows you how to replace a front panel for the phone.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery and Sim Card



- Place your thumb on the middle of the back cover and push it toward the bottom of the phone to slide the cover off.

Step 2



- Use a plastic opening tool (or your finger) to gently pry the battery out of the battery slot on the back of the phone.

Step 3



- Lift the metal sim card holder (at the bottom of the battery slot) up and carefully pry the sim card out of its slot with a plastic opening tool or your finger.
- After removal, lower the metal sim card holder into its original position.

Step 4 — Front Panel



- Insert the plastic opening tool into the crack between the front and back panels.
- Gently pry the front cover away from the back cover while sliding the plastic opening tool towards the top of the phone.

Step 5



- Lift the bottom of the front cover away from the phone.
 - Continue lifting until the top of the front cover is fully removed from the phone.
- i** Note: To replace the Keypad, gently lift it out of the front cover. It is located below the clear viewing window.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-18 08:38:14 PM.