



# Acer Aspire 5100 Hard Disk Drive Replacement

This guide will show you how to remove a hard disk drive and install a new one for a Acer Aspire 5100 laptop.

Written By: Brad Rollinson



## INTRODUCTION

This guide will show you how to remove a hard disk drive and install a new one for a Acer Aspire 5100 laptop.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)

### PARTS:

- [Replacement Hard Drive](#) (1)
-

## Step 1 — Hard Disk Drive




- Place laptop upside down.
- To get to the hard drive, remove the two screws located on the panel to the right of the battery.
- Although the battery is missing in this photo, it is not necessary to remove.

## Step 2



- Lift up the panel.

## Step 3

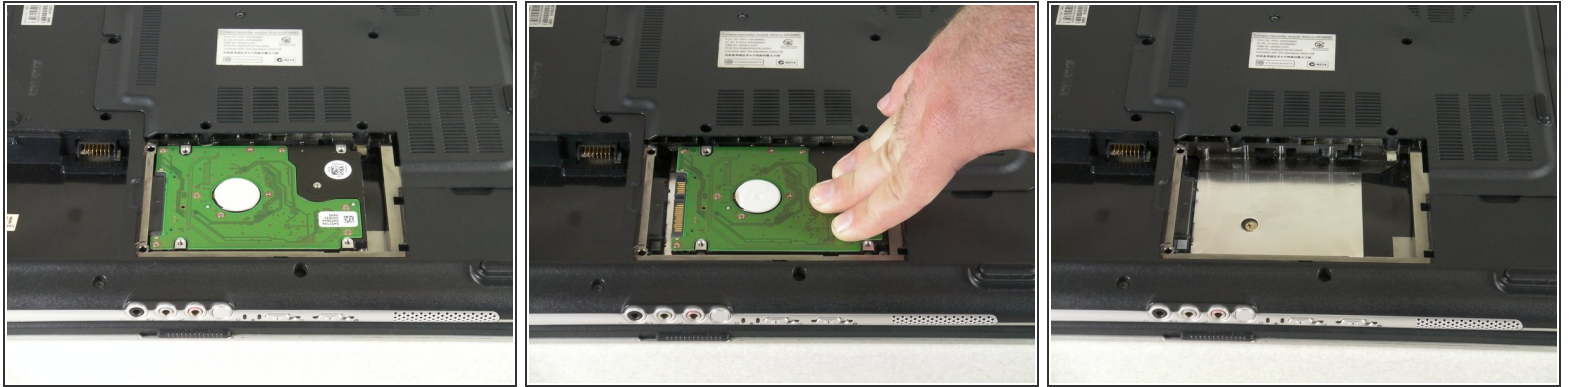

- Hard disk drive should now be visible.
- Slide the hard disk drive to the right to disconnect it from the laptop.
- Lift up and remove the hard disk drive.
- Slide in the new hard disk drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 02:15:50 PM.